

To view a video of the
Operating Instructions for the
sonicblend Please Visit:
www.sonicblendhowto.com

OPERATING INSTRUCTIONS

PREPARATION. Before using your product for the first time, charge the Brush Handle with the included Charging Cable for 3 hours. See CHARGING Instructions.

Attach the Brush Head to the Brush Handle by inserting it straight into the Brush Handle with the power "off," until the base of the Brush Head snaps into place. Make sure the Brush Head is securely affixed to the Brush Handle.

Pull your hair away from your face and secure with a hair tie. To begin, turn your sonicblend "on" by pressing down on the Power Button on the Brush Handle once.

There are 3 customizable speeds: Low, Medium and High. To change speeds, press the Power Button while your sonicblend is "on" and the speed will increase to the next higher speed. Note: Pressing the Power Button with the sonicblend in High speed, will shut it off. Simply press the Power Button to start again. Speed selection is a matter of personal preference. Select the speed that you feel most comfortable working with or that gives you the best finish.

There are two (2) ways to turn the sonicblend "off." (i) Press down on the Power Button for approximately 2 seconds. Your product will shut off and will remember the last speed you were using the next time you turn it on. (ii) A second way to turn off the sonicblend is to press the Power Button for 1 second while the product is in High speed.



APPLYING MAKEUP. The sonicblend is very versatile. It may be used with both liquid and powder makeup. It may also be used along the hairline.

To apply makeup, turn the power "on," and select desired speed (low, medium or high). Hold the sonicblend steadily by the ergonomic Brush Handle. For best results, keep the Brush Head in contact with the skin allowing the sonic technology in sonicblend to do the work with 1000's of micro blend movements per minute.

Start with a small amount of product. Your sonicblend provides better coverage so less is more. Apply makeup in thin layers. Build up coverage as needed by going over one area more than once. sonicblend will cover imperfections, remove excess product and meld the product with your skin, giving it a flawless natural looking finish.

Foundation: For Liquid foundation, pour or pump foundation onto the back of your hand or palette. With the power "off," dip the Brush Head into the product.

For Powder foundation, with the power "off," dab the Brush Head directly into the makeup. Tap off any excess product.

To finish foundation, lightly blend in small circular motions of the Brush Head all over your face, using any excess product to deal with problem areas. You may now go over your smile line area, which should only be covered with a small amount of product to reduce creasing.

Makeup: Remove foundation residue from the Brush Head and finish with any cream face products (blush, highlighter, contour, etc) and apply any other powder products (blush, bronzer, contour, finishing powder, etc) and blend well in small circular motions.

When you are done, remove remaining residue from the Brush Head with a tissue or clean soft cloth.

EXPERT TIPS:

- Go over your smile line area last, which will only be covered with a small amount of product, greatly reducing the chance of creasing.
- If you use foundation under your eyes or with concealer, take a bit of foundation on the outer edge of the brush and lightly sweep the Brush Head back and forth in short strokes and sweeping motions under the eyes concentrating the product at the lower inner corners where your under-eyes are darkest until you build up the coverage to the desired effect.
- For the jawline, lightly blend the foundation in long strokes and sweeping motions upwards to connect with the product on your face, and downwards slightly to fade it into your neck and where your ears connect to your face.
- To avoid getting makeup in your eyes, turn the power "off" to take the foundation applied under the eyes up and onto the eyelid and brow bone.

CHARGING and MAINTENANCE

CHARGING

1. sonicblend is powered by a rechargeable battery. Recharge the battery only as needed with the included Charging Cable. It is not necessary or recommended that the sonicblend be recharged after each use. Depending on the speed setting used, the fully charged sonicblend should provide 30-60 minutes of continuous use before needing to be recharged. Prior to initially using your sonicblend, it should be fully charged for 3 hours.
2. The sonicblend is rechargeable with the included Charging Cable. The small end of the Charging Cable plugs into the Brush Handle as shown. The larger USB end of the Charging Cable should be connected to a power source such as (i) a wall outlet using an appropriate USB AC/DC power adapter home wall plug (included) or (ii) a USB receptacle port on a host device that supplies power such as a computer. The Charging Cable is compatible with international and domestic wall outlets (100-240 Volts AC; 50/60 Hz) with the correct country plug adapter.



3. During charging, the Power Light on the Brush Handle will light up Red. When the sonicblend is fully charged the Power Light will change from Red to Green. Unplug the Charging Cable when not in use. DO NOT unplug the Charging Cable and leave it connected to the sonicblend as this will cause discharging of the battery.

4. With the Charging Cable disconnected, the sonicblend charged and the power "on", the Power Light will be Green until the sonicblend has about 20% or less power remaining at which time the Power light will turn Red.
5. Infrequent Use. The Brush Handle needs to receive a charge occasionally. If you rarely use the sonicblend, recharge it every 3 months to maintain its charging capability.

MAINTENANCE

1. Brush Handle. The Brush Handle can be cleaned with a dry soft clean cloth to remove any dirt or residue buildup. **DO NOT** use abrasive cleaners or chemicals to clean the Brush Handle. Do not disassemble, heat above 60° C (140° F) or incinerate. Do not expose the Brush Handle to rain, moisture, dripping or splashing.
2. Brush head. We recommend cleansing the hair of the Brush Head at least once a week to remove old makeup, dirt and debris and keep the Brush Head clean soft. To cleanse the Brush Head, with the power "off" remove the Brush Head from the Brush handle by pulling up on the base just below the hair on the Brush Head. **DO NOT** pull on the hair itself.

The Brush Head can be cleaned with a commercial brand makeup brush cleaner following the directions that come with the cleaner. Alternatively, you can cleanse the Brush Head with a mild soap, dish detergent or shampoo using lukewarm water.

After cleansing, rinse the Brush Head thoroughly in lukewarm (not hot or cold) water. Make sure all the residue is removed. Gently squeeze out any excess water from the hair and lay the Brush Head flat on a clean towel and allow to air dry for at least 6 to 8 hours.

3. Heavily Embedded Makeup. To remove heavy makeup residue pour a small amount of olive oil onto a clean paper towel and swirl the hair (dry) onto the towel. **DO NOT** soak the hair with oil. Just use enough to help break down the makeup on the hair. Then cleanse the Brush Head as directed in paragraph 2.
4. We recommend that you regularly clean the Brush Head as directed and not share the Brush Head for sanitary reasons. Each user should have their own Brush Head.
5. Charging Cable. Clean the Charging Cable by wiping with a soft damp cloth. **DO NOT** immerse the Charging Cable in water. Unplug the Charging Cable before cleaning it.
6. Storage. When not in use for prolonged periods, store your sonicblend in a dry place at a temperature between 32°F and 140°F (0°C to 60°C).
7. Your sonicblend does not require any other regular maintenance. If the device is not working properly, discontinue use and contact Customer Service at customerservice@michaeltoddbeauty.com or call (772) 800-7654.