 
 


Lotus · Maestro Serie

- Maestro 152
- Maestro 173
- Maestro 1
- Maestro 2

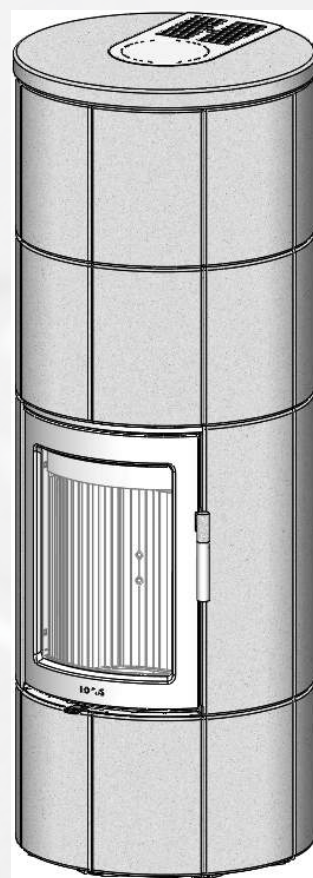 


05066

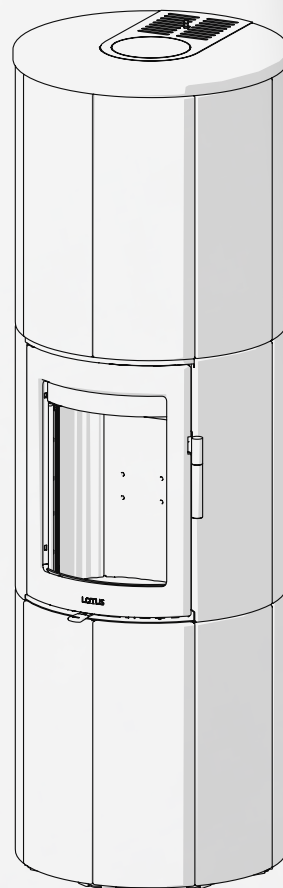


Version 2 09.05.2018

1

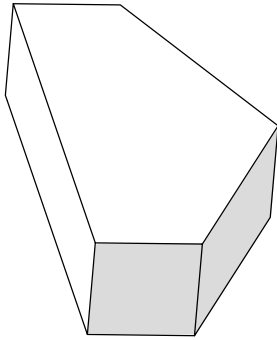


14x 01-514 Maestro 152
18x 01-514 Maestro 173
6x 01-514 Maestro 1
10x 01-514 Maestro 2

 2



7x 01-214

 3

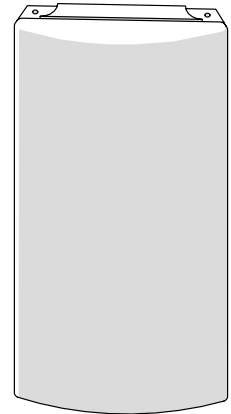


14x 01-502 Maestro 152
14x 05-0020 Maestro 173
14x 01-504 Maestro 1
22x 01-504 Maestro 2

4



19x 01-528
27x 01-528 Maestro 2

 5




2x B-360308

6




1x 05-0105

 7




2x B-360506

 8

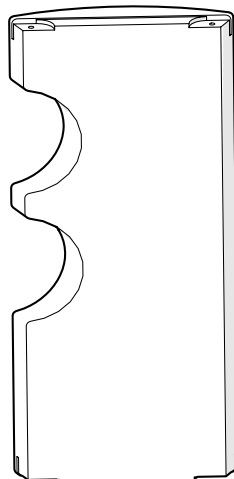


1x 05-0161 Maestro 152
1x 05-0022 Maestro 173
1x 01-506 Maestro 1 + 2

 9

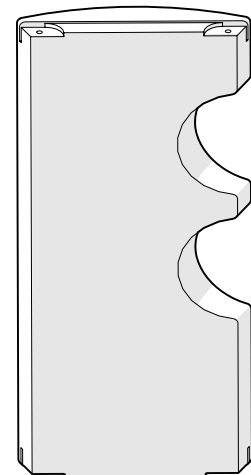


1x 05-0162 Maestro 152
1x 05-0022 Maestro 173
1x 01-506 Maestro 1 + 2

 10

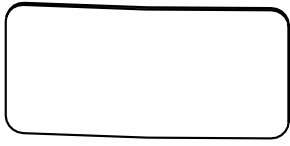


2x 01-246

 11

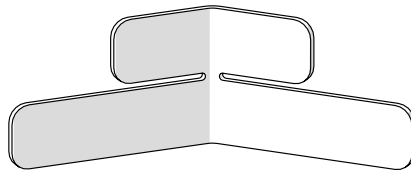


10x 01-206
18x 01-206 Maestro 2

 12

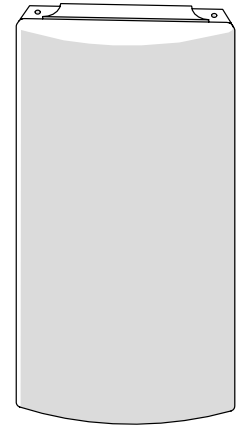


6x 05-0020

 13



1x 01-210

 14




1x 01-212

15




1x 05017

 16




4x B-340810

 17




8x 01-208

 18

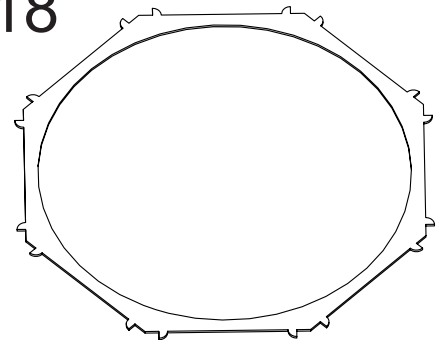


1x 01-132

 19

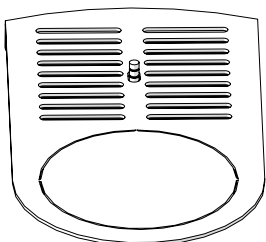


1x 05008 Maestro 152 - 173
1x 05075 Maestro 1 - 2

 20

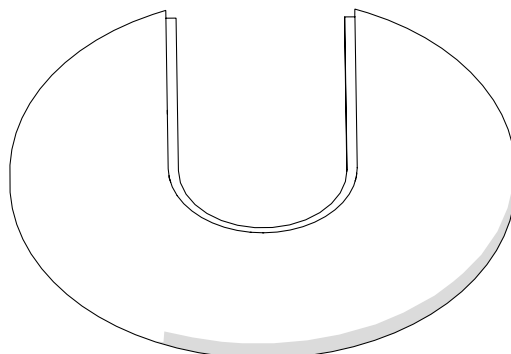

1x 05-0023 Maestro 152 - 173
1x 05-0165 Maestro 1 - 2

 21

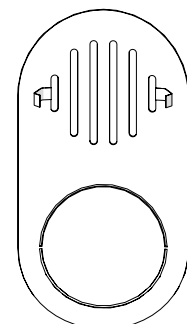

1x 05042

