 


GUI DE

usage • instructions

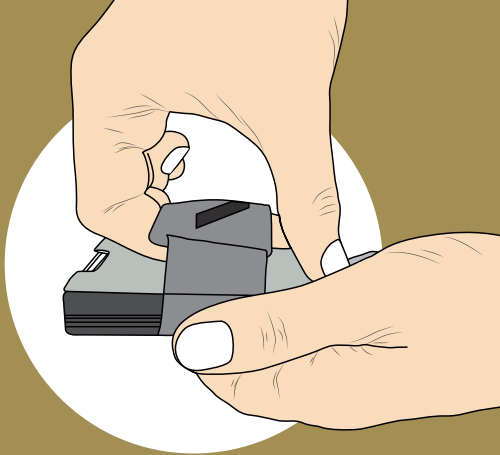 


1


STRETCH
ELASTIC BAND




For the first use of the AVIATOR Wallet, **stretch the elastic band** once by lifting the strap on the back of the wallet **from the plate upwards**.

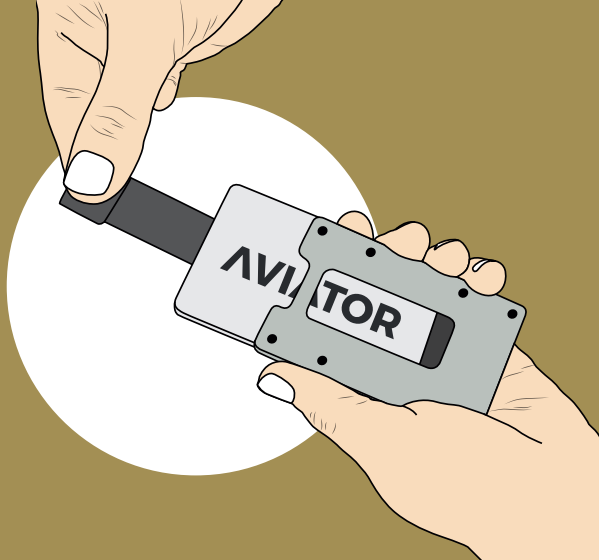


2 USAGE
PULL STRAP

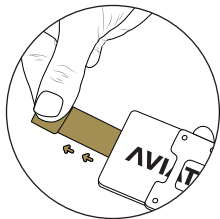


Leave the cover card in the wallet until it is filled with more cards. To fill the wallet with your cards, **slide out the pull strap** so the cards are approx. 1/3 pushed out.

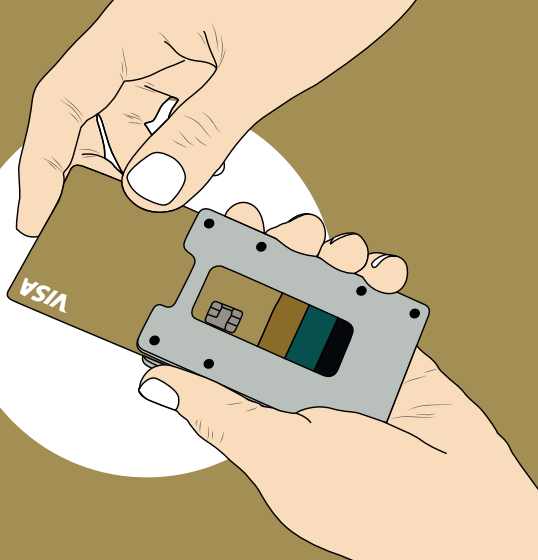

3 INSERT
CARDS

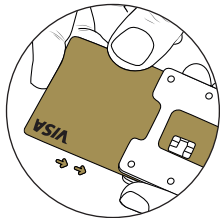


Insert one card after the other in front of the cover card into the wallet so that the cards lie on top of each other. Finally **press all cards firmly** into the wallet. Make sure that **no credit card** is the **cover card so that the embossing is not damaged.**

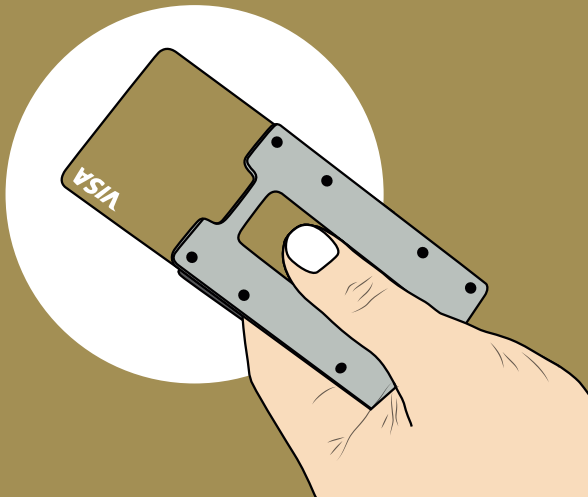

4 HOW
TO USE




To remove the cards, **use the strap to pull the cards out** about halfway. That way the cards can be easily fanned out.

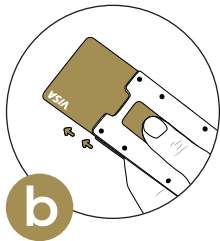


Alternatively, you can **slide the cards out** via the thumb slot.

5


FANNING OUT
CARDS

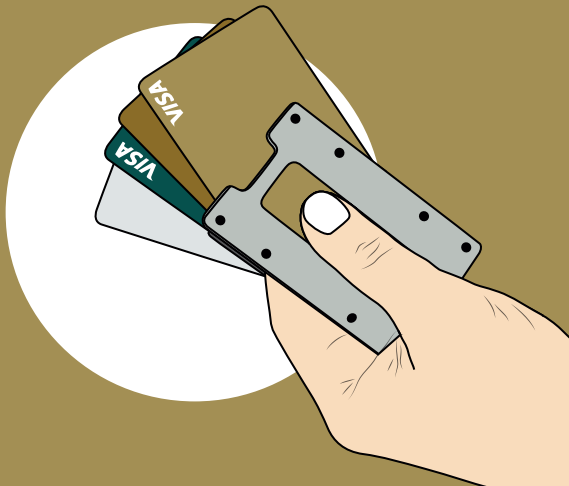

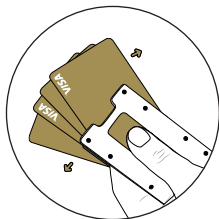

Hold on to the cards with your **thumb** thru the slot **while fanning** them out.


When removing the desired card, **push back** any other cards that are pushed out.

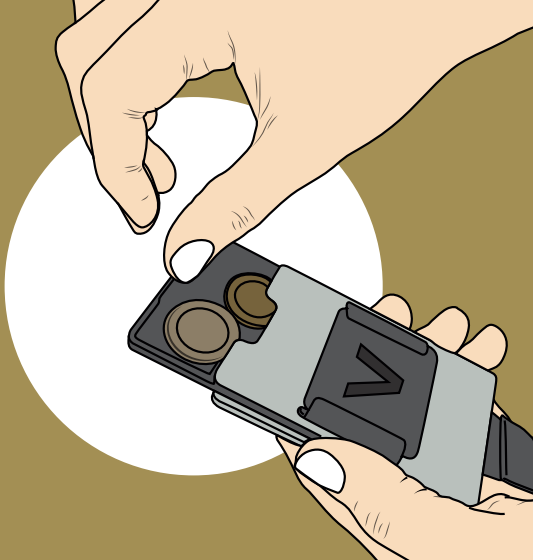

6 COIN
COMPARTMENT




To remove coins, **pull out halfway** the **coin compartment** on the back of the wallet by using the thumb slot.

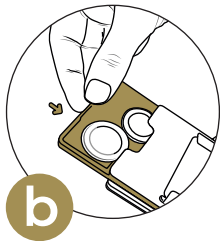


7

STORE
BILLS

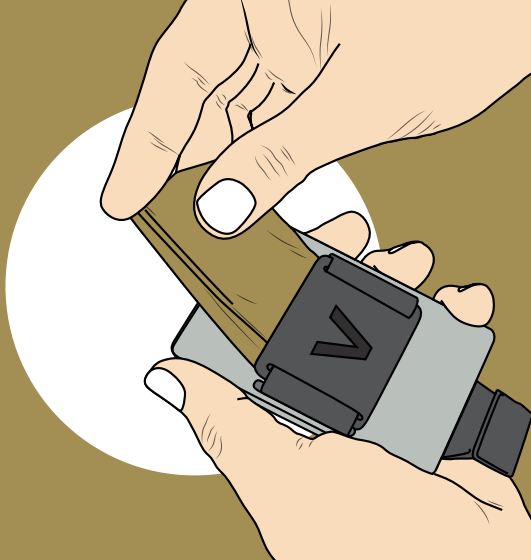



The **bills are folded** and placed **under the elastic band**.

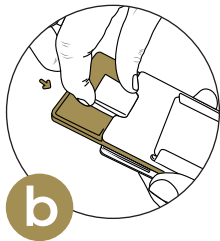

Alternatively, you can store the **bills inside** the **coin compartment**.

CHANGE CARD SETTING

CUSTOMIZE ELASTIC BAND AND DRAWSTRING

To avoid overstretching of the elastic band only keep as many cards in your wallet as you specified when you purchased it. The AVIATOR Wallet is pre set to a specific number of card.


If you would like to store more cards in your wallet than configured, please read the instructions for the card settings on the following pages.

IMPORTANT


Tighten the screws with **light pressure** until you feel a slight resistance. Especially if an aluminium inlay is installed in your wallet, be aware if **not overtighten the screws** this could damage the threaded holes.

Fill your wallet as described in the instructions.

Have fun with your AVIATOR Ultimate Slim Wallet

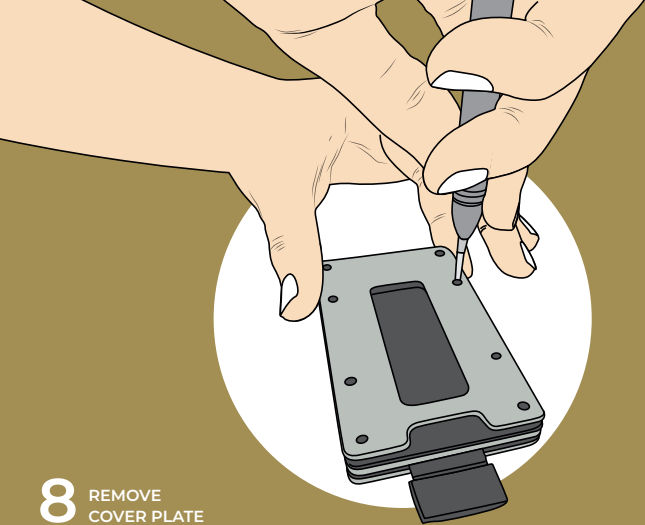


8 REMOVE
COVER PLATE

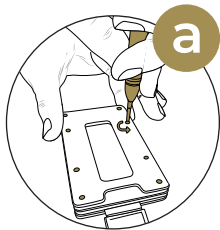


Leave about three cards in the wallet. To change the card settings, **all screws must be removed** with the included **screwdriver**.

Be careful and turn the screws gently and with little pressure to prevent from slipping off with the screwdriver.

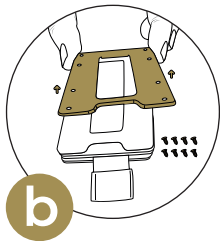


Remove the screws and **lift** the cover plate.

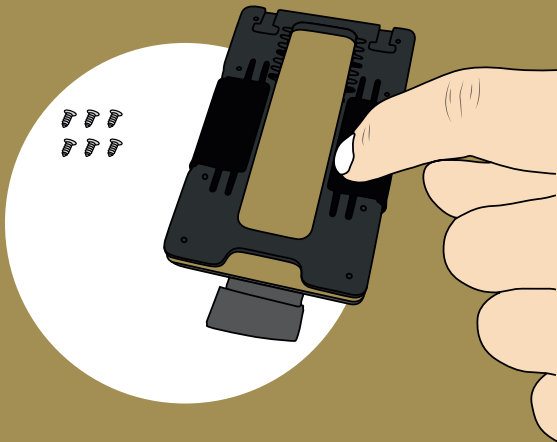


9

SETTING
PULL STRAP & ELATIC BAND


1-3 Cards

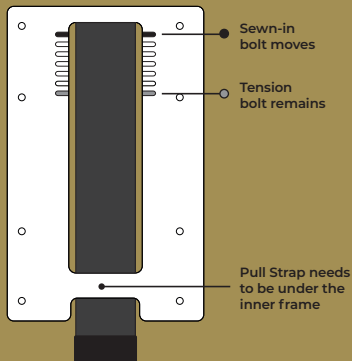


3-6 Cards

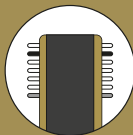 


6-9 Cards

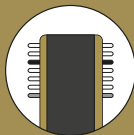 


9-12 Cards

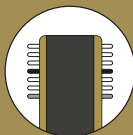 


12-15 Cards

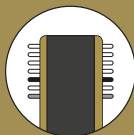 

15-18 Cards

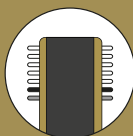 


18-20 Cards

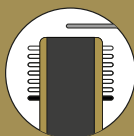 

9


SETTING
PULL STRAP

 1-3 Cards

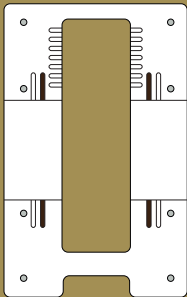


both bolts inner recesses

 from 3-6 Cards

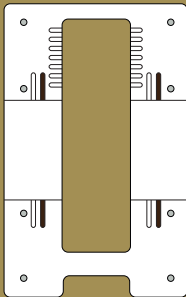


one bolt inner recesses
one bolt outer recesses

 from 12 Cards

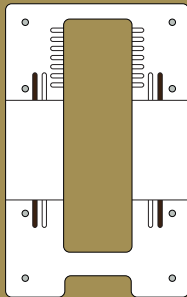

both bolts outer recesses

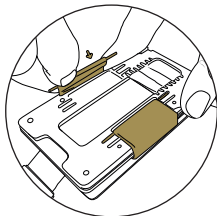 

1–3 Cards: Both bolts of the elastic band are clamped into the inner bolt recesses

from 3–6 Cards: A bolt is clamped into the outer and the other bolt is clamped into the inner recess of the bolt

from 12 Cards: Both bolts of the elastic band are clamped into the outer bolt recesses

AVIATOR

ULTIMATE SLM WLLT.

 **aviatorwallet**