

PLEASE READ CAREFULLY

Contents of Extension box

Fixings Bag



73x Run Clip
810.0013



7x Double Run Clip
810.0001

Skirt Extension
017.1100
x2

Run Extension Support
017.1101
x2

Top Panel Front
017.1085
x2


Side Panel
017.1084
x4

Step 1 - Unclip the end of your run

If you already have a complete Eglu Go Up run, you will need to unclip the end and corner skirts. (Keep the clips, you will need them later.) Also, remove the feeder and drinker.


Your run will then look the picture to the right.

If you are building an extended Eglu Go Up proceed to Step 2.

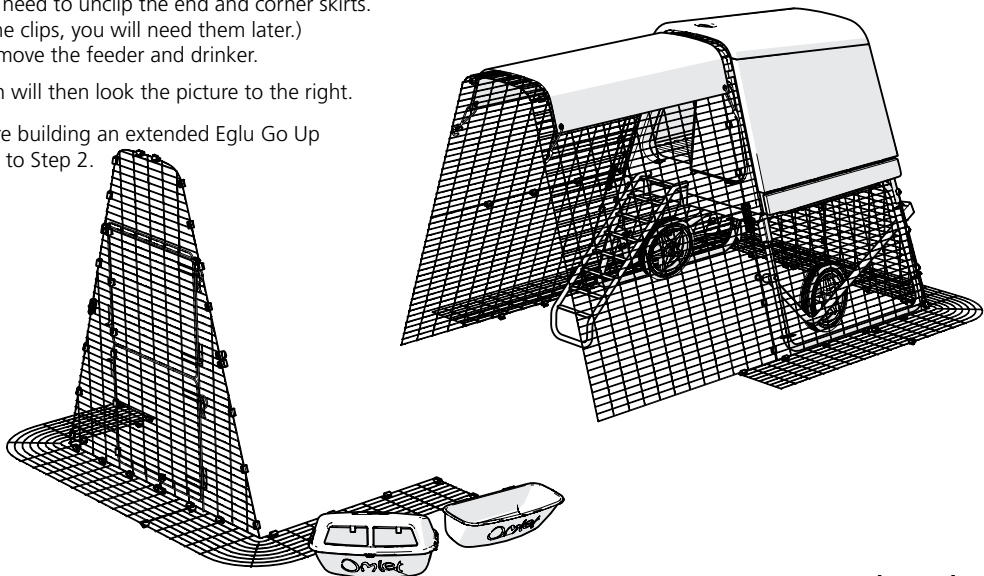

Step 2 - Attach Side Panels and Run Extension Supports


Clip on 2 Side Panels and 1 Run Extension Supports.

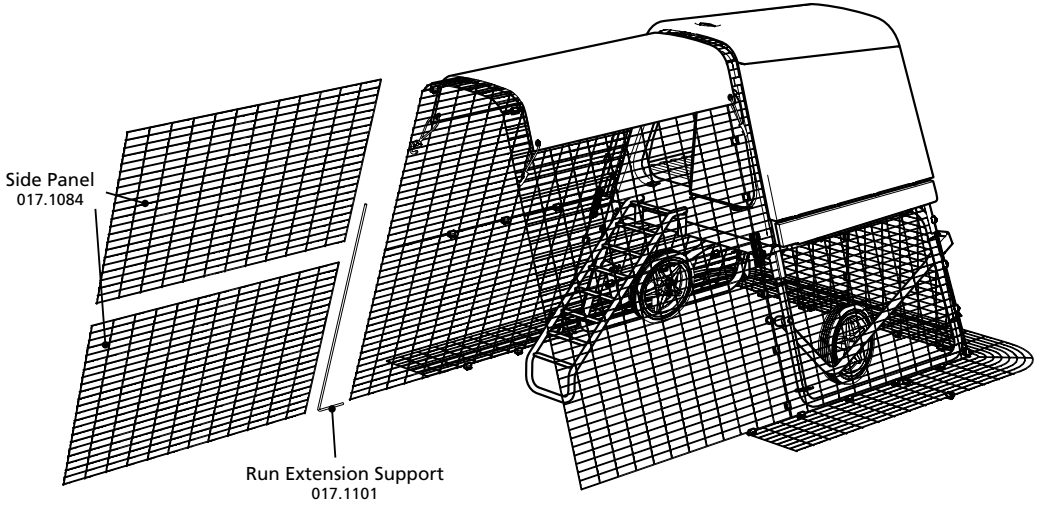

REPEAT ON OTHER SIDE


Step 3 - Attach Top Panels

Clip on 2 Top Panels.

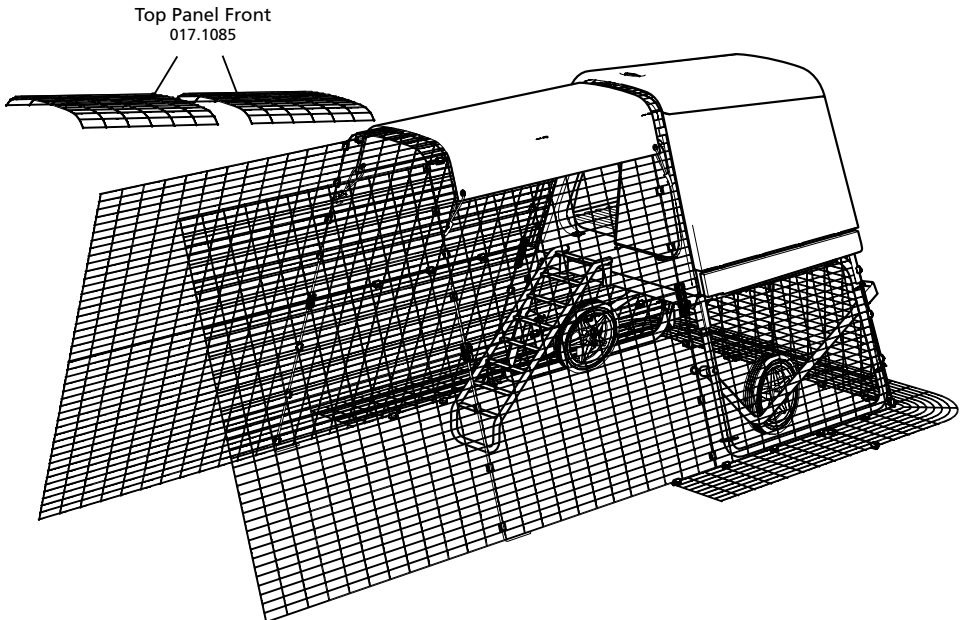

Step 4 - Attach Extension Skirt Panels

Clip on 2 Skirt Extensions.

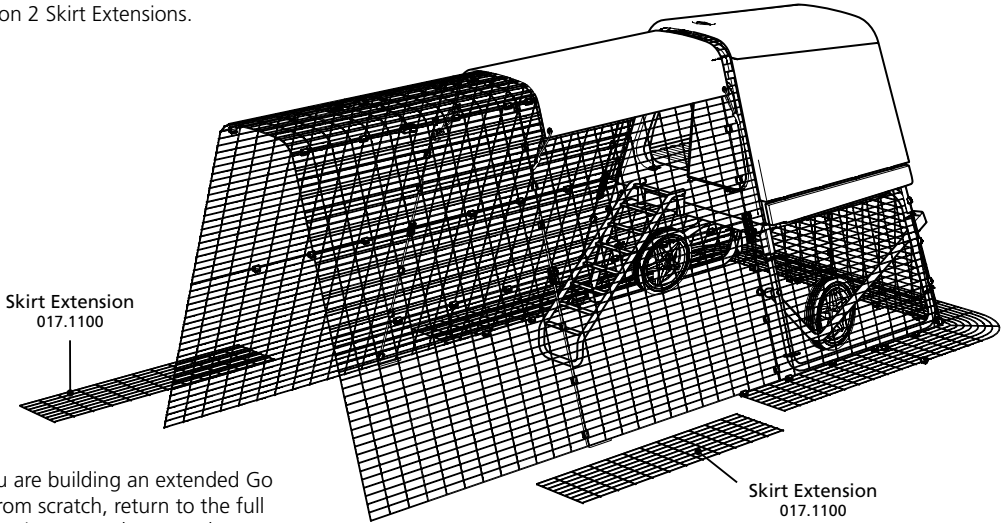



If you are building an extended Go Up from scratch, return to the full instruction manual to complete your run.

If you are adding more extensions, repeat Steps 2 to 4.

Step 5 - Re-attach the panels removed in Step 1

Re-attach the end of the run using the clips that were holding it on before.

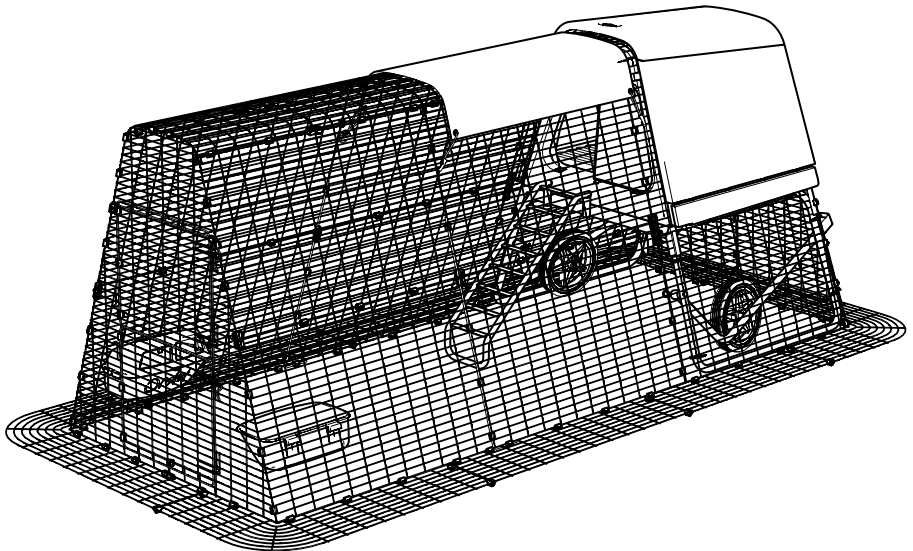

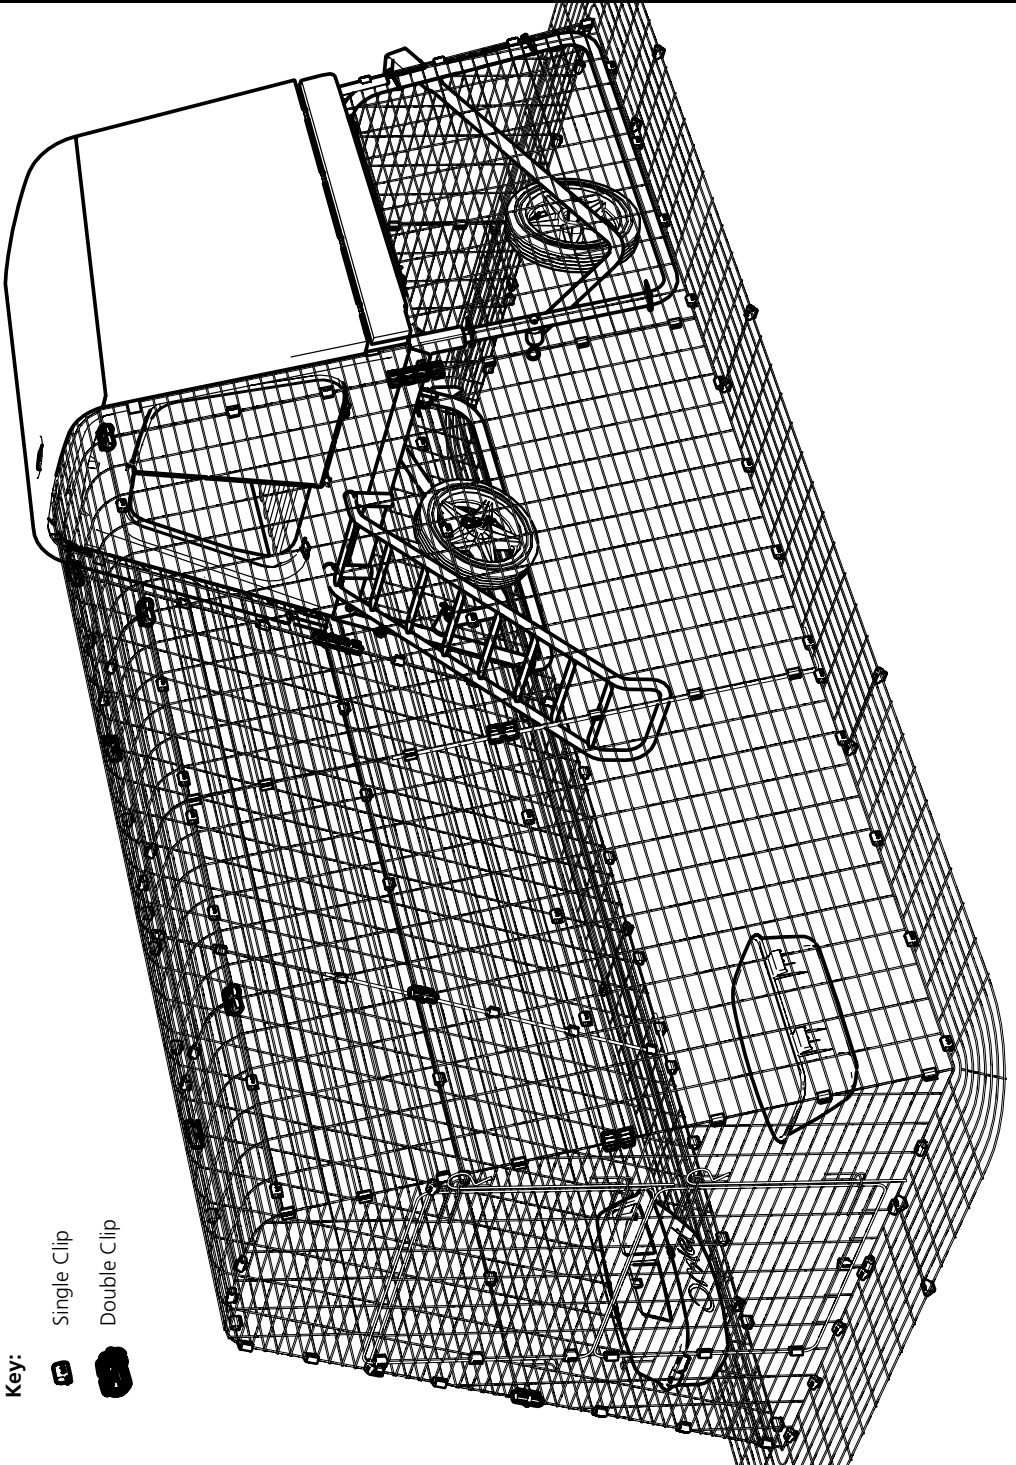

Key:



Single Clip



Double Clip