


Rear Traction Rods Kit Installation Instructions SPL RTR FRS

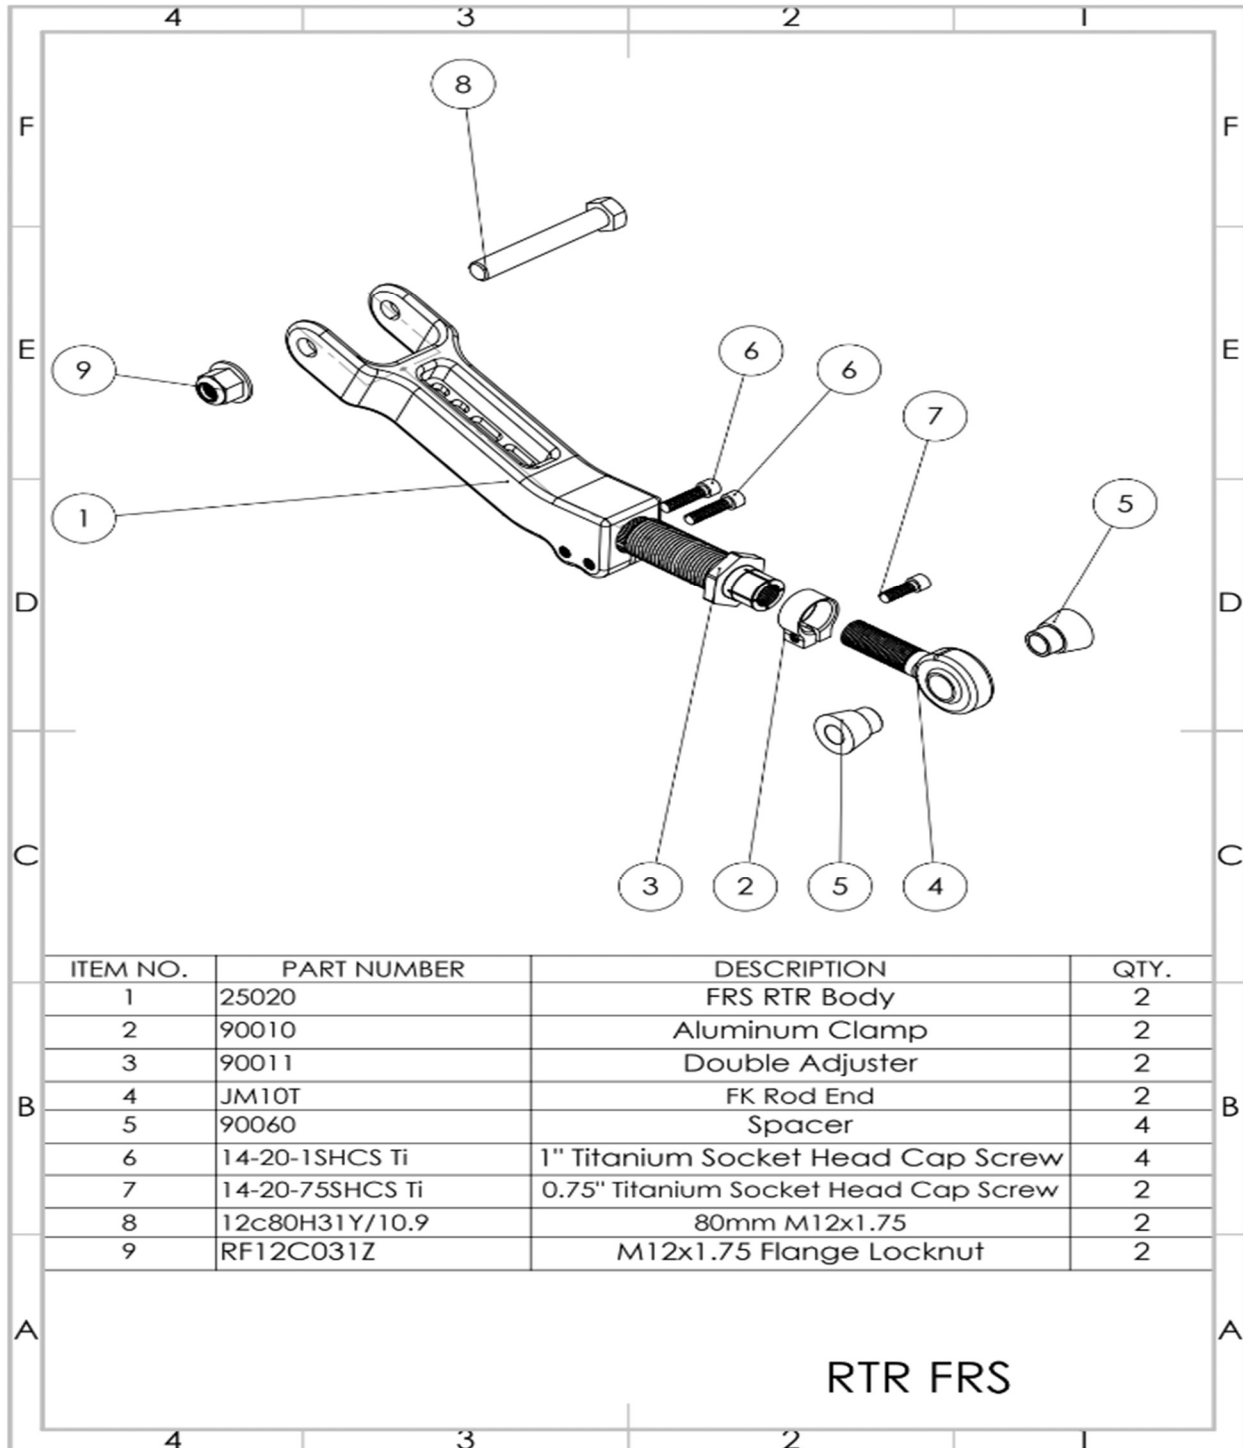

Thank you for your purchase of this SPL Parts performance suspension product. Please follow these instructions exactly to ensure that the product is able to function to the best of its ability, and you can achieve the most performance out of your vehicle.

Tools Needed:

17mm wrench and socket 3/16 allen wrench Crescent wrench or 3/4" wrench

1. Remove the OEM traction arm using the 17mm socket and wrench.
2. Set your SPL Parts Rear Traction Rod to the same length as the OEM traction arm. Final adjustment can be made after the arm is installed on the car.
3. Attach the SPL Parts Rear Traction Rod to the subframe and spindle using the OEM bolts with a 17mm socket and wrench.
4. Torque the bolt to 60 **ft. lbs. DO NOT OVERTORQUE!** SPL Parts is not liable for any issues due to overtorque.
5. Adjust the length of your new SPL Parts arm as needed. Please refer to the Double Adjuster section at the end of these instructions
6. Tighten the Aluminum Rotating Clamp (2) on the Double Adjuster (3) using the 3/16 allen wrench and lock down the 3/4" Blue Anodized Titanium Socket Head Cap Screw (7) using an adjustable wrench. Torque to 150 **in. lbs.**
7. Take your car to a professional alignment shop. Take these instructions with you to ensure the Rear Traction Rod is adjusted correctly.
8. Be safe and enjoy your new upgrade!


Adjustment

To adjust the alignment of the vehicle, first loosen all of the Titanium Socket Head Cap Screws (6, 7). Place a wrench around the hex on the Double Adjuster. Turn counterclockwise to shorten the arm, and turn clockwise to lengthen the arm. Once the arm is the desired length, tighten all Titanium Socket Head Cap Screws to 150 **in-lbs**. Always ensure that the FK Rod End is in the middle of its articulation while at ride height.


SPL Double Adjuster

The hybrid adjuster is what is known as a **double adjuster**. On the outside, the thread is left-handed. On the inside, the thread is right-handed. When the suspension arm is installed, turning the hybrid adjuster will allow you to lengthen/shorten the assembly.

When lengthening/shortening, be sure to keep the arm and rod end from freely rotating when you turn the adjuster. Do not make the following mistakes (threading out **only** the adjuster or threading out **only** the rod end):

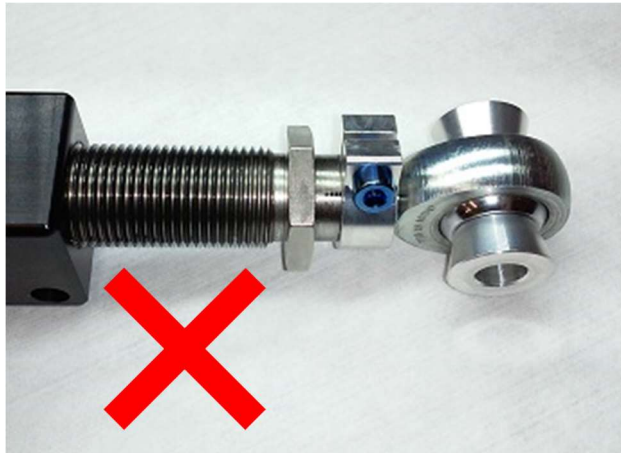


Overextended adjuster.

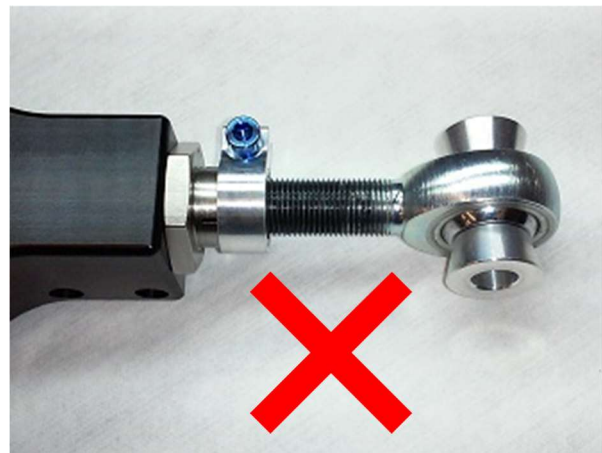

Overextended rod end.

The next picture shows a properly threaded adjuster. The rod end (heim joint) will thread out about 2/3 the length of the adjuster. Note the maximum adjustment limits shown.

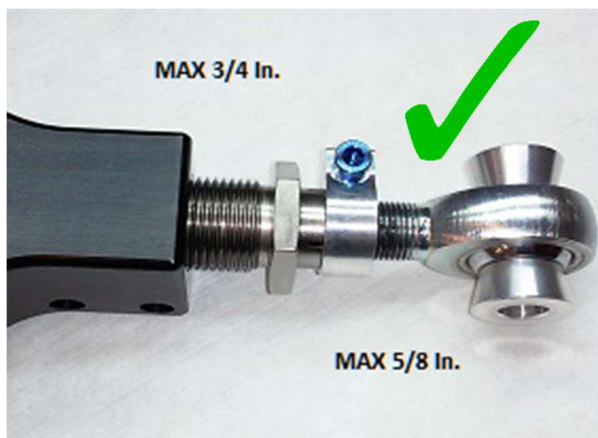

You'll notice in the pictures that the threads of the rod end and the adjuster have some dark material on them. That is anti-seize compound we apply to all of our products so that adjustments should be easy and trouble free for quite some time.

The advantage of the hybrid adjuster is that you can easily keep the rod end bearing centered during and after alignment. Make sure to keep the bearing centered as shown.



ONE-YEAR LIMITED WARRANTY AND DISCLAIMER

All SPL brand products are intended for **Off Road Use Only** and carry a one year limited warranty. See below for details. All other branded products carry their respective manufacturer warranty.

SPL PRO suspension products warranted to be free of defects in material and workmanship for one (1) year from the date of purchase.

If a product fails to meet specifications, SPL PARTS INC will, at its election, repair, replace, or make appropriate adjustment, if SPL PARTS INC determines to its satisfaction that the product is defective in material or workmanship, i.e. contains a defect arising out of the manufacture of the product and not a defect caused by other circumstances, including, but not limited to accident, misuse, abuse, unforeseeable use, neglect, alteration, improper installation, improper adjustment, improper repair, or failure caused by other equipment or interaction with other equipment. SPL PARTS INC is not responsible for labor charges, removal charges, installation, or other incidental or consequential costs. In no event shall the liability of SPL PARTS INC exceed the purchase price of the product.

SPL PARTS INC makes no other warranties, either expressed or implied, including limitation warranties as to merchantability or fitness for a particular purpose. SPL PARTS INC shall not be liable for, and buyer assumes all risk of, any advice or failure to provide advice by SPL PARTS INC to buyer regarding the product or use and installation of product. SPL PARTS INC shall not be liable for any special, incidental or consequential damages.

If the purchaser of the product shall fail to pay when due any portion of the purchase price, or fail to meet any terms required under contract agreed on at time of purchase, all warranties and remedies granted may be terminated.

Using any SPL arm as a tie/strap down point for a dyno session or transport will void the warranty.