

Inkjet Cotton

Washable fabric for inkjet printers

Print directly onto these 100% cotton sheets using a top-loading inkjet printer. The fabric sheets have a paper backing to help them feed through your printer smoothly.

They are so simple to use; print onto them as if printing normal paper, then peel off the backing paper and your completely unique and personalised fabric sheet is ready to use.

Instructions

Do not attempt to remove or reposition the backing paper prior to printing.

Step 1 - Choose your design and resize it to fit your fabric sheet.

Step 2 - Press the cotton sheet with a hot, dry iron to ensure that it is firmly attached to its backing paper and will run through the printer smoothly. To prevent the fabric from fraying and to help it feed smoothly into the printer, you may want to attach and fold over a strip of masking tape along the leading edge of the fabric before placing it in the printer.

Step 3 - Place the fabric sheet into your printer feed tray. Make sure it is straight and that you will be printing onto the fabric side of the sheet. Set your print quality to 'Photo Quality' or similar, leaving the paper type as 'Plain Paper' or similar. Select the correct paper size, then print. If the fabric catches on the side of the printer whilst printing you can use your finger to gently encourage it back into the correct feed position.

Step 4 - Leave the fabric to dry before carefully peeling off the backing paper. Your fabric is now ready to use. If you intend to sew your fabric we recommend pre-washing and ironing it to ensure that colours do not run when the finished piece is washed.

Washing Instructions

These fabric sheets have been pre-treated with a non-toxic chemical to help fix ink from inkjet printers. They can be hand washed in warm water using a small amount of regular fabric detergent.