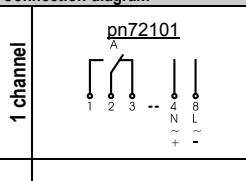
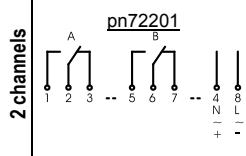
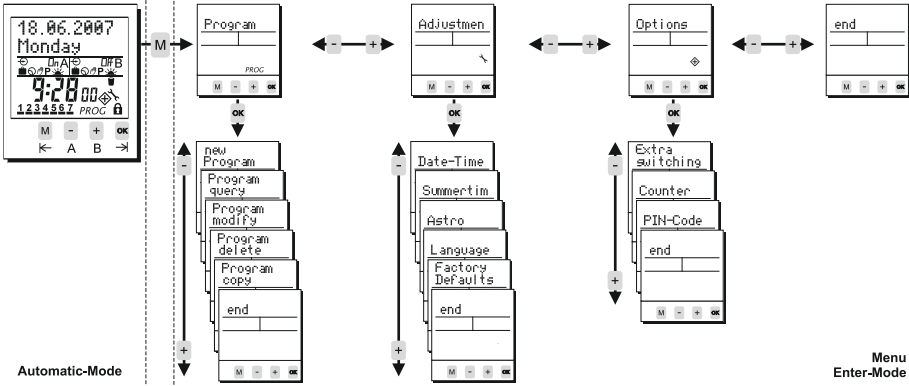
	<p><b>Connection diagram</b></p> <p><b>1 channel</b></p>  <p><b>2 channels</b></p> 	<p><b>1. Safety instructions</b></p> <ul style="list-style-type: none"> <li>⚠ The installation and assembly of electrical equipment must be only carried out only by a skilled Person! Otherwise fire danger or danger of an electric shock exists!</li> <li>⚠ Connect the supply voltage/frequency as stated on the product label!</li> <li>⚠ Warranty void if housing opened by unauthorised person!</li> <li>⚠ The electronic circuit is protected against a wide range of external influences. Incorrect operating may occur if external influences exceed certain limits!</li> </ul>	<p><b>2. Initial operation</b></p> <ul style="list-style-type: none"> <li>■ The time switch is delivered in sleep-mode, the display is switched off.</li> <li>■ Press <b>OK</b>-button for 1 second.</li> <li>■ The current date and time is already programmed and European daylight savings time is activated.</li> <li>■ Select the desired language by pressing <b>[+/-]</b>-buttons and confirm it by pressing <b>OK</b>. (Remark: By pressing <b>[+/-]</b> you move one step backwards from the current position)</li> <li>■ If required, date, time and daylight savings time mode can be adjusted also by pressing <b>[+/-]</b>-buttons and a subsequent confirmation with <b>OK</b>.</li> <li>■ When using the astro function it is obligatory to enter the geographical position of the place of the installation of the device. Choose with <b>[+/-]</b>-buttons between „location“ (pre-defined cities) and „position“ (longitude and latitude). Confirm your choice again with <b>OK</b>. (The easiest way is choosing a pre-defined city within the „locations“-menu.)</li> <li>■ Enter the nearest city or the geographical coordinates with <b>[+/-]</b>-buttons and confirm with <b>OK</b></li> <li>■ Finally, you can activate the Astro-program for the whole week (no offset) by confirming „Astro preprogrammed“. If you choose „Astro not preprogrammed“ you can individually program the Astro-function later in the programming menu. To complete the initial operations confirm your choice with the <b>OK</b> button.</li> </ul>
---	--	---	--


<p><b>3. Menu overview</b></p> 	<p><b>4. Symbol legend</b></p> <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td style="text-align: center;"></td> <td>Power plug symbol (flashing): While the power supply is disconnected, the display shows a power plug symbol (flashing). The time switch is then operated in the reserve mode. Press <b>OK</b>-button for 1 sec. to „wake up“ the time switch.</td> </tr> <tr> <td style="text-align: center;"><b>On / Off</b></td> <td>Channel is switched ON / Channel is switched OFF</td> </tr> <tr> <td style="text-align: center;"></td> <td>For the current date the „holiday program“ / „permanent by date“ is activated</td> </tr> <tr> <td style="text-align: center;"></td> <td>Standard programming step</td> </tr> <tr> <td style="text-align: center;"></td> <td>Current state is based on a manual over-ride. The state will be cancelled with the next programming step.</td> </tr> <tr> <td style="text-align: center;"><b>1234567</b></td> <td>Days of the week Monday, Tuesday, ... Sunday; The underscores indicate if the program is active for the days above.</td> </tr> <tr> <td style="text-align: center;"></td> <td>Element within sub-menu „program delete“</td> </tr> <tr> <td style="text-align: center;"></td> <td>Astro function: Current state is based on a sunrise or sunset taking into account an optionally adjusted Offset.</td> </tr> <tr> <td style="text-align: center;"></td> <td>The time switch is locked; to unlock the device the PIN has to be entered.</td> </tr> </table>		Power plug symbol (flashing): While the power supply is disconnected, the display shows a power plug symbol (flashing). The time switch is then operated in the reserve mode. Press <b>OK</b> -button for 1 sec. to „wake up“ the time switch.	<b>On / Off</b>	Channel is switched ON / Channel is switched OFF		For the current date the „holiday program“ / „permanent by date“ is activated		Standard programming step		Current state is based on a manual over-ride. The state will be cancelled with the next programming step.	<b>1234567</b>	Days of the week Monday, Tuesday, ... Sunday; The underscores indicate if the program is active for the days above.		Element within sub-menu „program delete“		Astro function: Current state is based on a sunrise or sunset taking into account an optionally adjusted Offset.		The time switch is locked; to unlock the device the PIN has to be entered.
	Power plug symbol (flashing): While the power supply is disconnected, the display shows a power plug symbol (flashing). The time switch is then operated in the reserve mode. Press <b>OK</b> -button for 1 sec. to „wake up“ the time switch.																		
<b>On / Off</b>	Channel is switched ON / Channel is switched OFF																		
	For the current date the „holiday program“ / „permanent by date“ is activated																		
	Standard programming step																		
	Current state is based on a manual over-ride. The state will be cancelled with the next programming step.																		
<b>1234567</b>	Days of the week Monday, Tuesday, ... Sunday; The underscores indicate if the program is active for the days above.																		
	Element within sub-menu „program delete“																		
	Astro function: Current state is based on a sunrise or sunset taking into account an optionally adjusted Offset.																		
	The time switch is locked; to unlock the device the PIN has to be entered.																		

Menu Program		Menu Adjustment		Menu Options	
<b>New program</b>	See point 7 (New program)	<b>Date-Time</b>	Adjustment of date and time	<b>Extra switching time</b>	See point 8
<b>Program query</b>	To query the programming steps and remaining memory locations	<b>Summertime</b>	Adjustment of the daylight saving time mode	<b>Counter</b>	Displays the hour counter and pulse counter for each channel and the time switch itself.
<b>Program modify</b>	Within Program modify each single switching time can be modified.	<b>Astro</b>	Adjust your geographical position with pre-defined choice of regions/countries and cities or with longitude, latitude and time zone.	<b>PIN-Code</b>	The time switch can be locked with a 4-digit PIN-Code. The code can be adjusted, activated and deactivated. If you have forgotten the Code please call customer service.
<b>Program delete</b>	Deletion of switching time(s). The program for all channels, single channels and single programming steps within on channel can be deleted.	<b>Language</b>	Choice of languages		
<b>Program copy</b>	Copy from one channel to another.	<b>Factory Defaults</b>	Reset to the state of delivery. Date, time and switching program will be lost!		

5. Key function		6. Channel ON OFF / Permanent P	
<b>Automatic-Mode</b>	<b>Menu / Enter-Mode</b>	<b>Channel ON OFF</b>	
<b>[M]</b>	To access the Enter-mode (program, adjustments, options) from the automatic-mode	By pushing <b>[A/B]</b> -buttons ( <b>[+/-]</b> -buttons) a manual switch of the channels take place. The resulting switching status is marked with the hand-symbol and remains until the next programming step occurs. (temporary over-ride)	
<b>[A/B]</b>	To switch the channel ON or OFF until the next programming step occurs.	<b>Permanent switching status P</b>	
<b>[OK]</b>	To activate the time switch when operated without power supply.	By pressing the corresponding channel button <b>[A/B]</b> for more than 3 sec. the channel is permanently switched ON or OFF. The status remains until the next manual switching occurs (> 3 sec.). (permanent over-ride)	

<b>7. Program permanent / Extra switching time / Reset</b>	
<b>Permanent</b>	One permanent by date programming step (holiday function) for each channel is possible. During the desired period (The function is valid for the whole days) the channel can be switched off (permanent off) or on (permanent on). The choice permanent will not be offered anymore within the menu new program when already in use. The switching time can be modified and deleted within Program modify and Program delete respectively. (See Point 8)
<b>Extra switching time</b>	You can program further „extra“ switching times e.g. if you like to use a channel of the time switch for a non-„Astro lighting-application“. You have to activate the „extra switching times“ within the menu Options. The „extra switching times“ works like a standard weekly program (ON / OFF). After activating the „extra switching time“ it will be offered within the programming menu „new program“. (See Point 8)
<b>Reset-Function</b>	Press all front keys for 2 seconds. The time switch is reset. The values for date and time will be deleted and have to be re-entered. The switching program has not been deleted!

**8. New program**

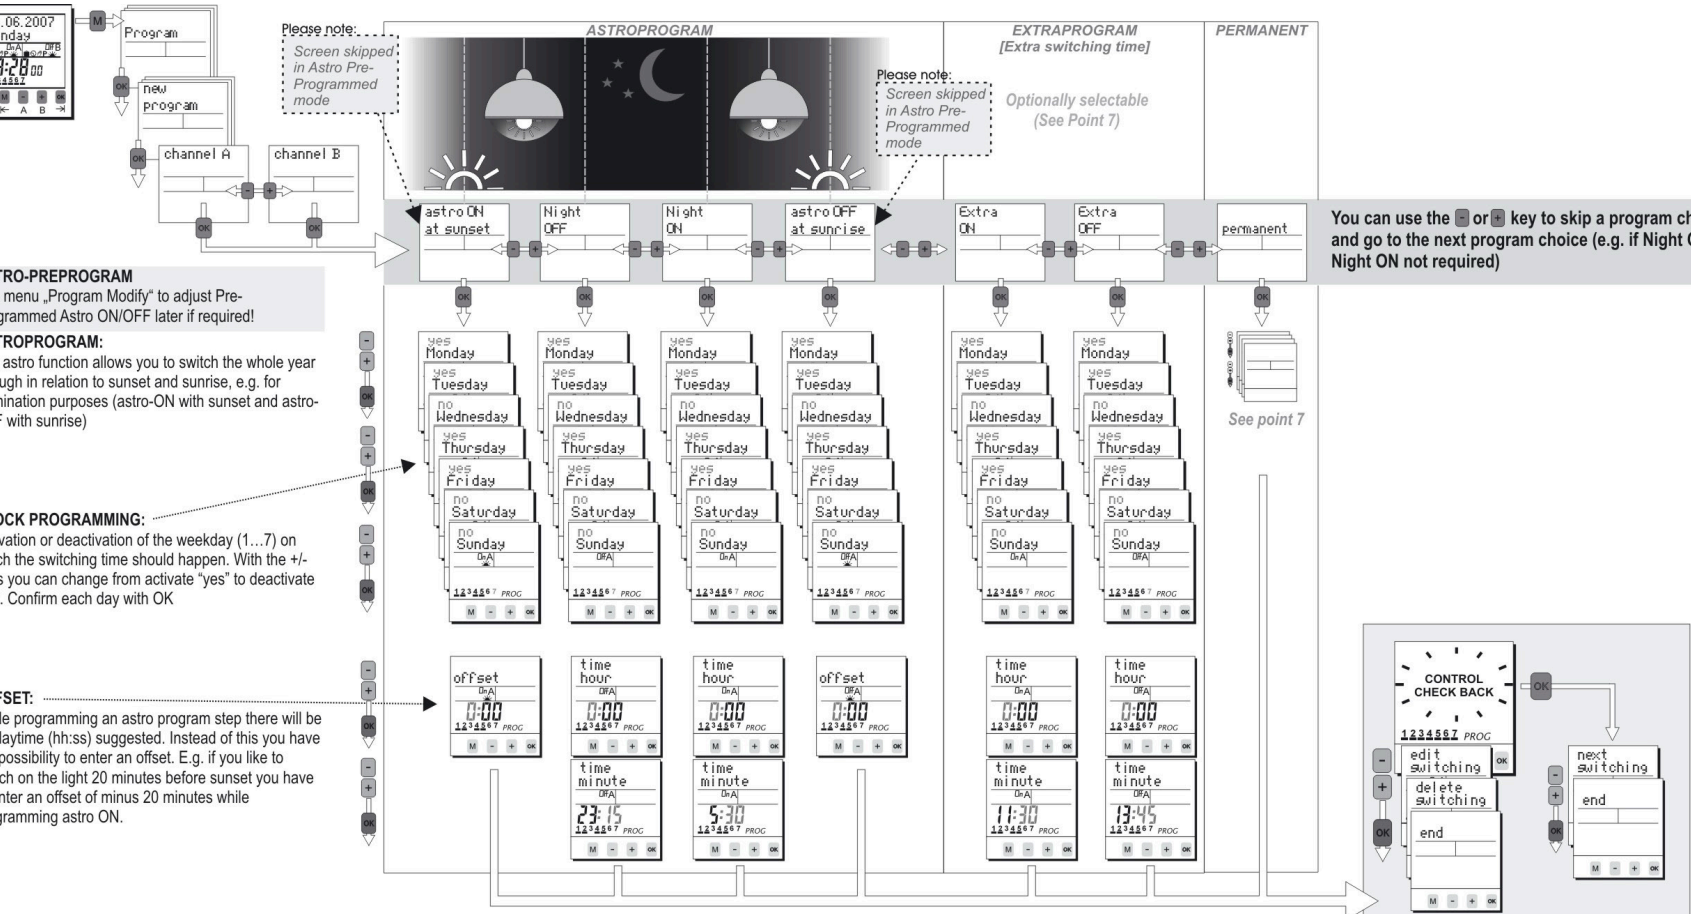

**ASTRO-PREPROGRAM**  
Use menu „Program Modify“ to adjust Pre-Programmed Astro ON/OFF later if required!

**ASTROPROGRAM:**  
The astro function allows you to switch the whole year through in relation to sunset and sunrise, e.g. for illumination purposes (astro-ON with sunset and astro-OFF with sunrise)

**BLOCK PROGRAMMING:**  
Activation or deactivation of the weekday (1...7) on which the switching time should happen. With the +/- keys you can change from activate "yes" to deactivate "no". Confirm each day with OK

**OFFSET:**  
While programming an astro program step there will be no daytime (hh:ss) suggested. Instead of this you have the possibility to enter an offset. E.g. if you like to switch on the light 20 minutes before sunset you have to enter an offset of minus 20 minutes while programming astro ON.

**EXTRAPROGRAM [Extra switching time]**  
Optionally selectable (See Point 7)

**PERMANENT**

**CONTROL CHECK BACK**

**You can use the [M] or [OK] key to skip a program choice and go to the next program choice (e.g. if Night OFF, Night ON not required)**