

## E1 SIMPLIFIED INSTRUCTIONS

USE IN CONJUNCTION WITH MAIN BOOKLET

TO ADJUST DAYS/NUMBERS ETC — PRESS ARROW KEYS  OR

### A. TO SET ACTUAL TIME:

1. PRESS 

TIME
HR
MIN
DAY
ENTER
2. PRESS "HOURS" flash — Adjust (ie  OR  )
3. PRESS MINUTES flash — Adjust
4. PRESS DAY flashes — Adjust
5. PRESS ENTER Display shows normal realtime display

### B. TO CANCEL EXISTING PROGRAMMES — (ONLY WHEN REQUIRED.)

1. PRESS PROG (if "!" flashes on blank display, memory is already clear.
  2. PRESS CANCEL — Go to C2 to enter new programme.)
  3. PRESS CANCEL
  4. PRESS COPY
  5. PRESS CANCEL
  6. PRESS CANCEL
- We are now ready to re-programme E1.

### C. TO SET UP A PROGRAMME

1. PRESS "!" flashes on blank display.
  2. PRESS < OR >
  3. PRESS ENTER To select (1) Normal or ( 2 ) Pulse Mode (\* See Note).
  4. PRESS SET Display now shows 0:00
  5. PRESS DAY DAY flashes.
  6. PRESS HR (For first On time) — DAY flashes — Adjust.
  7. PRESS MIN HOUR flashes — Adjust.
  8. PRESS ENTER MINUTES flash — Adjust.
  9. PRESS HR (1) changes to (0) — HOURS flash.
  10. PRESS MIN (For first Off time)/HOURS flash — Adjust.
  11. PRESS ENTER MINUTES flash — Adjust.
- First On/Off Period now set.

For further On/Off operations, repeat 5-11 to a max of 21 On/Off periods over 7 days.

WHEN ALL ON/OFF PERIODS ARE SELECTED —

12. PRESS EXIT
13. PRESS EXIT All On/Offs set — Display normal.

\* **NOTE** NORMAL APPLICATIONS, SET TO "!" PULSE MODE APPLICATIONS, SET TO "2"

D. **TO COPY DAYS** — i.e. One Day is set and we require an identical programme on another Day.

1. PRESS 

COPY
SET
2. PRESS 

COPY
SET
3. SELECT BASE DAY: 

DAY
-----

 Base Day flashes — Adjust.
4. SELECT COPY DAY: 

ENTER
ENTER

 Base Day static — Copy Day flashes — Adjust.
5. PRESS REPEAT 3-5 FOR OTHER COPIES — THEN
6. PRESS 

EXIT
EXIT

 Normal display.
7. PRESS 

EXIT
EXIT

 Normal display.

NOTE — BASE DAY = Day to be copied from  
 — COPY DAY = Day to be made the same.  
 BASE DAY must be re-selected for each COPY DAY.

### E. TO REVIEW PROGRAMME ENTRY — (THIS SHOWS PROGRAMME CONTENT)

1. PRESS 

PROG
REVV
DAY
ENTER

 Adjust review Day (flashing).
2. PRESS 

PROG
REVV
DAY
ENTER

 Use  or  to step thru On/Off times.
3. PRESS 

PROG
REVV
DAY
ENTER

 REPEAT 3 & 4 FOR ANY OTHER DAY THEN —
4. PRESS 

EXIT
EXIT

 Normal Display.
5. PRESS 

EXIT
EXIT

 Normal Display.
6. PRESS 

EXIT
EXIT

 Normal Display.

NOTE — Only DAYS actually programmed can be reviewed in this Mode.  
 Copy DAYS only will flash and show 0:00 — (See F).

### F. TO REVIEW COPY DAYS — (SHOWS WHICH DAYS HAVE BEEN COPIED — NOT CONTENT).

1. PRESS 

COPY
REVV
< OR >
EXIT
EXIT

 Base Day Static — Copy Day Flashing.
2. PRESS 

COPY
REVV
< OR >
EXIT
EXIT

 For other base Days.
3. PRESS 

COPY
REVV
< OR >
EXIT
EXIT

 Normal display.
4. PRESS 

COPY
REVV
< OR >
EXIT
EXIT

 Normal display.
5. PRESS 

COPY
REVV
< OR >
EXIT
EXIT

 Normal display.

\* In normal Mode PRESS  +  together to test LCD. This will show position of all available displays.

\* If you lose your way — Go back thru the menus to normal display by use of ENTER/EXIT key.

**D. TO COPY DAYS** — i.e. One Day is set and we require an identical programme on another Day.

1. PRESS 

COPY
------
2. PRESS 

SET
-----
3. SELECT BASE DAY:  
PRESS 

DAY
-----

 Base Day flashes — Adjust.
4. SELECT COPY DAY:  
PRESS 

ENTER
-------

 Base Day static — Copy Day flashes — Adjust.
5. PRESS 

ENTER
-------
- REPEAT 3-5 FOR OTHER COPIES — THEN
6. PRESS 

EXIT
------
7. PRESS 

EXIT
------

 Normal display.

NOTE — BASE DAY = Day to be copied from  
— COPY DAY = Day to be made the same.  
BASE DAY must be re-selected for each COPY DAY.

**E. TO REVIEW PROGRAMME ENTRY - (THIS SHOWS PROGRAMME CONTENT).**

1. PRESS 

PROG
------
2. PRESS 

REVV
------
3. PRESS 

DAY
-----

 Adjust review Day (flashing).
4. PRESS 

ENTER
-------

 Use 

<
---

 or 

>
---

 to step thru On/Off times.  
REPEAT 3 & 4 FOR ANY OTHER DAY THEN —
5. PRESS 

EXIT
------
6. PRESS 

EXIT
------

 Normal Display.

NOTE — Only DAYS actually programmed can be reviewed in this Mode.  
Copy DAYS only will flash and show 0:00 — (See F).

**F. TO REVIEW COPY DAYS — (SHOWS WHICH DAYS HAVE BEEN COPIED — NOT CONTENT).**

1. PRESS 

COPY
------
2. PRESS 

REVV
------

 Base Day Static — Copy Day Flashing.
3. PRESS 

< OR >
--------

 For other base Days.
4. PRESS 

EXIT
------
5. PRESS 

EXIT
------

 Normal display.

\* In normal Mode PRESS 

<
---

 + 

>
---

 together to test LCD. This will show position of all available displays.

\* If you lose your way — Go back thru the menus to normal display by use of ENTER/EXIT key.