


Electric scissors

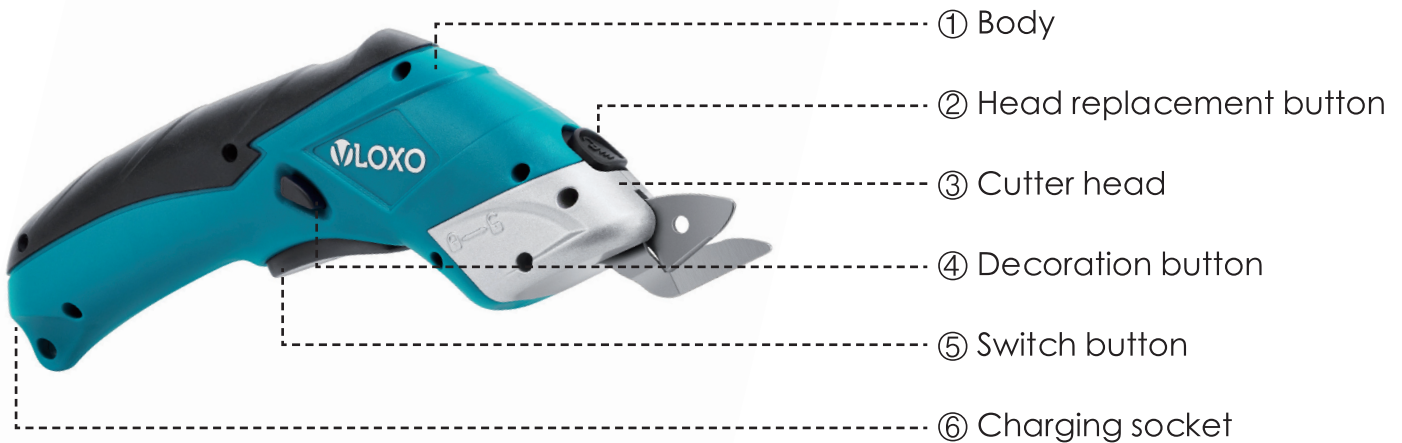

Voltage/Frequency: 220V-5Hz

DC: 3.6V lithium battery

No-load speed: 10000RPM

Charger and battery safety instructions:

Please read the safety instructions carefully before charging the battery

Can only use the specified charger to charge the battery

The charger can only be used normally in a dry environment of 10° C-40° C

Do not use the charger damaged

Please repair the charger and battery at a professional maintenance point

Prevent the battery from short-circuiting. Do not touch any metal objects while the battery is connected.

Do not put the battery in a high temperature environment that may rise above 50° C. (such as a car parked in the sun)

Do not put the battery into water

Do not open the battery

Electricity Safety

Please check if the voltage indicated on the appliance is the same as the supply voltage

The scope of products

Cloth	2.5mm	Corrugated Cardboard	5mm
Felt Products	6mm	Carpet	3.5mm
Leather	3.5mm	Plant Stalk	2mm
Plastic Plate	3.5mm		

Explanation: The above data is for reference only, as there will be deviations for each person, region, and various materials.

Charge the battery

The battery must be charged before it is used for the first time. After several full charge discharges, the battery can reach its maximum capacity. Connect the plug of the charger, the indicator light on the tail of the fuselage is on, the charging time is 3-5 hours, and the charging time is prohibited for more than 5 hours. If the indicator light does not go off after 5 hours, please stop charging.

Note: Machine does not work during charging

Electric scissors

Head replacement

A set of products contains 2 cutter heads. The front end of the fuselage has a lock button as shown ②. When the cutter head is installed, the cutter head can be directly inserted into the groove card, and the card must be in place. When removing the cutter head, first push the lock button ② upwards, open the lock button, and then pull the cutter head.

Machine operation: open/close

When you hold down the switch, the machine starts to work. When the switch is released and the machine stops.

Cleaning and maintenance

Keep the machine clean and dry, and regularly check that all parts are in good condition.

Technical Parameters

Voltage: 3.6V DC

Battery: 2000 mAh lithium battery

No-load speed: 10000RPM

Environment

If the machine exceeds the service life, it must be replaced. Do not throw the machine into household garbage. Remove the battery and dispose it properly.

Warning

For your own safety, read the instructions carefully before use.

Please use this product strictly in accordance with the applicable scope of the product. If it is beyond the scope of application, it may damage the machine or cause safety problems.

Storage

When not used for a long time, charge the battery to ensure that the battery has electricity. Store in a dry, room temperature environment.

Package:



1 × Body
2 × Cutter head
1 × Power supply
1 × User Manual