



PRESS TO TURN OUTPUT ON AND OFF

USE OR OR GO TO

WWW.CRITICALTATTOO.COM/ATOM-HOWTO

FOR MORE INSTRUCTION

ROTATE TO CHANGE VOLTAGE

TATTOO MACHINE OUTPUT

POWER INPUT

FOOT PEDAL INPUT

## FOR MOMENTARY/MAINTAINED PEDAL MODES AND JUMP START FEATURE

## PRESS AND HOLD ENCODER BUTTON





FIRST FLASH TOGGLES BETWEEN
MOMENTARY/MAINTAINED PEDAL MODES



SECOND FLASH ENABLES/DISABLES
JUMP START FOR HARD STARTING
ROTARY MACHINES

