




INDEX

Safety Notice	3
Intro	2
Overview	Ę
Features	6
Getting Started	7
Additional Information	8
Troubleshooting	ç

USER MANUAL



SAFETY NOTICE

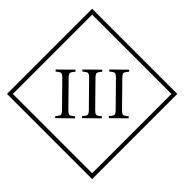

CLASS III SYMBOL

A Class III appliance is designed to be supplied from a separate/safety extralow voltage (SELV) power source. The voltage from a SELV supply is low enough that under normal conditions a person can safely come into contact with it, without the risk of electrical shock. The extra safety features built into Class I and Class II appliances are, therefore, not required. For medical devices, compliance with Class III is not considered sufficient protection, and further more-stringent regulations apply to such equipment.

TECHNICAL DATA	
Operating Voltage:	5-12 V DC
Current:	UP TO 1.0 A
Ambient Temperature:	+10 to +35 °C
Relative Humidity:	30 to 75%
Dimensions (Ø X L):	H56 x W49 X L27 mm
Weight:	Approx. 58g (2oz)
Charging Port:	USB-C



BARRIER PROTECTING YOUR MACHINE

We strongly suggest the use of barrier products to protect your machine. For a visual demonstration of barrier protection methods, please visit our YouTube channel FK Irons.

This device is only for use by trained tattoo artists and not for the use by children or persons of reduced physical, sensory or mental capabilities.

3

powerBolt

USER MANUAL



LIGHTNING INTRO



THE POWERBOLT

Unleash Your Power

The first USB battery attachment featuring complete Bluetooth connectivity, and a whole new sense of freedom.

OVERVIEW



SPECIFICATIONS

• Output Voltage: 5 – 12 V

• Increment/decrement voltage interval: 0.5 V


• Maximum output current: 1 A

Charger Input: USB-C / 1.5 ASize: H57mm x W30mm x L27mm

• Weight: 58g (2 oz)

 Battery Life: Average of 5-6 Hours (dependent on functional preferences)

30 mm

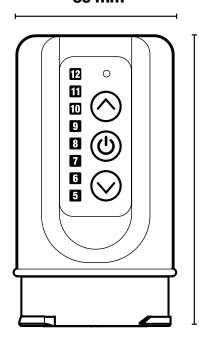

57 mm



FEATURES

THE POWERBOLT

LED indicator.

Solid Color = Whole Value

Blinking Color = Half Increment

Ex. Solid green indicates 10V

Flashing green indicates 10.5V

Battery Level Check: Press and hold power button until white.

A blinking colored light indicates remaining charge.

Note: LED flashes while battery charges. Once < 15% is reached, red



Working with modes: Modes work by pressing and releasing the power button.

light will blink alternately with voltage.

Bluetooth – Hold the power button until a blue light appears and immediately release the power button. A blue blinking light indicates pairing mode is available for 60 seconds. To deactivate Bluetooth, hold the power button and release when the yellow light flashes.

Travel Mode (Shutdown) – Press and hold the power button until the red light flashes. This mode is for when you want to avoid unnecessary discharge and / or comply with travel laws. To reactivate, connect / disconnect to a USB-C port.

Reset (Factory Settings) – Should you experience abnormal behavior, hold the power button and the voltage down button at the same time, then guickly release.

Device reset: (U) + (V)





PowerBolt Top/ Bottom Views

DETACHING THE POWERBOLT



DETACHING THE POWERBOLT

The PowerBolt is compatible with the Spektra Flux and the EXO. To detach your PowerBolt, ensure you have a firm grip on the Body of the Flux or EXO

and Grip. Turn the PowerBolt counter clockwise and pull out.
To attach the PowerBolt, push in while twisting clockwise.
Ensure lock mechanism moves

freely. PowerBolt must sit correctly to ensure power leads align correctly. Avoid contact with the PowerBolt leads while recharging or servicing.

eGIVE

eGIVE ADJUSTMENT

With this feature you'll be able to control the amount of "give" or resistance of the needle upon impact with the skin. This enables the artist to take advantage of the softness or hardness of hit to achieve specific results. 0 no effect, 5 maximum amount of eGive.

HOW TO CHECK THE CURRENT eGIVE SETTING

- Hold down the power button until the light goes from white to solid blue.
- · Release the power button.
- The following blinking color that the LED displays indicates the Give that the unit is currently set at. For example:
 - If it blinks white, that indicates the lowest Give of 0
 - If it blinks yellow, it's currently set at level 1 Give
 - If it blinks orange, it's currently set at level 2 Give
 - If it blinks red, it's currently set at level 3 Give
 - If it blinks pink, it's currently set at level 4 Give
 - If it blinks green, it's currently set at level 5 (softest eGive setting)

CHANGING eGIVE

To raise or lower the give:

- Hold down the power button until the light goes from white to solid blue.
- Release the power button and immediately use the up or down arrows to change the give.

 The colors should change accordingly.



ADDITIONAL INFORMATION

VOLTAGE PARAMETERS

While voltage is a parameter that will vary from artist to artist, the PowerBolt has been tested to operate at a minimum voltage of around 5-Volts with a maximum voltage of 12-Volts. Depending on the type of needle configuration, or brand you use, feel free to adjust the voltage to obtain the desired performance. **NOTE: Some machines require a minimum voltage to operate correctly, please check your machine manufacturer's requirements.**

WARRANTY

Darklab warrants that the device will perform efficiently when used as intended. Should this product prove to be defective due to manufacturing issues, Darklab will repair/replace the device - free of charge. This warranty will be void if the device shows signs of having been tampered, disassembled, handled roughly, dropped, overexposed to moisture or damage resulting in compromised functionality.

HANDY TIPS

The following tips will help you get the most out of your PowerBolt and avoid potential issues:

- · Do not exceed the suggested voltage.
- Use only quality cables. A good connection will ensure consistent performance.
- Use only FDA-approved cold sterilization solutions for disinfection.
- NOT AUTOCLAVABLE.



ADDITIONAL INFORMATION

TROUBLESHOOTING

1.- Machine Manufacturer

FK Irons: 1771 NW 79th Avenue, Doral, Florida 33126

2.- Servicing Your Machine

As for any mechanical device, FK Irons strongly suggests that you service your device once a year to ensure all working parts are working as expected. This ensures the optimal condition of all working parts including internal machine clean up and fresh lubrication. Routine servicing will ensure that your machine remains functioning like the very first day. Service is subject to fees.

3.- Warning

Disconnect machine from any power before making any adjustments.

For service inquiries, please contact service@fkirons.com.
For additional tips and tutorials, please visit Youtube.com/fkirons