



CUSACK-MUSIC

MFD. IN HOLLAND, MICH. USA

TAP-A-FUZZ



Option Knob - Function depends on what else is going on. Read each description to see how to access each function:

Tap Divide - Controls how your tap will be divided. Positions are from counter clockwise, 1/4, 1/3, 1/2, 1, 2, 3, 4, 6. The Option Knob will adjust Tap Divide whenever the pedal is engaged, and you are NOT holding the Tap Switch down.

Fade-In - All the way down the pedal turns on right away, all the way up is about 4 seconds. The Option Knob adjusts Fade-In while in Bypass.

Brake Speed - Controls how fast the tempo will change when you hold the Tap switch. All the way counter clockwise is the slowest. The Option Knob adjusts this setting whenever the Tap Switch is being held down for more than 1/2 second (you are using the Brake Function).



Level - Controls the output level of the Left output. Adjust this to make the bypassed level, and effected level the same.



Fuzz - All the way counterclockwise is no fuzz, all the way clockwise is "Broken Op-Amp" and it cuts out as your note decays.



Gain - Controls the maximum gain of the Overdrive, which is modulated by the Tap Tempo waveform. The minimum gain is dependant on the waveform.



Wave - Selects one of 8 waveforms in the current bank. With 3 banks, there are a total of 24 waveforms.



Bank Switch - Selects between banks A, B, and C. See waveform images on the next page to see which waveforms are in each bank.

Clip Mode Toggle - Select the type of Clipping Diodes. To the Left is "Stock", to the right is "Crushed", and in the middle is "LED" (Asymmetrical LED clipping). Different diodes cause the overall level to change, so you may have to adjust the level after moving the Clip Mode Toggle.

Mode Jumper (Internal) - Preset and Live.

In Preset mode changing the waveform will load the saved parameters for that waveform.

In Live mode, all current settings will apply to ALL waveforms. While in Preset Mode, any



Tap Speed - Tap twice to set the tempo. It's also a modified "brake" control. If you hold it down, the Tempo slows down. If you let go and hold it again it will speed up. Every time you hold and release, it changes direction. Wherever you let go, it will stay at that tempo. It defaults to Slowing Down whenever you Engage the effect.



Bypass - Kick the switch to change from Bypass to Engaged.



IN - This is the input to the pedal. This jack dis-connects power, so unplug when not in use.



OUT - The Output jack is a Stereo output. The Right output is a modified inversion of the left channel. Make sure to set the jumper to Stereo for correct operation in bypass. While in Mono, the Right output is active while the pedal is on, but muted while the pedal is off. In Stereo mode, both outputs are True Bypassed.



DC Power Jack - This has the same pin-out as most standard pedal supplies: tip is ground, sleeve 9V.



Status LED (Red/Green) - When the effect is bypassed the LED is off. When the effect is Engaged the LED is RED. When the battery is going dead the light will blink, GREEN if bypassed, RED if on.



Tempo LED (Blue) -

This LED gives you a visual view of the tempo, and waveform.



External Tap -

External RCA jack on the back of the pedal.

This can be used as either a Tap IN, or OUT. Connect a cable from the

RCA jack to another pedal's Tap

input to use the internal switch on the Tap-A-

Whirl to tap both at the same time. Plug an external momentary switch into this jack to set the tempo remotely.



Power Consumption - ~15mA.