





N/A



INDOOR AC/RC3: BASE, WALL, CEILING

ARROWLINEAR


Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. Do not mount fixtures vertically. Indoor fixtures cannot be used for outdoor applications.


BASE MOUNT


WALL MOUNT

CANTILEVER MOUNT

These installation instructions are valid with the above Arrowlinear mounting options.

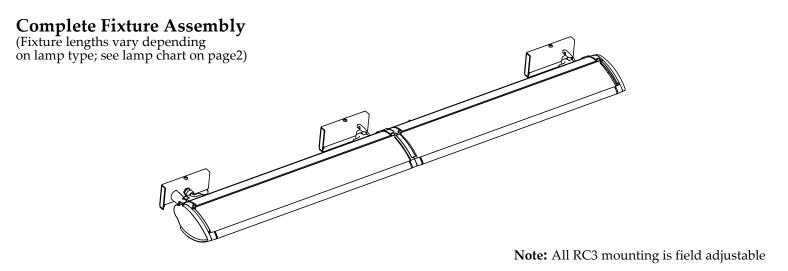

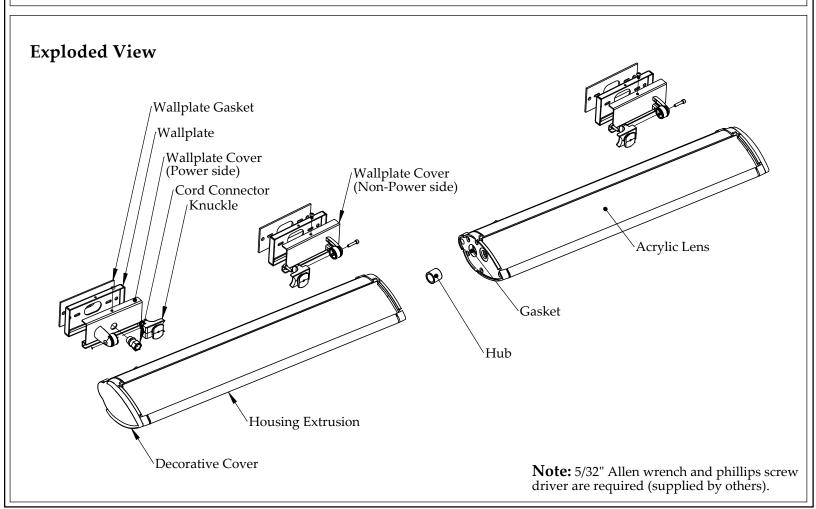

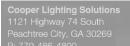







BASE MOUNT


12FT

12FT

3 X 32W

3 X 54W

3 X 44W

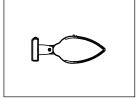

WALL MONUT

These installation instructions are valid with the above Arrowlinear mounting options.

(37 19 mm)

MIDDLE ARM

73 - 7/32N (1860mm)

N/A


CANTILEVER MOUNT

(3822mm)

MIDDLE ARM

77-9/32 (1962mm)

2.

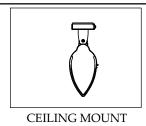

ARROWLINEAR INDOOR

AC / RC3 : BASE, WALL, CEILING

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. Do not mount fixtures vertically. Indoor fixtures cannot be used for outdoor applications.


I amn Chart

Lamp Chart				
Available	Available	Available Lamp	A- Mounting plate	B-Mounting plate
Lengths	Wattages	Types	centers in(mm)	centers in(mm)
2FT	14W	(T5)	22 - 13/16 N (580mm)	26-7/8 IN (682mm)
2FT	17W	(T8)		
2FT	24W	(T5 HO)		
2FT	22W	(LED)		
3FT	21W	(T5)	34 - 5/8IN (880mm)	38-11/16IN (982mm)
3FT	25W	(T8)		
3FT	39W	(T5 HO)		
3FT	33W	(LED)		
4FT	28W	(T5)	46 - 7/16 IN (1180mm)	50-V2IN (1282mm)
4FT	32W	(T8)		
4FT	54W	(T5 HO)		
4FT	44W	(LED)		
6FT	2 X 21W	(T5)	72 - 29/32 IN (1852mm)	76-31/32 IN (1954mm)
6FT	2 X 25W	(T8)		
6FT	2 X 39W	(T5 HO)		
6FT	3 X 33W	(LED)		
8FT	2 X 28W	(T5)	96 - 17/32 IN (2452mm)	100-19/32IN (2555mm)
8FT	2 X 32W	(T8)		
8FT	2 X 54W	(T5 HO)		
8FT	2 X44W	(LED)		
12FT	3 X 28W	(T5)	146 - 27/64IN	150-15/32IN

Note: 12FT fixtures do require a middle arm. (See lamp chart)

(T5 HO)


Mounting the Fixture Brackets

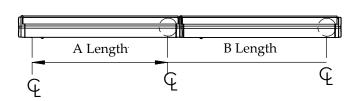

Prior to Roughing in J-Boxes:


1.Determine the location of fixture mounting and verify structure will support the weight of the fixtures. If necessary, use additional bracing to support fixture. 2.Using mounting plate centers provided in lamp chart, attach mounting arms to fixture assembly (ref. figure 1). 3. Install Horizontal J-Boxes (by others) (ref. figure 2).

Mounting Arm to Fixture Assembly

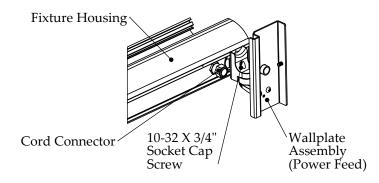

- 1. Assemble wallplate power feed and knuckle.
- 2. Once the wallplate arm assembly (Power Feed or Non Power) is assembled, place the Knuckle base horizontally into extrusion track located on back of the fixture.
- 3. Rotate the complete wallplate arm Power Feed assembly counter-clockwise 90°, and the Non-Power assembly clockwise 90°.
- 4. Adjust Mounting Arms horizontally to match the desired mounting location and tighten the 10-32 X 3/4"Socket Cap screw; use lamp chart for recommended standard spacing.

Mounting Power-side Assembly

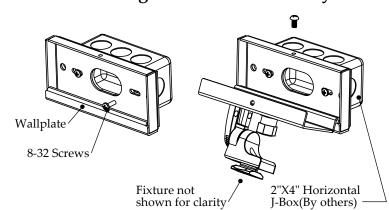


- 1. Once the RC3 mounting arms have been completely assembled, secure wallplate over the Horizontal J-box, use additional bracing to support. Using 8-32 screws for alignment purpose only, use appropriate 1/4" fasteners (by others), to mount to structure.
- 2. Use the hinge wallplate feature to hang the fixture while you wire the fixture power to the main power inside the J-box, making sure to rotate the fixture back up and secure using the provided hardware.

1121 Highway 74 South
Peachtree City, GA 30269


P: 770-486-4800



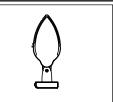





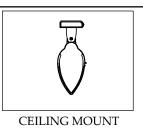

ARROWLINEAR **INDOOR**

AC / RC3: BASE, WALL, CEILING

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. Do not mount fixtures vertically. Indoor fixtures cannot be used for outdoor applications.

BASE MOUNT


WALL MOUNT

CANTILEVER MOUNT

These installation instructions are valid with the above Arrowlinear mounting options.

Power Feed


- 1. Wire the power cord (supplied) to the inside of the fixture by running the power cord through the endcap and out the back through the cord connector.
- 2. Attach all wires and ensure all connections are properly matched. Hide wires inside the fixture and attach Decorative Cover using 10-32 X 1/2" Socket Cap screw.

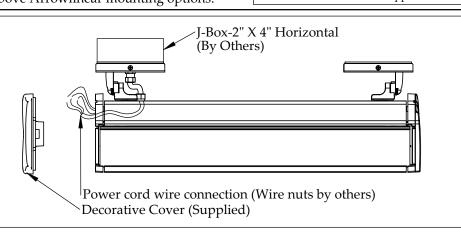

Continuous Fixture Joining


(Fixture lengths vary depending on lamp type; see lamp chart on page 2)

- 1. Run the fixture power wires through the hub and connect to appropriate power wires of adjoining fixture. All wire push nuts should be placed inside either fixture.
- 2. Attach the two fixtures together; use the 10-32 X 1-1/8" Socket Cap Screw and nut as shown. Make sure wires run through the hub and the hub is seated properly in between the endcaps.

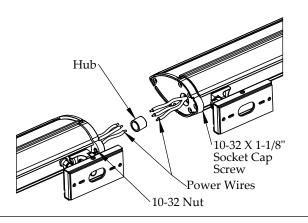


Note: Entire fixture not shown for clarity

Mounting Plate Dimensions: in [mm]

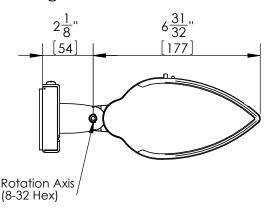

Note: Arrowlinear Wallplates are designed to accommodate 1/4" mounting hardware (by others); Hardware must meet Local / National codes and installation must be provided by a licensed contractor.

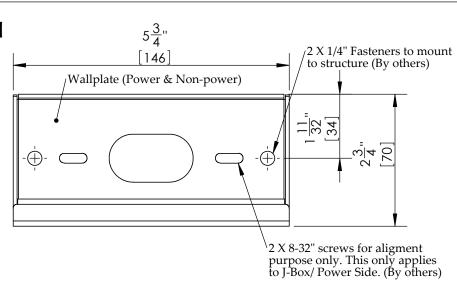

ADY111086 REV A(ECN-CL-151056)