
Installation and Assembly Instructions Mirada Area Light (MRS) Series



Installation and Assembly Instructions Mirada Area Light (MRS) Series

Luminaire Preparation and Mounting to Pole

- 1. Verify the luminaire optic type (2, 3, 5W, FT, etc.) and rotation (None, Left, Right) agree with site lighting plan for the specific pole location.
- 2. Open fixture driver compartment by loosening door fastener. Mounting hardware is located in luminaire.
- 3. Fasten luminaire to pole per the figure below. Tighten fasteners to 25 ft/lbs.
- 4. Route wires through center hole and grommet into driver compartment and make wiring connections--Terminal Block provided for wiring.

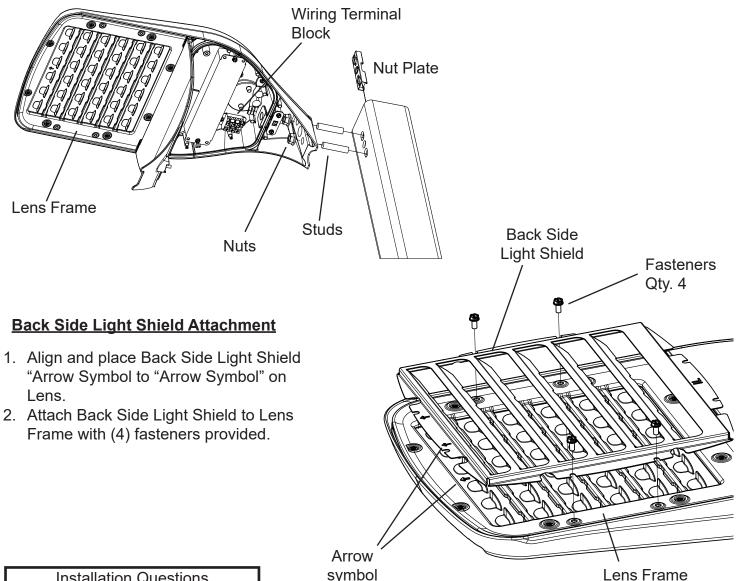

- 1. Align and place Back Side Light Shield

Installation Questions	
Call LSI Field Service Dept.	
800-436-7800 ext. 3300	

WARNING

Risk of fire, electric shock, injury or property damage

Risk of electric shock--Disconnect power to equipment before installing or servicing.

This equipment must be installed according to all applicable codes & ordinances.

Installation and service of this equipment must be performed by gualified service personnel.

Do not install damaged equipment.

Read these instructions before installing, servicing or maintaining this equipment.

Save these instructions for maintaining and servicing.

Failure to follow instructions or altering equipment could result in damage and void warranty.


Edges may cut--wear gloves while handling or servicing this equipment.

Inspect equipment for damage from shipping and handling.


LUMINAIRE INSPECTION

1. Remove the luminaire from the carton and inspect luminaire for damage. Do not install a damaged luminaire.

WIRING INFORMATION

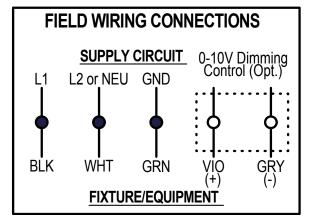

Integral Bluetooth Motion and Photocell Sensor Option – IMSBT The sensor configuration app is available for both iOS and Android devices. Search the APP Store for LSI sensor configuration and download. It is used to set up a password, change default settings and testing. If no password is set within 7 days of the sensor being powered up it will need to be reset. For complete details download the LSI Sensor Config App User Guide https://www.lsi-industries.com

 

LSI Industries Inc. 10000 Alliance Rd. Cincinnati, OH 45242 www.lsi-industries.com 753939 Rev. 12-14-20

