

INSTRUCTIONS AND PARTS LIST FOR MODEL 123

STEP NO. 1

Remove #049 brass nuts on top of opal dome lip.

Remove #370 opal dome.

Remove cardboard packing stuffer from #316 glass chimney.

Remove #316 glass chimney from #510 brass chimney holder.

Insert lamp into socket. Be sure to use lamp with wattage no greater than specified for this fixture.

STEP NO. 2

Replace #316 glass chimney into #510 brass chimney holder.

Replace #370 opal dome and tighten #049 retaining nuts.



#176 Lamp Socket
#001 Screw, Socket

STEP NO. 3

Connect lantern leads (load side) to incoming (line side) corresponding leads; white to white ; black to black ; green to green(ground), with wire connectors (not supplied).

STEP NO. 4

Loosen #030 set screw in #368 lantern base. Wedge entire lantern assembly down over post taking advantage of tapered fitter for the proper secure fit. Tighten set screw.

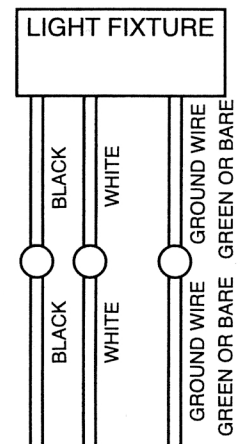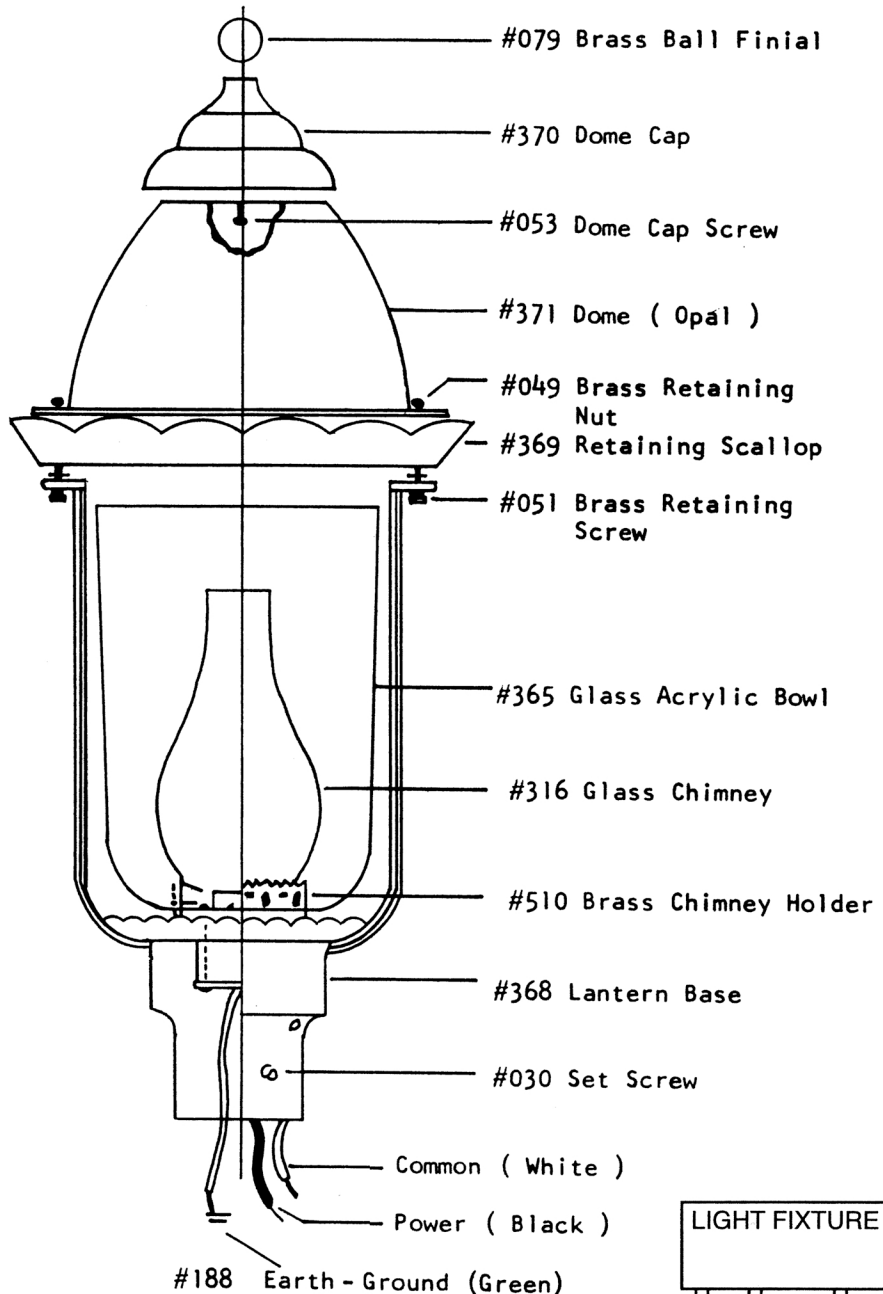

120 VOLT POWER SUPPLY

ALWAYS CONNECT BLACK TO BLACK, WHITE TO WHITE, AND BARE OR GREEN GROUNDING CONDUCTORS

GROUND WIRE MAY NOT BE PRESENT ON ALL MODELS.

Customer Service 1-877-870-9283
www.wavelighting.com

