


# INSTALLATION INSTRUCTIONS

READ IMPORTANT SAFETY TIPS BEFORE PROCEEDING WITH INSTALLATION

## SAFETY TIPS

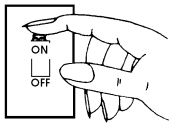


Turn fixture off! (Place wall switch in off position, if fixture has built-in switch or chain pull, switch or pull chain so fixture is off.)




Next - go to the main fuse box. If your fuse box has an ON/OFF switch, simply place main power switch in OFF position.

OR

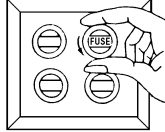


Screw-in type fuses - unscrew the fuse or fuses that control the power to the fixture or room you are working in.

1

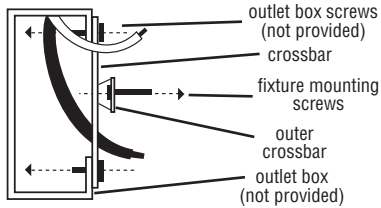


THREAD fixture mounting screws (provided) into outer crossbar. ATTACH cross bar to outlet box with outlet box screws (not provided).

2

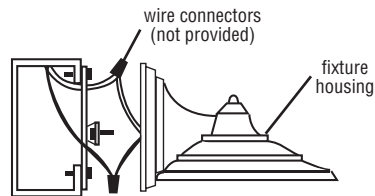


CONNECT THE WIRES. NOTE: Attach black fixture wire to black supply wire, white fixture wire to white supply wire. Do not mix them up. Use wire connectors (not provided).

3

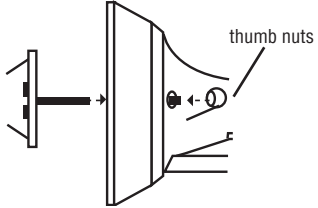


POSITION THE FIXTURE HOUSING over the fixture mounting screws and secure in place with the thumb nuts provided.

4

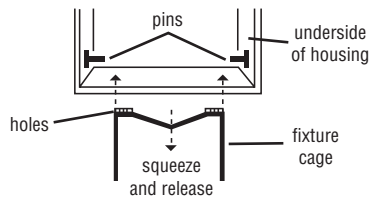


ATTACH FIXTURE CAGE TO FIXTURE HOUSING. Squeeze cage as shown. Position holes on side of cage over corresponding pins on underside of housing. Release cage - pins will snap into position.

5

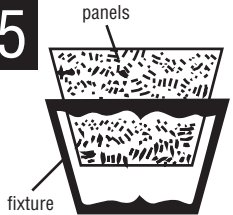


BEFORE SNAPPING HOUSING SHUT, install front and rear plastic panels first, textured side out, then drop in side panels.

6

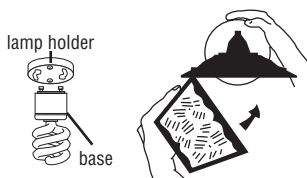

HOLD LEFT SIDE PANEL AGAINST SIDE OF CAGE. Rotate free end of cage up to the housing and snap into place. ALIGN AND INSERT the round ended pins on the bottom of the self ballasted lamp into the circular opening in the lampholder key hole slots. Grasp base and rotate clockwise. Use SBCFL, 18W, CCT 2700K with a minimum life of 10,000 hours.

7

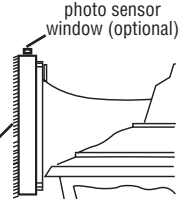

NOTE: Fixture MUST be caulked with an acrylic caulk where fixture housing meets mounting surface. This provides a water tight seal when fixture is installed.

### BALLAST AND LAMP REPLACEMENT INSTRUCTIONS

Product contains an integrated Lamp/Ballast combination. To remove, grasp plastic area on each side of bulb area and rotate counterclockwise. Replace with 18W SBCFL, CCT 2700K, with a minimum life of 10,000 hours. Use SBCFL marked - Not for use where directly exposed to water. Do not use SBCFL marked - Not for use in totally enclosed luminaire.

If lamp is marked **(Hg)** it contains mercury. Follow applicable disposal laws. See [www.lamprecycle.org](http://www.lamprecycle.org)

**COLD WEATHER STARTING INFORMATION:** For temperatures below 0°F, leave the lamp on continuously - starting with warm lamps. NOTE: If lamp starting becomes a problem in any cold weather application, remove the lamp from the fixture - bring the lamp indoors so that it becomes warm - then reinstall the lamp into the fixture and leave the fixture on continuously. Do not place lamp in an oven, microwave or similar heat producing devices.




Clean only with mild soap and water. Avoid spraying with Cleansers, Insecticides, and Pesticides that a petroleum based hydrocarbon products. These will degrade Luminaire.

1206VG18ES

# INSTALLATION INSTRUCTIONS

READ IMPORTANT SAFETY TIPS BEFORE PROCEEDING WITH INSTALLATION

## SAFETY TIPS

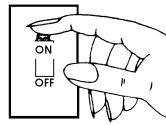


Turn fixture off! (Place wall switch in off position, if fixture has built-in switch or chain pull, switch or pull chain so fixture is off.)




Next - go to the main fuse box. If your fuse box has an ON/OFF switch, simply place main power switch in OFF position.

OR

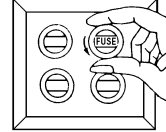


Screw-in type fuses - unscrew the fuse or fuses that control the power to the fixture or room you are working in.

1

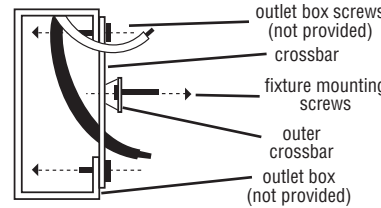


THREAD fixture mounting screws (provided) into outer crossbar. ATTACH cross bar to outlet box with outlet box screws (not provided).

2

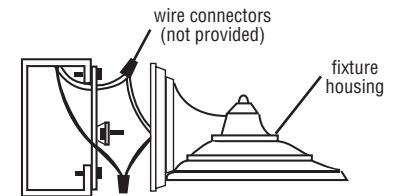


CONNECT THE WIRES. NOTE: Attach black fixture wire to black supply wire, white fixture wire to white supply wire. Do not mix them up. Use wire connectors (not provided).

3

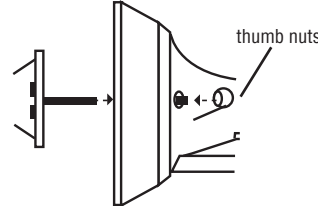


POSITION THE FIXTURE HOUSING over the fixture mounting screws and secure in place with the thumb nuts provided.

4

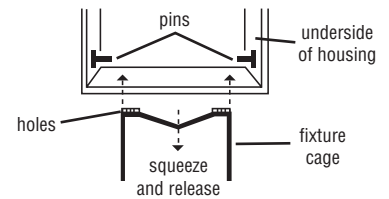


ATTACH FIXTURE CAGE TO FIXTURE HOUSING. Squeeze cage as shown. Position holes on side of cage over corresponding pins on underside of housing. Release cage - pins will snap into position.

5

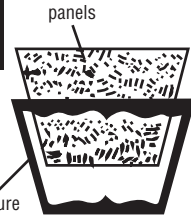


BEFORE SNAPPING HOUSING SHUT, install front and rear plastic panels first, textured side out, then drop in side panels.

6

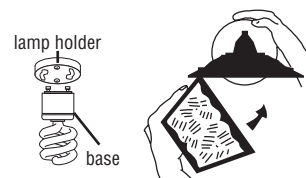

HOLD LEFT SIDE PANEL AGAINST SIDE OF CAGE. Rotate free end of cage up to the housing and snap into place. ALIGN AND INSERT the round ended pins on the bottom of the self ballasted lamp into the circular opening in the lampholder key hole slots. Grasp base and rotate clockwise. Use SBCFL, 18W, CCT 2700K with a minimum life of 10,000 hours.

7

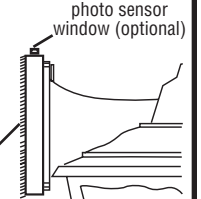

NOTE: Fixture MUST be caulked with an acrylic caulk where fixture housing meets mounting surface. This provides a water tight seal when fixture is installed.

### BALLAST AND LAMP REPLACEMENT INSTRUCTIONS

Product contains an integrated Lamp/Ballast combination. To remove, grasp plastic area on each side of bulb area and rotate counterclockwise. Replace with 18W SBCFL, CCT 2700K, with a minimum life of 10,000 hours. Use SBCFL marked - Not for use where directly exposed to water. Do not use SBCFL marked - Not for use in totally enclosed luminaire.

If lamp is marked **(Hg)** it contains mercury. Follow applicable disposal laws. See [www.lamprecycle.org](http://www.lamprecycle.org)

**COLD WEATHER STARTING INFORMATION:** For temperatures below 0°F, leave the lamp on continuously - starting with warm lamps. NOTE: If lamp starting becomes a problem in any cold weather application, remove the lamp from the fixture - bring the lamp indoors so that it becomes warm - then reinstall the lamp into the fixture and leave the fixture on continuously. Do not place lamp in an oven, microwave or similar heat producing devices.



Clean only with mild soap and water. Avoid spraying with Cleansers, Insecticides, and Pesticides that a petroleum based hydrocarbon products. These will degrade Luminaire.

1206VG18ES

This fixture may have an integral photo sensor that turns the fixture off during the day and on at night. The photo sensor is not adjustable. The fixture could possibly cycle on and off due to light reflected from nearby surfaces into the photo sensor. If cycling occurs, remove the photo sensor nut and install the swivel hood and base.



The hood and base are adjustable. The hood can be rotated and the base can be cut along the dotted line to reduce overall length. Check operation before cutting the base.

This fixture may have an integral photo sensor that turns the fixture off during the day and on at night. The photo sensor is not adjustable. The fixture could possibly cycle on and off due to light reflected from nearby surfaces into the photo sensor. If cycling occurs, remove the photo sensor nut and install the swivel hood and base.



The hood and base are adjustable. The hood can be rotated and the base can be cut along the dotted line to reduce overall length. Check operation before cutting the base.

Customer Service 1-877-870-9283  
[www.wavelighting.com](http://www.wavelighting.com)



Customer Service 1-877-870-9283  
[www.wavelighting.com](http://www.wavelighting.com)

