Factory Reset

To perform a full reset, first put the BTU2 in standby mode (headset is powered on but not connected to any devices). Make sure to turn off Bluetooth or delete the "MEE audio BT" pairing from any nearby devices that have previously been paired with the BTU2.

Once in standby mode, press and hold the Multifunction and volume up buttons simultaneously until you hear the headset say "Factory Reset Complete". All previously paired devices will be cleared from memory and a new pairing will need to be created before the BTU2 can be used.

EAR MOLD - CUSTOM SUPER SOFT WITH BLUETOOTH

Connect With Us On Social

Get the latest news about RE products and promotions!





Basic Functionality & Controls

Charging

Connect the Micro-USB charging cable to any powered USB port and to the charging port of the BTU2. The status indicator light will turn blue once the BTU2 is charged and ready for use. Close the USB port cover completely after charging for maximum sweat resistance.



Pairing

Press and hold the Multifunction button for about 4 seconds until you hear the headset say "Pairing" and the light flashes red and blue.



Open the Bluetooth menu on the device you wish to pair (usually located in Settings > Bluetooth). If needed, select "search for devices", "add new device", or "refresh".
Select "MEE audio BT" and allow pairing to complete. Use "0000" if a pin is required.
Visit the Bluetooth Support Page at MEEaudio.com/Bluetooth for additional Bluetooth pairing and setup information.

Dynamic Audio Enhancement

띾누

The BTU2 features on-the-fly audio adjustment with three audio modes:

) NATURAL: No audio enhancement.



angle) **VOCAL BOOST:** Boosts speech and vocals for more clarity and intelligibility.

[HOLD both 2 sec] - Cycle audio modes



*Product images are for illustrative purposes only and may differ from the actual product.

(during phone call)