



MAIN CONTROLS/FEATURES

- ON/OFF BUTTON
- CHANNEL/VOLUME DOWN
- 3 CHANNEL/VOLUME UP
- MODE BUTTON
- 5 CHANNEL DISPLAY
- 6 FREQUENCY DISPLAY
- SQUELCH ON/OFF INDICATOR
- VOLUME LEVEL BARS
- 9 LEFT EARPHONE JACK
- RIGHT EARPHONE JACK

840 DERITA ROAD, CONCORD, NC 28027 1-800-272-7111 www.racingelectronics.com





BASIC OPERATION

TO TURN UNIT ON OR OFF. PRESS AND HOLD BUTTON 1 FOR 5 SECONDS

TO INCREASE OR DECREASE VOLUME PRESS BUTTONS 2 OR 3

CHANGE CHANNELS

PRESS & HOLD BUTTON 4 UNTIL DISPLAY BLINKS
PRESS BUTTON 1 TO ADVANCE 100
CHANNEL S AT AT TIME

PRESS & HOLD BUTTONS 2 3 TO INCREASE OR DECREASE FREQUENCY BY ONE

PRESS BUTTON 4 TO LOCK CHANNEL

SOUELCH ON/OFF

TURN SQUELCH OFF - PRESS BUTTONS 2 4
AT THE SAME TIME

TURN SQUELCH ON - PRESS BUTTONS 3 4
AT THE SAME TIME

"HOT JUMP" FEATURE

PRESS BUTTONS 2 & 3 SIMULTANEOUSLY TO "JUMP" FROM LOCKED IN CHANNEL TO MRN/PRN. REPEAT TO "JUMP" BACK TO PREVIOUS CHANNEL

TROUBLESHOOTING

- ALL THEAR IS STATIC . RESURE SQUELCHIS ON
- THE DISPLAY SHOWS NUMBERS COUNTING TO 10 OVER & OVER -CHANGE THE BATTERY
- DOES NOT SOUND AS CLEAR AS IT DID THE LAST TIME I USED IT CHANGE THE BATTERY
- IT SOUNDS ALITTLE SCRATCHY OR ROUGH BACK THE VOLUME DOWN A NOTCH OR TWO