

To prevent possible hearing damage, do not use the SWITCH® at high volume for a long period of time. Always lower the volume level of the device you connect to the SWITCH® Audio Input port before connecting.

FC ID: 2ATRP-SWITCH

Model: SWITCH®

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

#### WARNING:

Modification of this device to receive cellular radio telephone service signals is prohibited under FCC rules and Federal Laws.

The complete declaration is available online at: www.racingelectronics.com



www.RacingElectronics.com

1-800-272-7111

Series: SWITCH®, SWITCH® RACER, SWITCH® MRN, SWITCH® PRN

Version: 3 Revision: 0





Product images are for illustrative purposes only and may differ from the actual product.

- Power On/Off Button
- 2 Volume or Channel Up/Down Buttons
- 3 Programming Button
- 4 Channel 1 Preset Button
- Channel 2 Preset Button
- 6 Scanning modes Button (\*Not available on SWITCH RACER)
- (7) IN (Auxiliary Audio Input), OUT (Earphone Jack)
- Channel or Sub Channel Indicator
- (9) Channel Number Display
- 10 Volume Level Bars
- (11) Communication Indicator
- 12 Low Battery Indicator
- (13) Frequency Display
- 14 Preset or Scan Mode Selection Indicator
- (15) Keys Lock/Unlock Indicator

## **OPERATION MODES**

## PROGRAMMING STEPS

#### Channel 1 or 2 Preset Listening

- Press 1 or 2 to hold on the preset 1 or 2 channel.
- Long press or to display the preset 1 sub channel info on the display.



#### Scanning

- Press **SCAN** to scan between Preset 1 and 2.
  - \*Not available on SWITCH® RACER model.



#### Scanning with Priority

- Hold scan and then press 1 or 2
   at the same time to set the preset 1 or 2
   as a priority on the scanning process.
- The preset 1 or 2 selection indicator is blinking when the priority is set.
  \*Not available on SWITCH® RACER model.



#### Keys Lock/Unlock

 Press 3 times on the power On/Off button to lock or unlock the device keys.
Frequency will be hidden by dashes.



#### **Channel Bandwidth Selection**

Change the default channels bandwidth from the 12.5 to 25Khz. Power ON by pressing Prog ○ and Power at the same time for 3 seconds. The SWITCH® will display its version date during 5 seconds. During that time, press 2 3 times to change to 25 Khz or 1 3 times to revert to 12.5 Khz.

#### **10** Channel Programming

- Long Press on the Prog ○.
- The channel number is blinking.



Prog O

#### 2 Navigate through the Channels

- Use 🔼 🔽 to select a channel.
- Long press to skip up by 100.
- Press Prog O for sub channel programming or long press on or long press or long press or long press or long preset 1 or 2.



# 3 Navigate through the Sub Channels

- Use 🔼 🔽 to select a sub channel.
- Long press to skip up by 10.



Note: OFF = Not Considered

### Save Channel and Exit Programming Mode

- Long Press on 1 or 2 to save the frequency as a Preset 1 or 2.
- Exit programming mode by pressing the Prog  $\bigcirc$ .



Product images are for illustrative purposes only and may differ from the actual product.