



eelo®

CYGLO LITE
Cycling Backpack with LED Signal Light
User Guide

Thank you

for purchasing the eelo cycling backpack.

In order to use and maintain this product correctly, please read this user guide completely.

This product has been specifically designed to keep cyclists safe at dusk/night time. When in use the bright LED signal display will alert motorists of your presence and next intention.

Special Instructions:

1. The LED signal lights are only for the purpose of alerting people behind/around you, they cannot be treated as traffic signal lights.
2. This product can also be used for other outdoor activities such as jogging etc.
3. All rights to the following statements are reserved by eelo.


1

What this package contains:

- One backpack
- One LED display
- One remote controller with adjustable plastic mount
- One charging micro-USB cable
- One user guide

Components

1. "Forward" button
2. "Standby/flashlight" button
3. "Stop" button
4. "Turning Left" button
5. "Turning Right" button
6. Direction illustration
7. On/Off button
8. USB charging cable

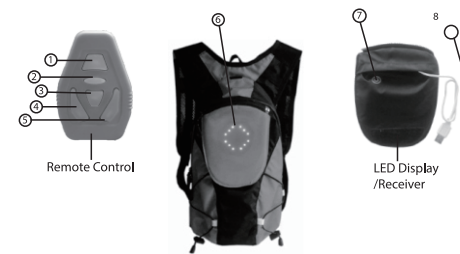

2

Specifications

Wireless frequency: 2.4GHz
Transmission distance: 3 meters

Remote Control

Battery: 2 x CR2032 batteries (non-rechargeable)
Working time: 3 months

LED Display

3.7 V, 500 mAh rechargeable Lithium battery (directly plugs into the USB power adapter to charge)
Working time: 8 hours continuously
Charging: DC 5 V 500 mA

For best performance, charge the LED display or 1.5 hours before use.

Backpack

Material: Nylon
Product Size: 15" x 10" x 4"
Weight: 280 g

3

LED Display:

Power on: Press the On/Off button.
Four different LED signal lights will light up one by one

The LED display will then go into stand-by mode. It won't be re-activated until the remote controller is on.

Power off: Press the On/Off button while the LED display is working normally. The LED signal lights will go off immediately.

Remote Control:

Press the green turning Left or Right button, the LED Display will indicate turning Right or Left.

Press the green forward button, the buttons backlight will flash for 3 second and the LED Display will indicate a flashing green rhombus pattern.

Press the red stop button the buttons backlight will flash for 3 second and the LED Display will indicate a flashing red exclamation warning mark.

4

Reset Communications:

To reset the communication between the Remote Control and the LED Display hold both the Left and Right buttons on the remote control and then hold down the ON/OFF button on the LED display until all four button on the Remote Control flash simultaneously.

Mount Installation


As shown below, find a suitable position on the handle bar to fix the remote control mount. Use the four cable ties included to securely strap the mount to the handle bar. Once connected simply slide the remote control onto the mount until it is fixed in place.



5

Replacing the remote control battery

As shown below, loosen the three screws on the back of the controller. Open the battery cover and insert two new non-rechargeable 3-volt Lithium Button Cell batteries (size CR2032).

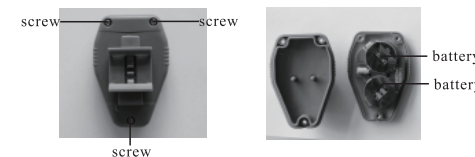

Charging the LED Display

When the Left and Right buttons on the remote control light up together it means that the LED display needs to be charged.

To charge, open the pouch in the bag where the LED display is contained and plug the USB cable into a charging point. When connected to a USB charging socket the LED Display will show a charging signal light. When the LED Display is charged this light will disappear.

6

FAQ's

Q. There are no lights displaying on the remote control.
A. The remote has most likely run out of battery charge, replace the batteries as per instructions on page 6.

Q. There is no signal being displayed on the LED display.
A. The device has most likely run out of battery charge, recharge the LED display and try again.

Contact Us

Should you need assistance using your CYGLO LITE LED Backpack, please call or email our friendly technical support team who will be happy to help.

Email: support@eeloproducts.com

Phone: UK: 0800 652 7780
US: 408 - 872 - 6822
International: +44 800 652 7780

Address: eelo Products, Lakeside Technology Park
Swansea, Wales, UK, SA7 9FF.

Website: www.eeloproducs.com

7