




## Tungsten Portable Heater Igniter Pack Replacement

Tool Required – Phillips Head Screwdriver

**Step 1:** At back of heater head, remove four screws with Phillips head screwdriver. (Figure 1)

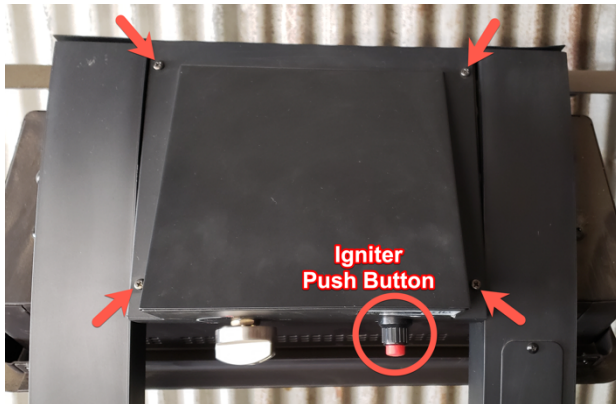

**Figure 1**


Remove Access Panel from heater to expose inside where Igniter Module to be replaced is located.

**Step 2:** Unscrew Igniter Push Button Cap counter-clockwise to remove Push Button and AAA battery within.

(Figure 1)

**Step 3:** Pull on end of Igniter Wire at Igniter module to remove Igniter Wire from Igniter Module. (Figure 2)

**Step 4:** Unscrew Nut to remove (Figure 2)

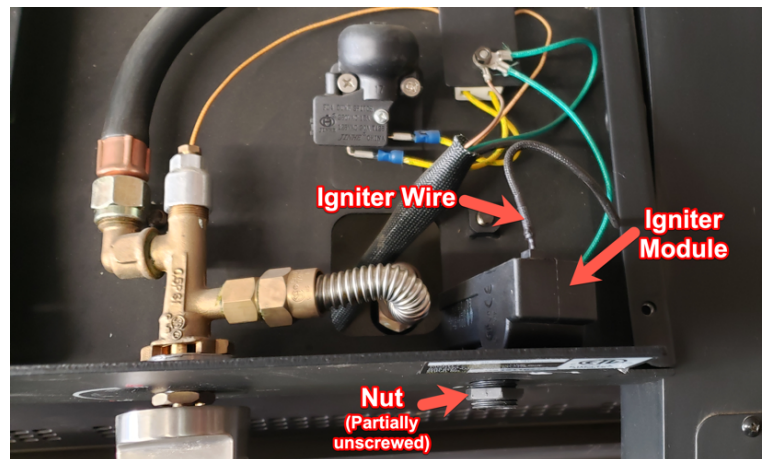


**Figure 2 – view after cover**

**Step 5:** Lift Igniter Module to remove. (Figure 3)

**Step 6:** Reverse steps above to install new Igniter Module:

- Place new Igniter Module in hole.
- Secure Igniter Module with Nut.
- Attach Igniter Wire into Igniter Module with a good push.

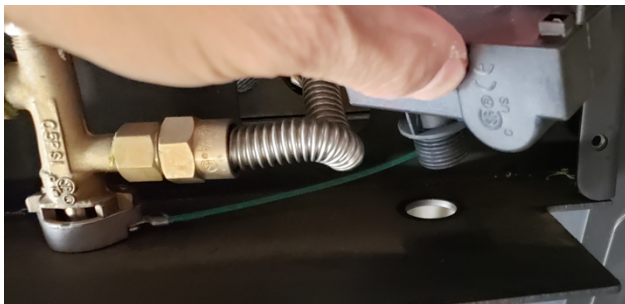

**Figure 3**

- Reinstall AAA Battery (+ end out) and screw Push Button Cap Tightly.
- Test igniter function for sparking. If no spark, ensure battery is + (bump) end out (into cap), and/or replace with fresh battery.
- Reinstall cover plate securely with four screws.



### Rasmussen Iron Works, Inc.

12028 Philadelphia St.  
(562) 696-8718  
info@rasmussen.biz

Whittier, CA 90601 U.S.A.  
FAX: (562) 698-3510  
www.rasmussen.biz

Quality Products Since 1907