




SMK168

INSTRUCTION MANUAL




### Included

 Please make sure that the following items are included.



Manual

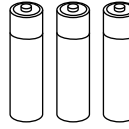 

AA size Battery x 3

The Singing Machine Company, Inc.  
4060 E Jurupa Street, Unit B  
Ontario, CA 91761-1413 USA

Copyright © 2017 All Rights Reserved.  
Please retain this sheet as it contain important notes.

PRINTED IN CHINA  
168-1706-ENG01

### Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

#### No Power

- Power is not on; press the **POWER** button to turn power on.
- Confirm that the batteries are installed correctly.

#### No Sound or Missing Segment on Display

- Running out of batteries. Replace old batteries with new batteries by following guideline in the following section.
- Switch off the power by pressing **POWER** button. Wait 5 minutes and turn it on again.

### Specifications

#### Speaker

Impedance.....4 Ohms

#### POWER SECTION

Battery.....DC 4.5V ("AA" cell 1.5V x 3) (batteries included)

DIMENSION.....6.9 x 4.6 x 6.2 inches / 17.5 x 11.7 x 15.7 cm

WEIGHT.....1.2 lbs / 0.5 kgs

Specifications are subject to change without notice.

Please retain the instructions for further reference, as they contain important information.

#### BATTERY PRECAUTIONS

 
- The precautions below should be followed when using batteries in this device:
1. Warning – Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
  2. Use only the size and type of batteries specified.
  3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
  4. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
  5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
  5. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow the battery manufacturer's directions.)
  7. Remove the batteries promptly once its charge is low.
  8. Clean the battery contact and also those of the device prior to installing the battery.

[www.singingmachine.com/kids](http://www.singingmachine.com/kids)

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.

## Before you get started

**1** Remove the battery compartment cover on the bottom of the unit by using a Phillips-head screw driver.

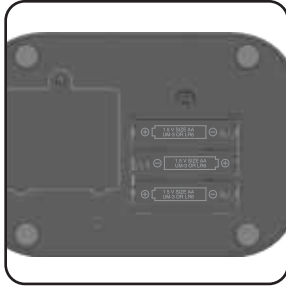


**2** Insert three (3) "AA" size alkaline batteries as indicated on diagram.

**3** Replace the cover tightly before operating.

### CAUTION:

 
- Replace all batteries at the same time.
- Do not mix old batteries with new batteries.

**3** Press number keys **0 - 9**  
**Note:** Inputs are limited to two digits

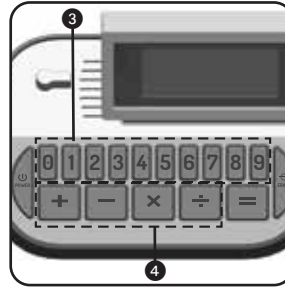

**4** Press **+ / - / X / ÷** button and then press number keys **3** again  
**Note:** Inputs are limited to two digits

 
**5** Press **=** button to get solution  
**Note:** Calculator will solve problems where solution is greater than 1

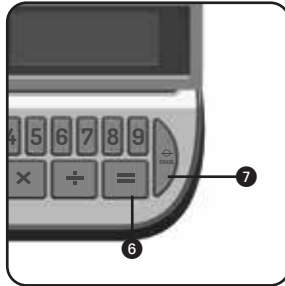


**6** To start the next calculation, press **ERASE** button.

## Operations

 **1** Press the **POWER** button **ONCE** to turn **ON** the unit.  
Press the **POWER** button **AGAIN** to turn **OFF** the unit.

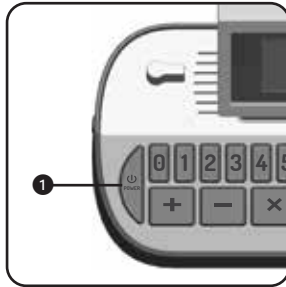

 
**2** Slide the language switch to choose **ENG** (English), **FRE** (French) or **SPA** (Spanish)

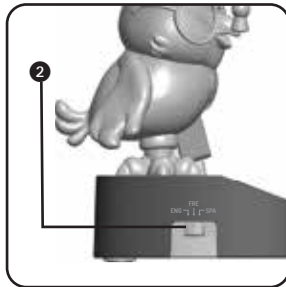

**7** Press **ERASE** button when screen displays "ER"



## Warnings

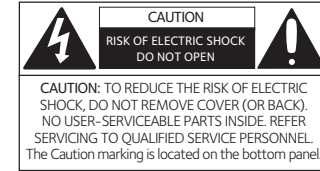 

**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

**DRIPPING WARNING:** This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

**VENTILATION WARNING:** The normal ventilation of the product shall not be impeded for intended use.

### Warnings:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. To parents recommending that the adaptor be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the adaptor should not be used until properly repaired.

**WARNING: CHOKING HAZARD -** Small parts. Not for children under 36 months.

**FCC WARNING:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The rating information is located at the bottom of the unit.

**INDUSTRY CANADA NOTICE:** This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

Class II equipment symbol.

This symbol indicates that the unit has a double insulation system.

PORTABLE CHART WARNING (typed in compliance with IEC60335-1)



## Important Safety Information

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
13. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.
14. **CAUTION - ELECTRICALLY OPERATED PRODUCT -** Not suitable for children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electrical shock.
15. Recommendation to the parents that the adaptor be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the adaptor should not be used until properly repaired.
16. **CAUTION ! ELECTRICALLY OPERATED PRODUCT -** Not recommended for children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.