



Fleck 7000SXT 64,000 Grain Programming Guide

Entering Master Programming Mode: Set the Time Of Day display to 12:01 P.M. Press the Extra Cycle button (to exit Setting Time of Day mode). Then press and hold the Up and Down buttons together until the programming icon replaces the service icon and the Display Format (DF) screen appears. You are now in master programming. Set the programming as shown below, after setting each parameter correctly, push the cycle button to get to the next parameter.

DF (Display Format)	-GAL-	Press Cycle
VT (Valve Type)	-dF2b-	Press Cycle
CT (Control Type)	-Fd-	Press Cycle
C (Capacity)	-64-	Press Cycle
H (Hardness)	-Set to your water hardness-	Press Cycle
RS (Reserve Selection)	-RC-	Press Cycle
RC (Reserve Capacity)	-150-	Press Cycle
DO (Day Override)	-Set between 14-28-	Press Cycle
RT (Regeneration Time)	-2:00-	Press Cycle
B1 (Backwash)	-10-	Press Cycle
BD (Brine Draw)	-60-	Press Cycle
B2 (Backwash)	-10-	Press Cycle
RR (Rapid Rinse)	-10-	Press Cycle
BF (Brine Fill)	-16-	Press Cycle
FM (Flow Meter)	-t1.2-	Press Cycle

After you're back to your clock, set your time to the actual time of day (do NOT push the cycle button unless you want to force a regeneration at the regeneration time set), you're now finished programming your unit, enjoy your soft water!