







Important: Read All Instructions Prior to Installation

Function introduction

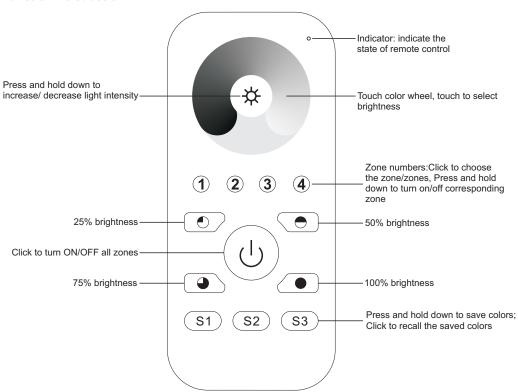

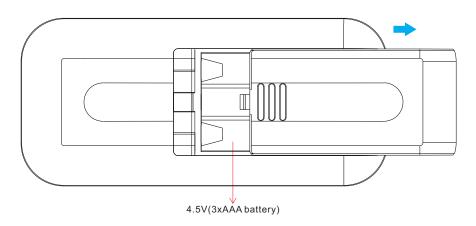

Front side

Bottom side

Product Data

Output	RF signal
Operation Frequency	869.5/916.5/434MHz
Power Supply	4.5V(3xAAA battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	120x55x17mm

 
- · Control 4 zones of RF receivers separately.
- · Single color controller
- · High sensitive & high stable touch color wheel, fast & precise color control.
- · Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20

Safety & Warnings

- This device contains AAA batteries that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

Operation

Pair to RF receivers with learning key:




Pairing to RF receiver without learning key:

Power off and power on the receiver -> turn on the remote, then click a zone number twice and press and hold it continuously and quickly within 10 seconds -> LED light connected with the receiver will flash to indicate successful pairing to the selected zone.

Play the remote after pairing:

Turn on RF remote > Click the paired zone > Touch color wheel \(\bigcolor \) or other buttons to do the controlling

 Save a scene:



Recall the saved scenes:

Turn on RF remote \Rightarrow Click any of the zone numbers you \Rightarrow Click any button of **S1/S2/S3** to recall a saved scene

Delete pairing with learning key:

Press and hold down "Learning Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.

Option 1: have all the receivers in the same zone, like zone 1 Zone 1 RF remote Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4 Zone 1 Zone 2 Zone 3