



TELESCOPIC HOOD

TH604MSL

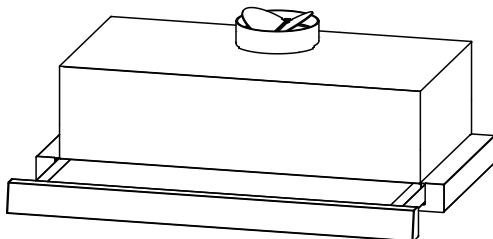

TH602MSL

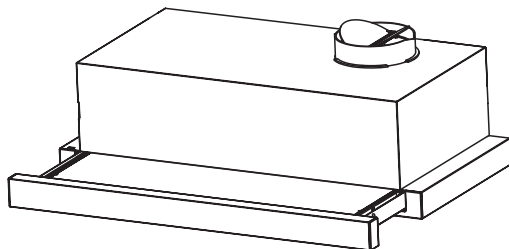

INSTALLATION MANUAL USER MANUAL

Read this manual carefully before operation to avoid risk of accident or damage to the appliance


Images in this manual are for reference only, refer to physical unit for exact dimensions.

TABLE OF CONTENTS










SECTION	PAGE
Important Notes	3
Components	4
Dimensions	5
Installation	6
How to Use	9
Maintenance	10
Troubleshooting	12

Congratulations on the purchase our cooker hood. Before installing and/or using the cooker hood carefully read all the instruction.











IMPORTANT NOTES

 The instructions for use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.




INSTALLATION


-  The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
-  The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
-  Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
-  For Class I appliances, check that the domestic power supply guarantees adequate earthing.
-  Connect the extractor to the exhaust flue through a pipe of minimum diameter 125mm. The route of the flue must be as short as possible.
-  Do not connect the extractor hood to exhaust ducts carrying combustion flumes (boilers, fireplaces, etc.).
-  If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of air circulation must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have good ventilation to guarantee the entry of clean air. When the extractor hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the extractor hood.
-  In the event of damage to the power cable, it must be replaced by the manufacturer or by the technical service department, in order to prevent any risks.
-  If the instructions for installation for the gas hob specify a greater distance specified above, this has to be taken into account. Regulations concerning the discharge of air have to be fulfilled.




USE

-  The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
-  Never use the hood for purposes other than for which it has been designed.
-  Never leave high naked flames under the hood when it is in operation.
-  Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
-  Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
-  Do not have a naked flame under the extractor hood due to risk of fire.
-  This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are being supervised or given instructions concerning the use of the appliance by a person responsible for their safety.
-  Children should be supervised to ensure that they do not play with the appliance.
-  Cleaning and user maintenance shall not be made by children without supervision.
-  "CAUTION: Accessible parts may become hot when used with cooking appliances".

MAINTENANCE


-  Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
-  Clean and/or replace the Filters after the specified time period (Fire hazard).
-  Clean the hood using a damp cloth and a neutral liquid detergent.

 on the packaging indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences on the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

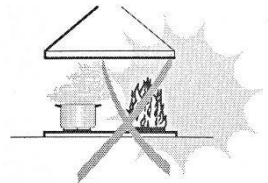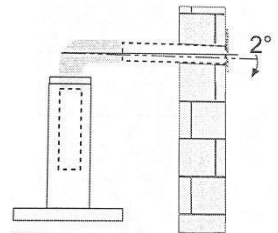
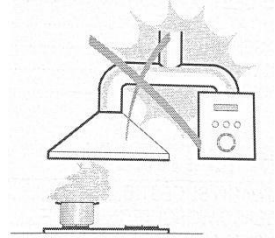


COMPONENTS




Ref.	Qty.	Product Components
1	1	Hood Body, complete with: Controls, Light, Motor, Filter.
2	1	Butterfly valve
3	2	The Activated Charcoal filter (1 / 2 optional)
4	4	Screws 5 x 50
5	4	Wall Plugs

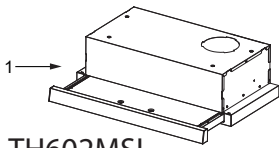

TH602MSL

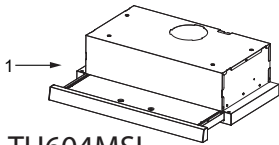
 


TH604MSL

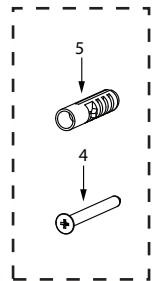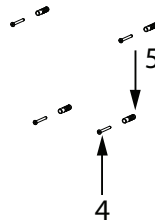
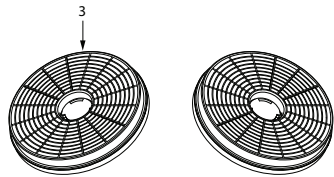


DIMENSIONS

unit : mm

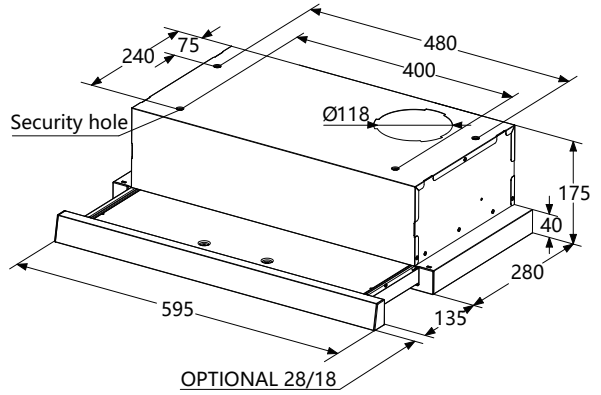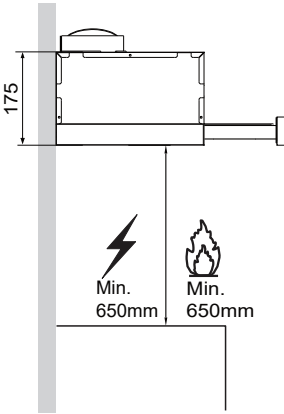


TH602MSL

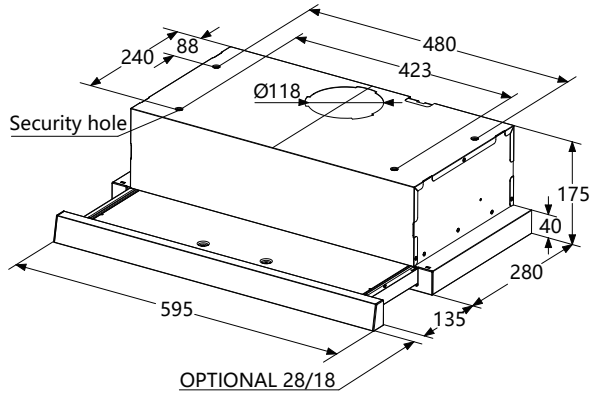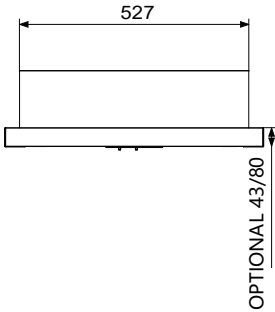

TH604MSL

INSTALLATION




METHOD 1

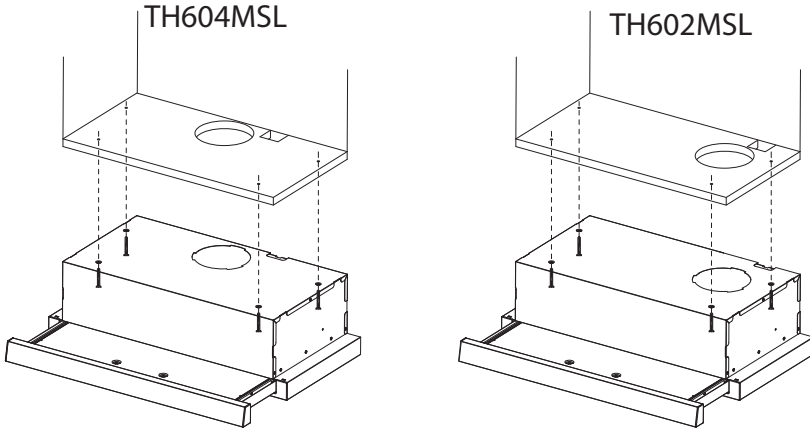


- Referring to the above diagram, align the position of the hood with the cabinet. Insert the 4 screws (supplied) into the screw holes and tighten.
- Screws should be fastened firmly, ensure that the hood is securely fastened to the cabinet and is stable before using.


Warning
When cutting or drilling into wall or ceiling, do not damage electrical wiring or other hidden utilities.

METHOD 2

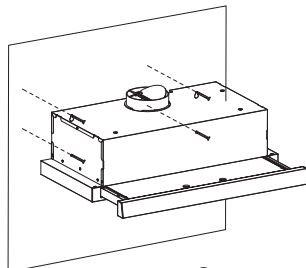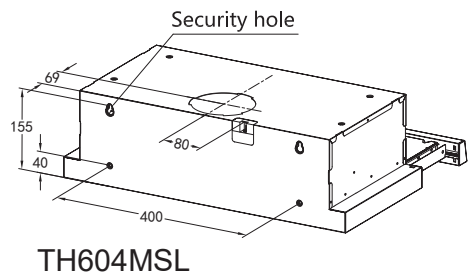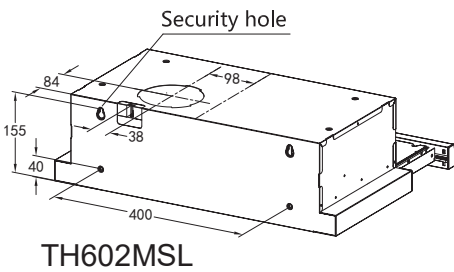


- ✎ To mount on the wall, insert and secure 2 screws (supplied) into the relative position of the 2 screw holes on the back of hood.
- ✎ Also install screws in the security hole positions, to further stabilise the hood.
- ✎ Ensure hood is secure and stable before using.


 Warning

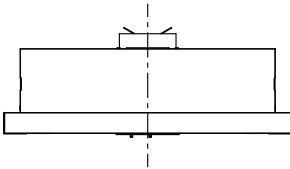

Right

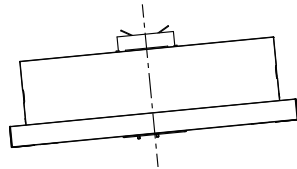


Wrong

 Warning



The extractor hood must not be installed and connected to flues where other appliances are installed and share power connection with other appliances

 VENTING MODES

If your hood has dual mode extraction, locate the venting knob on the front of the motor casing. Select extraction mode.




Venting mode selector

	Ducted mode: Exhaust is extracted outside the house.
	Recirculating mode: Exhaust is filtered and recirculated inside.


DUCTED MODE

Insert the butterfly valve into the flue hole, and turn clockwise to secure. The butterfly valve must be used for ducted mode.

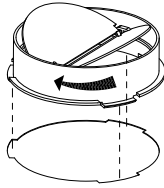

When installing the ducted version, connect the hood to the outlet vent using either a flexible or rigid pipe ϕ 150 or ϕ 120 mm, the choice of which is left to the installer.

- To install a ϕ 120 mm air exhaust connection, insert the reducer flange on the hood body outlet over the butterfly valve.
- Fix the ducting using sufficient pipe clamps (not supplied). Use minimal bends in the ducting for optimal power, increasing bends may reduce performance of your hood
- Ducting can extend either through the wall or the roof. Do not terminate the vent system in an attic or other enclosed areas.
- Remove possible charcoal filters.

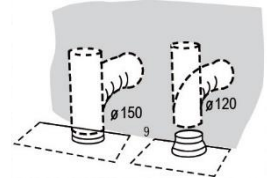

RECIRCULATING MODE

- The butterfly valve does not need to be installed when using recirculating mode.
- Ensure the venting knob points to recirculating mode and the vents in front of the hood are not blocked when hood is use. Ensure both charcoal filters and aluminum filters are installed. Charcoal filters need to be replaced at regular intervals, refer to Maintenance section.

HOW TO USE

Before using

Check the condition of the appliance :

- ☛ Check whether there are visible defects.
- ☛ Check that all parts of the appliance have been securely fitted.

Switching on/off


- ☛ Pull out the fascia and locate the switches on the right.
- ☛ There are 2 speeds for the motor and on/off switch of the light.

Motor Operation

- ☛ [○]=Off
- ☛ [|]=Low Power Setting
- ☛ [||]=High Power Setting

Light Operation

- ☛ []=Off
- ☛ [☼]=On

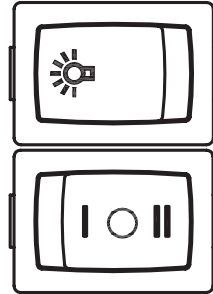


MAINTENANCE

GREASE FILTERS

CLEANING ALUMINIUM FILTERS


- ✎ The filters must be cleaned every month of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.
- ✎ Press the anchoring hinge to release them.
- ✎ Remove the filters one by one pushing them towards the back side of the hood unit and simultaneously pulling downwards.
- ✎ Do not bend the filters. Before fitting them again into the hood make sure that they are completely dry. (The color of the filter surface may change over time but this has no effect on the filter's efficiency).
- ✎ When re-fitting the filters into the hood ensure they are mounted in the correct position and the anchoring hinge is at the front.

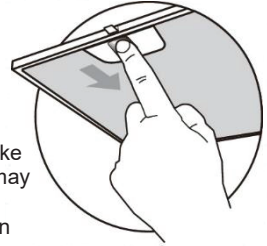


ACTIVATED CHARCOAL FILTERS (RECIRCULATING MODE)

These filters are not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently with heavy usage. Contact the retailer or manufacturer to purchase replacements.

- ✎ Remove the aluminum filters
- ✎ Remove the saturated activated charcoal filters.
- ✎ Fit the new charcoal filters.
- ✎ Reinstall the aluminum filters.

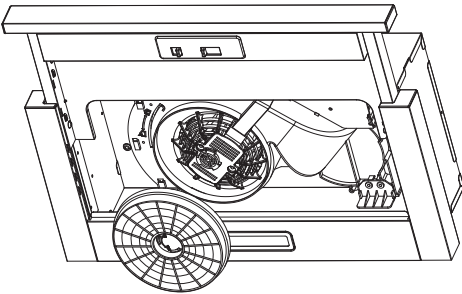

TH602MSL

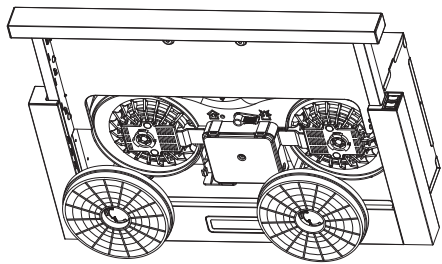

TH604MSL

Charcoal filters

IMPORTANT

When activated carbon/charcoal filters are attached, the suction power maybe compromised.

LIGHTING


LIGHT REPLACEMENT


Changing the light

Lighting inside the appliance is provided by a 1.5W LED light.

To replace the LED light, proceed as follows:

1. Disconnect the appliance from the mains or switch off the circuit breaker.
2. Remove the metal filters (see Cleaning and Replacing Filters) .
3. Remove the light by levering its fitting from the hood body(this may require pressure or force to be applied) and disconnect the connector of the light.
4. Replace the light with a new one of the same type, making sure that you connect the light with the light cable correctly.
5. Install the metal filter back in place.

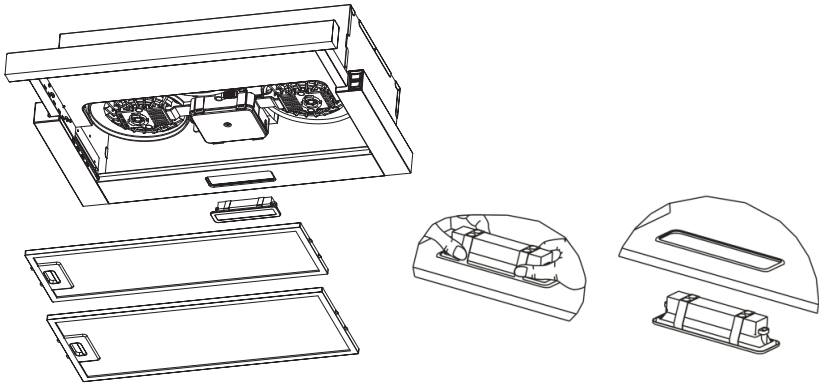

	Max power	Voltage	Picture	Lamp Cap	ILCOS D code
Self-ballasted LED modules	1.5W	220-240V	 Square/Diameter:33.2mmx120mm	/	DBS-1.5- H-33.2/120

DISPOSAL OF ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

TROUBLE SHOOTING

Symptoms	Possible Cause	Action
Does not function	No electrical supply	Check that the plug is connected.
		Check that the main switch is turned on.
Poor airflow	Aluminum filters grease clogged	Clean the filters and replace when it is dry
	Charcoal grease filters clogged	Replace charcoal filters with new sets
Motor running but no airflow	Butterfly valve jammed	Contact technician
Motor cuts after a few minutes	High temperature safety device activated	The kitchen is not sufficiently ventilated
	The hood is installed too near the cooking stove	The hood must be at least 65cm from stove
Strong cooking smell	Charcoal filters not installed	In re-circulating mode, charcoal filters must be installed
Oil dripping onto stove	Aluminum grease filter saturated	Wash the aluminium grease filters
	Aluminum grease filter saturated	Wash the aluminium grease filters
Whirring sound	Foreign object in contact with fan blade	Contact technician