
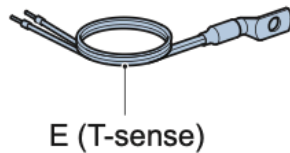
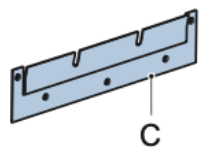



Included

Quattro 12V 24V 48V 3000VA 230Vac

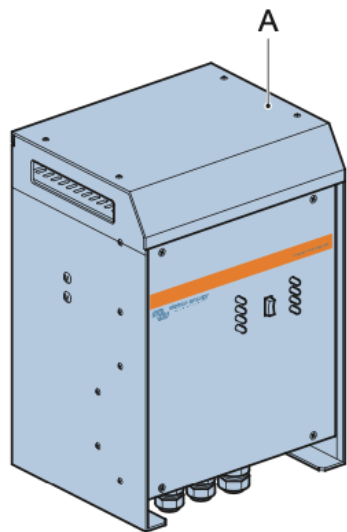


For fuse values:  
refer to the user manual


Fuse (not included)

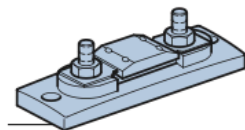


Not included

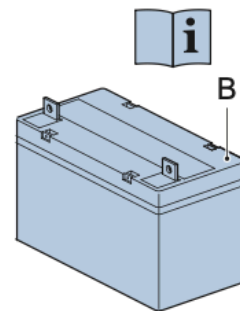


Battery

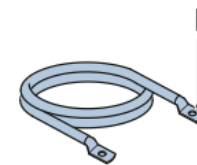



Battery Cable +

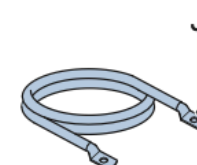


Battery Cable -

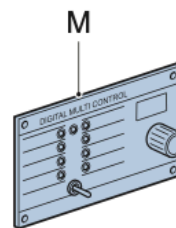


Remote control

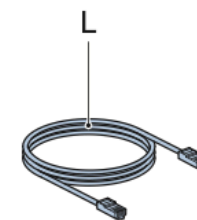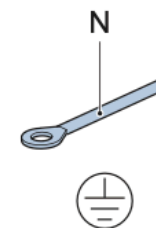


UTP-Cable

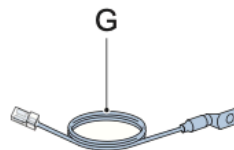


TR-Charge

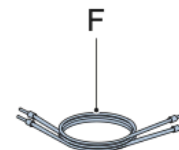


GND-relay

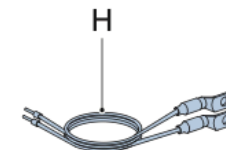


V-sense

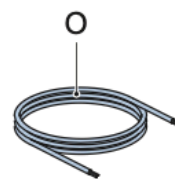

AC-OUT

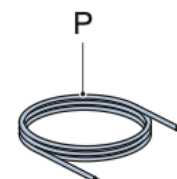

AC-IN

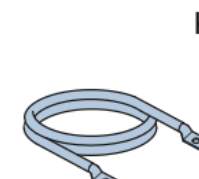

Battery Link 1x (2x12V)  
Battery Link 3x (4x12V)