 


# Watex SP-01 Aquamatic Timer Operation Manual

## A. Product Includes

 
1. Aquamatic Timer . 2. DC 5V USB charging cable 3. 1.5V Alkaline rechargeable battery x 4 pc 4. Tubing 5. Filter 6. Mounting Adaptors 7. Installation Manual

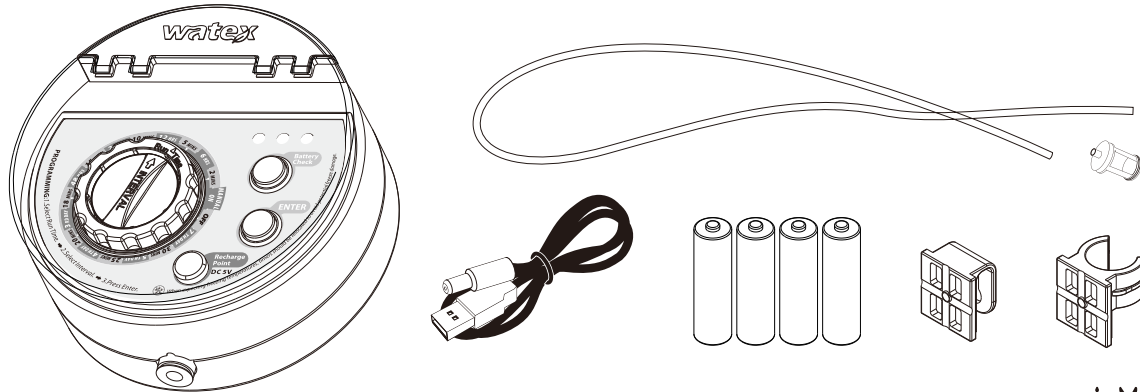


You will need: ✂

## C. How To Inset/Replace the Batteries on Aquamatic Timer

- 1 Use screwdriver to remove the two screws
- 2 lift up the battery cover.
- 3 Insert 4 AA batteries, be sure to insert (+) and (-) terminals are aligned correctly.
- 4 Close the battery cover. Use screw driver to secure the batter cover.

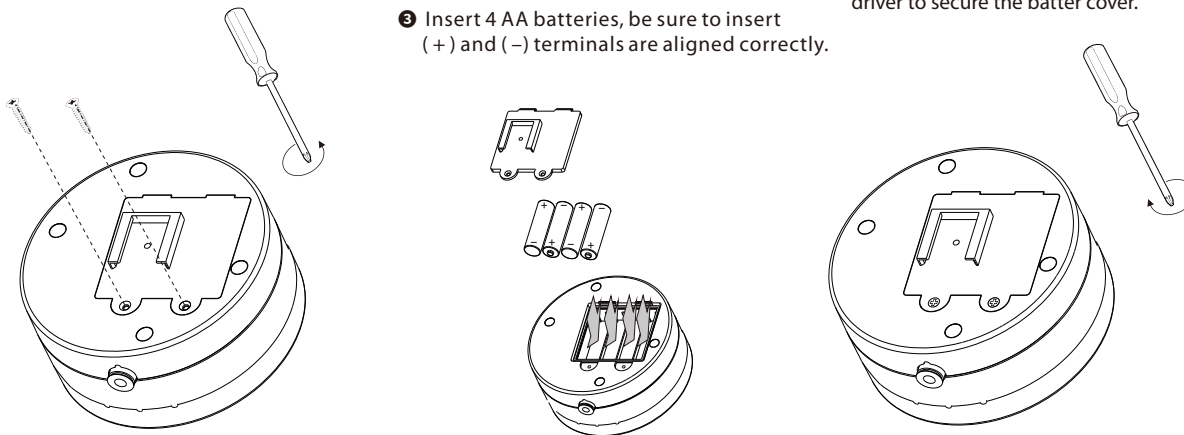

## B. Aquamatic Timer Overview

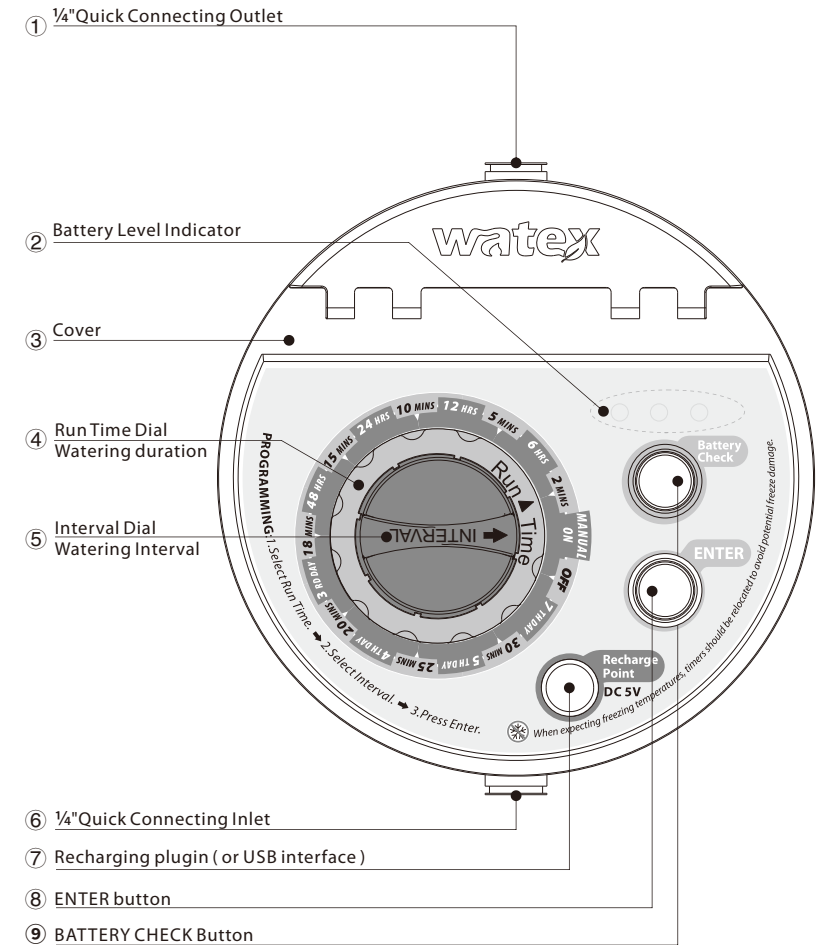 

# Watex SP-01 Aquamatic Timer Operation Manual

 
 
 
## D. Programming Automatic Irrigation

### Set Up Automatic Irrigation Schedule

**1 RUN TIME:** Rotate the dial to select the duration of watering run time you preferred. For example, in the diagram, the watering run time is set for 18 minutes.


**2 INTERVAL WATERING:** Rotate the dial to select how long to pass before the next watering. For example, in the diagram an interval of 24 hours will cycle the program once every 24 hrs.

**3 Press ENTER** button to accept the setting. Shortly after, the Battery Level Indicator lights will be started to flashing from left to right indicate the setting is been entered.

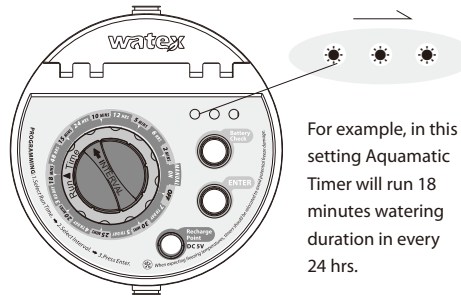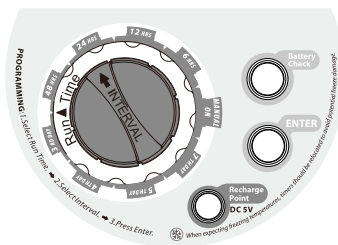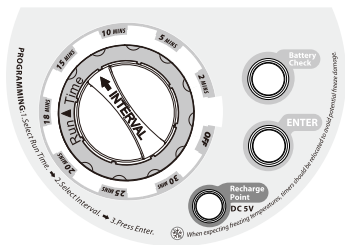

For example, in this setting Aquamatic Timer will run 18 minutes watering duration in every 24 hrs.


### Manual Mode

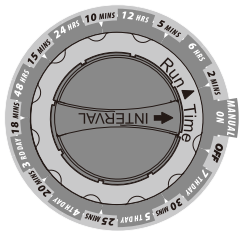 

1. Rotate the Interval Dial to select **MANUAL**.
2. Rotate Run Time Dial to select watering run time.
3. Press **ENTER** button to accept the setting, shortly after it will be started watering for the duration of selected run time.

For example, in the diagram shown a 2 minutes watering run time.

### OFF Mode

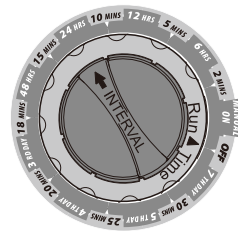 

- Rotate Run Time Dial to select **OFF**, then press **ENTER** button. The timer will stop the **MANUAL** or **AUTO** watering.

**Note:** Rotate the dial from the OFF position, the timer will be back to previous watering setting without pressing the **ENTER** button again.

## E. Battery Check, Battery Level Indicator and Recharge

1. Press **BATTERY CHECK** button to check the battery level.

icon mean battery level is low, icon mean battery level is medium, icon mean battery level is full.

2. When battery level is low Aquamatic will begin beeping.

3. To stop the beeping: a) Battery change, removing battery cover and install new 4 AAA (1.5V) Alkaline batteries. Make sure battery cover is securely closed. b.) Or to charge rechargeable batteries by connecting USB cable to the recharge point interface. (Note: Rechargeable batteries included)

### Beeping Sound

Aquamatic will begin beeping in the two following situations:

1. When the battery level is low. User can follow steps in (F.) to change or recharge the batteries.
2. Water level is low. When there is insufficient water in the water tank, Aquamatic will begin to make beeping sound to remind user to refill the water, when the water tank is refilled, the beeping will stop.

## F. Connecting/Disconnecting 1/4" Watering Tubing

1. Use scissor to cut tubing to the preferable length.
2. Push down the blue inlet buckle to connecting/or disconnecting tubing.

