

# CACTUS™

## KidoPlay


Interactive Smartwatch for Kids

User Manual



[www.cactuswatches.com](http://www.cactuswatches.com)

# Getting Started

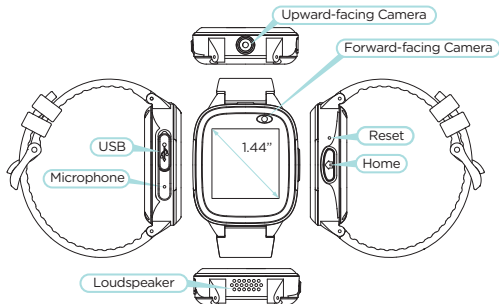

## Charging the KidoPlay Smartwatch

Adult operation required. To charge the battery, connect the smartwatch to a computer with the included micro USB cable.

Lift up the rubber cover of the micro USB port on the left side of your watch. Insert the micro USB cable (small end) into the micro USB port on the watch, Insert the larger end of the micro USB cable into a spare USB port on the computer. A USB port is usually marked with this symbol



The battery will continuously charge whilst connected, and you can open PC to find folder smartwatch to transfer data at the same time.

Monitor the watch regularly throughout the charging process. When the battery is fully charged, a full battery symbol displays on the screen (digital clock face, not on analogue clock face). Disconnect the watch from the computer.

**Note:** It will take approximately 3 hours to fully charge the battery. The actual charging time depends on the power supply, the remaining charge and the ambient temperature of the charging environment. The optimum ambient temperature is 0C-40C (32°F-104° F). If your watch needs longer than 3 hours to fully charge, please try charging from a different USB power source.

## Battery Life

The time the battery lasts between charges depend on usage. Like other electronic devices, more frequent usage will mean the battery will drain more quickly. Some activities will be more demanding on the battery, such as taking photos and videos. The expected battery life is shown below. This is based on the assumption that the screen is turned off when not in use.



Condition	Battery Time
Low Usage	2 weeks
Typical Usage	2-3 days
Heavy Usage	1 day

## How to Operate the KidoPlay Smartwatch

Long press the Home Button to power the watch on.

Press the home button to wake the watch up. Press Home Button for 3 seconds to wake up the watch from standby. When the clock is displayed on screen, press the home button to go to the home menu. When the battery level is low, only the clock display function is available. We recommend recharging the battery as soon as possible before further use. Long press the Home button to turn the Smartwatch off.

## How to use the shortcut in clock faces

-  When in Clock Faces, swipe up the screen, tap the mouth icon to hear the automatic voice tell the time.
-  When in Clock Faces, swipe down the screen, tap the trumpet icon to mute or unmute the smartwatch.

## Clock Display

When the home button is pressed, the clock will be displayed.

Tap the center of the screen to switch the clock face between analogue and digital. Swipe left or right on the screen to see more clock faces.

Press the home button to display the home menu for selecting other activities.

### Digital clock faces




### Analogue clock faces



### Digital clock faces



### Analogue clock faces

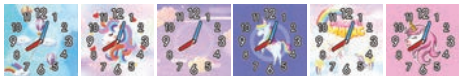

# Functions



## Home Menu

Press the home button  to display the home menu, the following functions are available:

- Games
  - Basketball Shoot Master
  - Bee War
  - Pinball Hit
  - Ultimate Racing
  - Car Grab Goods
- Camera
- Photo Gallery
- Video Recorder
- Video Player
- Pedometer
- Time Tools
  - Alarm
  - Time
  - Stopwatch
- Voice Recorder
- Calculator
- Calendar
- Time Teacher
- Sticker Camera
- Music Player
- Setting

**Note:** Tap the icon to enter the activity. Swipe left or right to scroll through the menu pages .



## Games

There are 5 built-in games on the smartwatch. Swipe the screen to see the game icons. Then tap one to play.



### Basketball Shoot Master

Game Instruction: Press the basketball to shoot. When the backboard is going to move to the middle, control to shoot.



### BeeWar

Game Instruction: Tap the screen left or right to move the fighter to shoot. Purple enemies need to be hit twice. Score as many points as you can! You have a total of three opportunities.



### Pinball Hit Bricks

Game Instruction: Destroy all bricks to progress to the next level. White bricks give a special 3-ball bonus. Blue bricks need to be hit twice. Score as many points as you can!



### Ultimate Racing

Game Instruction: Hold the car to move left and right to switch lanes. The car in front may drop gold coins. Eat as many gold coins as possible. Avoid collision, you have only one chance.



### Car Grab Goods


Game Instruction: Collect as many coins as possible by moving the platforms.



## Camera

Press  to take a photo.

Tap  to view the photos.

Tap  to swap between the two cameras (upward-facing and forward-facing)



## Photo Gallery





Tap Photo Gallery to browse the captured photos.

The latest file will be shown first, tap the arrow icons or swipe the screen to see the previous or next file.

Tap bin on screen to delete the photo.




## Video Recorder

Press the video button  on the screen to begin video recording. Tap  to stop video recording. Tap  to swap between the two cameras (upward-facing and forward-facing). Tap  to view the video gallery.







## Video Player

Tap the video gallery  to view videos. The latest file will be shown first. Tap the arrow icons to see the previous or next video. To delete a file, tap Option to delete.




## Pedometer

Press the icon  to enter this function. Tap  start step, distance and calories counting, tap  to stop or pause counting, tap  to clear.

**Note:** The data is updated in real time, and this function can be run in the background.



## Voice Recorder

Tap  to start voice recording.

Tap  to save the recording.

Tap  to play the last recording.

Tap  to delete the recording.

 
Use the arrows to select previous or next recording.






## Time Tools



### Alarm

To change the alarm setting, select the Alarm icon from the main menu. Tap the clock icon  on screen to enter the alarm function and change the alarm time. Choose the time you want, and then press ok.

Tap the green check mark icon  on the screen to enter the alarm function, and to turn on / off the alarm. Tap the music icon  on screen to choose the alarm music. Tap  to save.

How to set your alarm time:

Select the hour and minute by swiping up or down on the hours and minutes. Tap  icon to confirm the chosen time.




Note: when the alarm has been set, the alarm icon appears only on the digital clock face (in order to maintain the aesthetics of the analogue clock face).



### Timer

Tap the timer icon on the screen to select timer function. Press on screen to enter and set timer time, tap on OK to confirm.

Tap the play icon  to start the timer.



While the timer is running, tap  to pause the countdown, then tap  again to resume. Tap  to stop the countdown and reset the timer.



### Stopwatch

Tap the stopwatch icon on the screen to select stopwatch function.

Tap the play icon  to start the stopwatch.

While the stopwatch is running, tap  to pause the timer, tap  again to resume.

Tap  to stop the timer and reset the stopwatch.






## Calculator

Use the calculator app for basic mathematical calculations.



## Calendar



Use the calendar to view the date. If the date shown is incorrect, please go to the Settings  menu to reset the date and time information. There is a different wallpaper for each month.



## Time Teacher

The time teacher is a friendly Panda who can tell the time.

Tap the Hour or Min (minutes) icon to select the time you want the Panda to say.

Tap  to increase by an hour/ minute. Tap  to decrease by an hour/ minute. Tap the clock or the panda to tell the time.




## Sticker Camera

Tap  to take photo.

Tap the arrows to choose cartoon frame.

Tap  to view the photo gallery.

 
Tap  to switch cameras (upward-facing or forward-facing).



## Music Player


To upload music to the watch, use the Micro USB cable to connect your watch to a computer/laptop. Copy any MP3 music files to the watch folder "My Music". After transfer is complete, safely eject the watch from your computer and unplug the USB cable.

Select the Music Player  icon from the main menu, then press play 



## Parental Control

Set time-limits for how long games can be played per day.

To use, go to the Settings  menu and tap the Parental Control submenu.

Tap and hold on the screen for three seconds, you will be asked to identify a colour on the screen and tap three times to confirm. Once this has been completed, you will gain access to the parental controls.

Select between a daily limit of 15, 30, 60 or 90 minutes, or no limit. You can also choose to disable the games completely.

Tap the  icon to confirm the selection.

Note: when you reset the watch, the time limit for games will need to be reset.

## Settings

In settings, swipe left or right on the screen to scroll through different setting submenus. Here you can adjust the following items:

- Brightness
- Brightness Time
- Volume
- Wallpaper
- Date
- Time
- Time Format
- Advanced
  - Language
  - Storage
  - Reset
- Parental Control

### **Tips:**

When you touch the screen, ensure your entire finger is pressing the screen and hold for a second. Do not use your fingernails.

To view photos, videos or voice audio on your laptop/ computer, connect the watch using the included Micro USB cable. Photos, videos and voice audios can be found in the “Photos,” “Videos” and “Audios” folders.

## **Common troubleshooting**

### **The watch is not turning on**

- Hold the Home Button for 3 seconds to turn off, then hold the Home Button again to turn back on.
- There is a small hole next to the Home Button for resetting. With adult supervision, insert the end of an unfolded paper clip to press the internal button and manually perform a hard reset. Remove the unfolded paper clip once complete, and charge the watch for about 5 seconds till screen shows charging label, then remove the charge cable and long press the Home Button to turn on the watch.
- If it still doesn't work, try to recharge the battery and try again (refer to the battery recharging section for details).

### **The watch is not charging**

- Try to charge the watch with a different micro USB cable.
- Check if the computer's USB port or adapter you are using to charge the device (not supplied) is working with other electronic devices.
- If still not working, perform the hard reset method as described above.

- When screen shows “Low Battery” warning, please charge the watch in time. (If the watch is in a low battery situation frequently, it will affect battery life.)
- If watch is not used for more than 7 days and cannot be charged, battery will go into a dormant state, please charge the watch at least 30 minutes to activate the battery.

## **Screen display is abnormal**

- Hold the home button for 3 seconds to turn off, then wait 30 seconds. Hold the home button again to turn back on.

## **Cannot connect to computer**

- Check the connections on the micro USB cable between the watch and the computer. Ensure the cable is securely connected at both ends.
- Hold the home button for 3 seconds to turn off, then wait 30 seconds. Hold the home button again to turn back on.
- Unplug from the computer and reconnect.

## **Image taken is not clear**

- Make sure the lighting conditions of the environment are good.
- Check to see if the camera lens is clean. If you find some dust or dirt on it, please try blowing on the lens, and gently wiping the lens with a dry cloth.

## **Not enough memory/storage space**

- If you have run out of memory, you will need to delete some of your files. These may include photos, videos, voice recordings, and music files. You can transfer these to your computer before deleting from the watch.

- Alternatively, to delete all data, head to Settings > Advanced > Storage Location and clear the memory.

## Basic Specifications

Model No.: CAC-138

Display: 1.44" Touch Screen

Screen Resolution: 128\*128

Video Resolution: 176\*144

Storage Capacity: 32Mb+32Mb+128MB

File Format: Photos: Standard Baseline JPEG

Video: AVI (Motion JPEG)

Connectivity: Micro USB Charging & Data Transfer Cable

Battery: 400 mAh Li-on Polymer Battery (included)  
(non-replaceable)

Protection class: Water and dust resistant (IP67)

Do not submerge in water, not suitable for showering,  
bathing or swimming

## Caution

- Supervise your child at all times when using this product.
- The product contains electrical components that could cause injury if not handled properly.
- Do not open the enclosure or disassemble the product.
- Do not expose the product to extremely high or low temperatures.
- Do not leave the product in direct sunlight for an extended period of time.
- Do not dispose of the product in a fire, the built-in battery can explode.
- The product features a built-in battery, which is not user replaceable.
- Keep the watch and battery dry.

- If you notice signs of damage to the product, cease use.
- Pedometer – the distance travelled may be inaccurate. It is for reference only and should not be used as any navigational reference.
- Prolonged contact may contribute to skin irritation or allergies in some users. If you notice any skin irritation, please discontinue using the product.
- If you find the time between charges is considerably shortened with no change in usage, the battery could be nearing the end of its life. The battery life varies from battery to battery depending on storage, operating conditions and environment.
- Examine the charging cord periodically for conditions that may result in the risk of fire, electric shock, or injury to persons such as damage to the cord, housing, or other parts. In the event of such conditions, the cord should not be used until properly repaired or replaced.

## Care and Maintenance

- Keep the rubber cover of the micro USB port closed tightly while it is not in use in order to prevent dust or water from getting into the micro USB port.
- Keep the watch clean by wiping it with a slightly damp cloth.
- Keep the watch out of direct sunlight and away from any direct heat source.
- Do not drop the watch on a hard surface and do not expose it to moisture or submerge in water.

## Warranty

This product is warranted to be free from defects in materials and workmanship for a period of 1 year from date of purchase. This warranty covers manufacturing and mechanical defects but excludes band and screen damage, or damage resulting from improper handling, lack of care, accidents, defects caused by normal wear and tear, physical damage to the surface of the watch, and damage caused by immersion in water.



**WARNING**

Not suitable for children under 3 Years!



[www.cactuswatches.com](http://www.cactuswatches.com)