


Operating Manual of 12-Digit Multifunctional Pointer Watch

Buttons and full display:

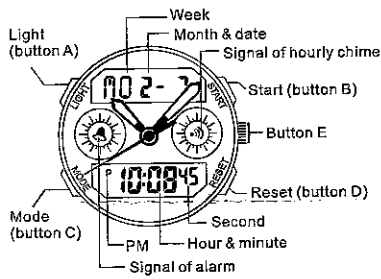


Function description:

- ◆ Normally display the hour, minute, second, date, month, weekday
- ◆ 12/24-hour option
- ◆ EL backlight
- ◆ Hourly chime and Daily alarm
- ◆ Chronographic

Comparison table of English abbreviations in watch:

SU-Sunday, MO-Monday, TU-Tuesday, WE-Wednesday, TH-Thursday, FR-Friday, SA-Saturday, SPL-split time, ALM-alarm, Sig Chime-hourly chime, A(am)-morning, P(pm)-afternoon (for 12-hour system), H-24-hour system

Product function modes:

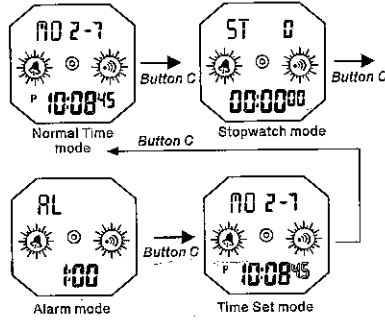

- ◆ In the Normal time mode, press the button C to shift with Frequencies as above;
- ◆ The EL backlight will be lighten for 3 seconds if button A pressed in any mode.

Stopwatch function:

- ◆ In the Normal time mode, Press button C into stopwatch mode;
- ◆ In the stopwatch mode, firstly press the button B to activate the stopwatch and secondly press the button B to stop it, when the stopwatch stops, press the button D to make the stopwatch return to zero;
- ◆ In the stopwatch mode, press the button B to start timing and press D to enter the state of split timing,

- secondly press the button B to quit the split timing and enter the state of ending stopwatch; if quitted from the split timing, press the button D to display the time of stopwatch and secondly press the button D to make the stopwatch return to zero; in operating, press the button C to return to the time display mode and stopwatch is working in the background;
- ◆ The display scope of stopwatch is 23 hours, 59 minutes and 59.99 seconds;
- ◆ The stopwatch is accurate to 1/100 second.

Alarm Set:

- ◆ In the Normal time mode, Press button C twice Into Alarm set mode;
- ◆ press the button D to shift "minute" and "hour", press the button B to adjust the value;
- ◆ In the alarm mode, press the button B to open and close the signal of alarm "ALM"; the signal of hourly chime "SIG"; If the signal appears, it is started and if it disappears, it is closed; the signal of "ALM" and "SIG" will appear in the circle;
- ◆ In case the alarm is activated, the alarm will ring for 20 seconds and then stop when it comes to the set time;
- ◆ in case the hourly chime is activated, the alarm will ring once when it comes to the hourly o'clock.

Time Set:

- ◆ In the Normal time mode, Press button C 3 times into Time set mode, the "second" is flashing; press the button B to make the "second" return to zero; press the button D to select "minute", "hour", "date", "month", and "weekday", press B to adjust the chosen value, after set, press C to confirm and return Normal time mode.