


# INSTRUCTION MANUAL


## ALARM CHRONOGRAPH MODULE



## HOW TO CHANGE THE DISPLAY MODE

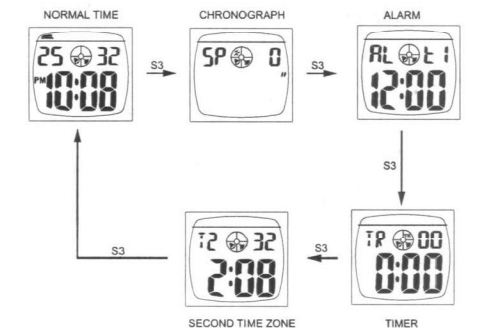


## HOW TO SET NORMAL TIME/CALENDAR

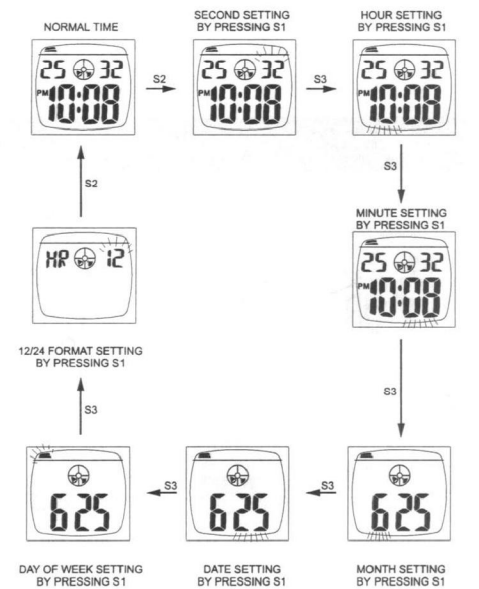

## CARE OF YOUR WATCH

- This watch contains electronic components. Never attempt to open the case or remove the back cover.
- Do not operate push buttons below the surface of the water while swimming or diving.
- Should water or condensation appear in the watch, have the watch checked immediately. Corrosion of electronic parts can occur inside the case.
- Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
- Avoid exposing the watch to extreme temperature.
- Clean the watch with soft cloth and clean water only. Avoid using chemicals, The waterproof gasket will corrode.
- Keep your watch away from the conditions of strong electric field and static electricity.


## REGULAR DISPLAY AND BUTTON OPERATION

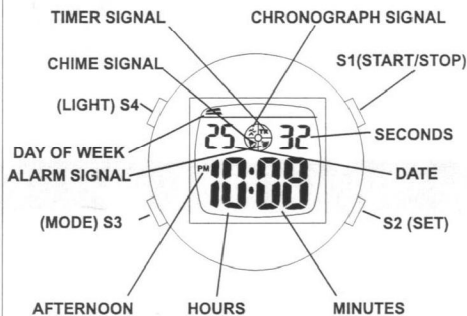


(Battery: CR2032)

- HOLD S1 BUTTON, MONTH & DATE WILL DISPLAY.
- EL IS TURN-ON FOR THREE SECONDS WHEN S4 BUTTON IS DEPRESSED.
- WHEN S1, S2 AND S3 BUTTONS ARE DEPRESSED SIMULTANEOUSLY, LCD ALL-ON, EL-ON AND BUZZER-ON WILL OCCUR.


## HOW TO USE THE CHRONOGRAPH

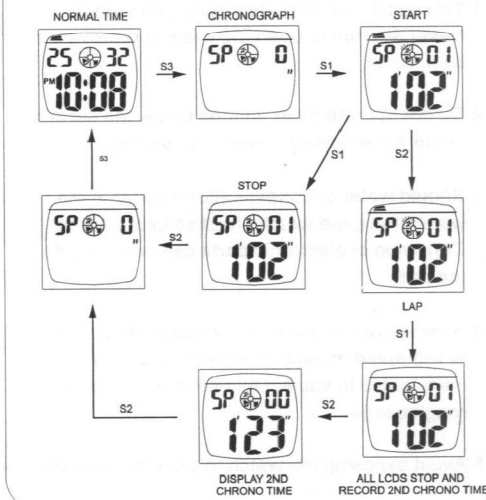


## HOW TO SET ALARM TIME

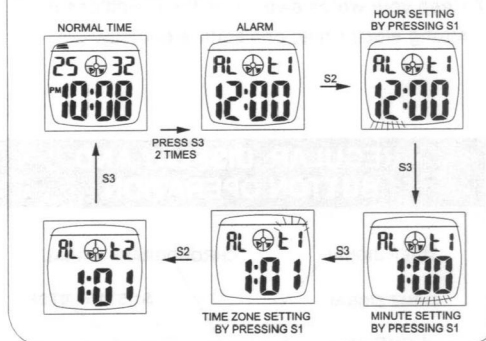

## ALARM & CHIME ON/OFF

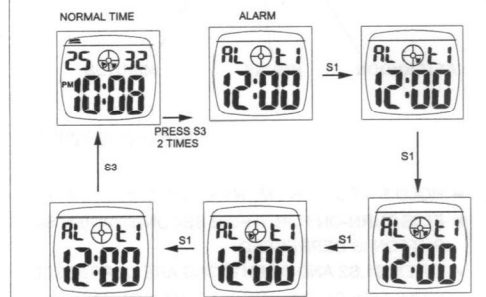

## HOW TO USE TIMER

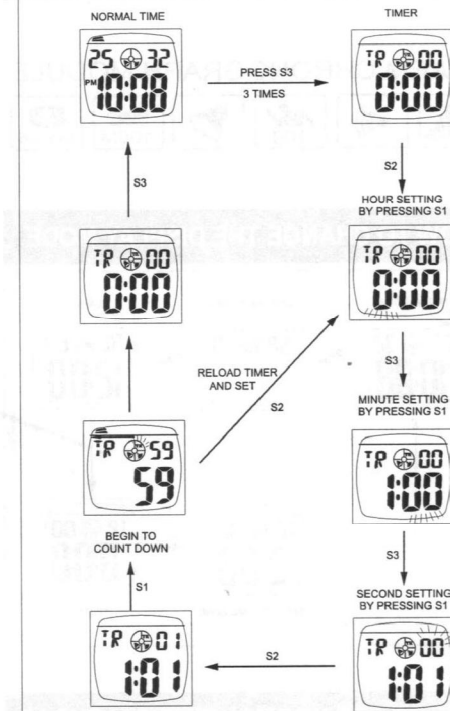

## HOW TO SET SECOND TIME ZONE

