



CHANGING YOUR DELUXE REMOTE ALARM / IMMOBILISER PERSONAL IDENTIFICATION NUMBER (PIN)

The system fitted to your vehicle is designed to allow emergency over-ride by means of a four digit PIN. This sheet details how to customise your vehicle security system with your own four digit PIN.

| | | | |
|--|--|--|--|
| | | | |
|--|--|--|--|

RECORD NEW PIN HERE

TO ENTER A NEW "PIN", CARRY OUT THE FOLLOWING PROCEDURE: -

- Disarm system by pressing valid remote control or using existing PIN.
- Turn the ignition switch from the ACC position to the ON position 19 times
 - ACC is the position that first powers your radio.
 - ON is the position that runs the engine.
 - Count each time key is in ON position.
- Leave the ignition switch in the ON position when the 19th count is reached.
- The vehicle indicators will flash once when system is ready to begin counting new PIN.
- Enter the 1st digit (thousands) by pressing the main button on the remote control the required number of times. Each successful press will cause confirm with a flash of the indicators.
- After the required number has been entered wait until the indicators flash twice.
- Repeat the previous two steps for the remaining digits.
- When the final digit has been entered the system will flash the indicators 4 times to confirm a new "PIN" has been entered.

Should you experience difficulty altering your Emergency PIN, please do not hesitate to contact one of the approved installers on

1-800-CYCLOPS (1-800-2925677)