



CHANGING YOUR TOUCH KEY IMMOBILISER PERSONAL IDENTIFICATION NUMBER (PIN)

The system fitted to your vehicle is designed to allow emergency over-ride by means of a four digit PIN. This sheet details how to customise your vehicle security system with your own four digit PIN.

--	--	--	--

RECORD NEW PIN HERE

FOR MODELS: P165.

TO ENTER A NEW "PIN", CARRY OUT THE FOLLOWING PROCEDURE: -

- Disarm system by inserting a valid Touchkey or using existing PIN.
- Turn the ignition switch from the ACC position to the ON position 19 times
 - ACC is the position that first powers your radio.
 - ON is the position that runs the engine.
 - Count each time key is in ON position.
- Leave the ignition switch in the ON position when the 19th count is reached.
- The red status LED will light up.
- Enter the 1st digit (thousands) by turning the ignition switch back to ACC and counting the flashes.
- Switch ignition to ON when correct number of flashes are counted.
- Repeat the previous two steps for the remaining digits.
- When the final digit has been entered the red status LED flash quickly to confirm a new "PIN" has been entered.

Should you experience difficulty altering your Emergency PIN, please do not hesitate to contact one of the approved installers on

1-800-CYCLOPS (1-800-2925677)