

Setup and Use

Rotate float assembly as shown in images below. The float assembly can be adjusted to any water level from 4" to 9" by sliding the float assembly up or down the vertical pipe as shown below. Rotating or rocking the float assembly on the vertical pipe will allow for easier adjustment of height by applying pressure in the direction needed.









*Install water hose hand tight into the brass swivel. If the swivel remains loose with play side to side and is able to rotate easily, remove and check the hose end for damaged threads. Damaged hose threads will prevent the face of the hose fitting from sealing against the water hose washer located in the swivel.



Water Level Setting

We recommend setting the float assembly height so the bottom edge of the float assembly is the same height as the center of your skimmer inlet. This should provide adequate water level for most pools. Final adjustments can be made should you desire a different water level.

Water Faucet Setting

Reduce the flow of water to no more than a steady stream out of the faucet. In the unlikely event there is water hose failure this will reduce the water loss to a minimum. Reduced water flow is normally enough supply to keep the average pool full now the Staypoollizer is controlling the water level.

Consumer Notice Water Hose with Aluminum Fittings

If you have purchased any garden hose with ALUMINUM end fittings/couplers, you should be aware there is a condition that occurs between two dissimilar metals known as Galvanic Corrosion. Brass and Aluminum are far apart on the "dissimilar metals" chart and will corrode/fuse quickly. Your faucet threads and Staypoollizer connection are both made of brass. If the hose ends are silver chances are its made of aluminum. Use with caution and at your own risk.



AVOID PLACEMENT IN AREAS WHERE FOOT TRAFFIC IS LIKELY TO OCCUR. KEEP ATTACHED WATER HOSE LAYING FLAT AT ALL TIMES. REMOVE PRODUCT FROM POOL DECK DURING SOCIAL GATHERINGS TO REDUCE POSSIBLE INJURY TO OTHERS.

Limited One Year Factory Warranty

JCS Industries LLC warrants its products (with exceptions as indicated), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This limited warranty covers all parts against defects or breakage in normal intended use. The warranty does not cover any damage caused by accidental dropping, rough handling, or misuse of the product. Altering or tampering with the product will also void this warranty.



We appreciate your business and welcome you to our long list of satisfied and much valued customers. By reviewing our products you help other customers make informed purchase decisions and are a great source of suggestions about how to improve our product line. Authentic customer reviews help new customers find and evaluate our products before purchasing. Our success comes from continued faith in the excellent of our products and service, something we are 100% dedicated in providing. We know you had plenty of options while shopping for a automatic pool water fillers, and we are honered that you have chosen the Staypoollizer.

Looking forward to your business again in the future.

Thanks again,

Allison L.

Do you have any additional comments, questions, or concerns you would like to share?



Email us at : contact@jcscoinc.com www.staypoollizer.com



Copyright © 2018-2021 JCS Industries LLC All Rights Reserved

Above Ground Installation

Do Not under any circumstance use any electric power tools near any open body of water. The risk of electrical shock is extreme and can cause permanent injury or death. If you must use power tools use only low voltage battery powered tools.


Tools Needed : Battery Operated Drill, 5/16 Drill Bit, Pencil, Masking Tape

<u>Step 1:</u> After you decide where you would like to position the Staypoollizer temporary set the assembly on the ledge with the float assembly hanging in the water. Adjust the position to achieve a flat level surface so the Staypoollizer float assembly is allowed to hang vertical and the lower adjustment pipe is snug against the ledge.

Step 2 : Using the included ledge support plate (figure 2) as a template mark the location to place two 5/16" holes for the U-Bolt (figure 1) to pass through. Pay close attention to variable such as the pool wall and ease of access of the support plate and nuts once they are assembled on the bottom of the ledge.

<u>Step 3</u>: Once you have the holes drilled, remove the Staypoollizer and support plate from the ledge. Check that the U-Bolt (figure 1) passes through the holes. Once satisfied with the fit great care should be taken in removing any debris left from the drilling process. (Rust will form very quickly staining the ledge coating)

<u>Step 4</u>: Now that the ledge has been cleaned, place the Staypoollizer back in position and slip the U-Bolt over the center rail placing the support plate and nuts on the bottom of the ledge. Hand tighten the assembly to the ledge checking for level positioning. Attach your water hose to the float assembly and start enjoying your pool.

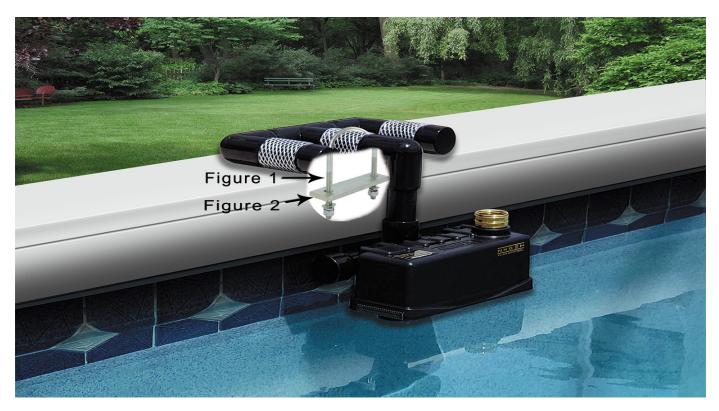

contact@jcscoinc.com www.staypoollizer.com

Copyright © 2018 - 2021 JCS Industries LLC All Rights Reserved