

THE USER MANUAL OF WHEEL LIFT



1.0 Introduction

Thank you for buying and using this tyre changer. This introduction is the important information for this kind of production. Please read the instruction carefully before using or fixing the machine. Please take good care of it. So that it can develop its advantages.

1.1 Usage

This wheel lift has been designed and manufactured exclusively for moving the wheel within the rim size of 26" and especially for use with tyre changer LT-980 and LT-950.

1.2 Description of wheel lift

Do not use it until you have read and understood the entire manual and the operation of the wheel lift (PIC 1)

1. handle valve
2. box
3. holding lever
4. disc
5. connecting lever




NOTE: Working air supply: within 6-10MPa

1.3 Installation and Adjustments

1.3-1

If you buy the wheel lift with the machine together, please insert the inner hexagon bolt, spring wash, and flat washer into the 4 holes inside of the machine. See PIC 2


Left move the handle valve and the Disc is up
Right move the handle valve and the Disc is back

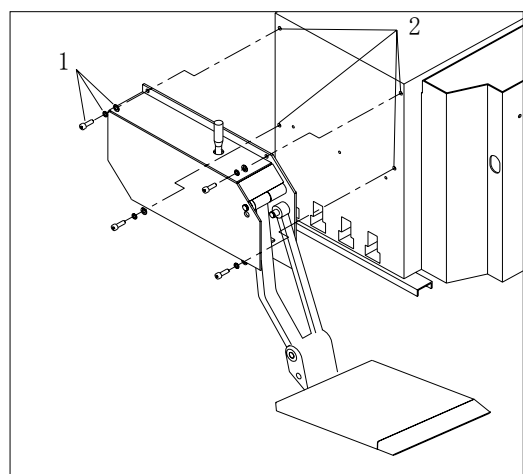

1.3-2

If you buy the wheel lift individual pls drilling the hole according to the drawing.

Pls cut off the main air hose (marked red arrows) of the pedal valve and connect it with the air hose of the wheel lift by a $\phi 8$ T connector.

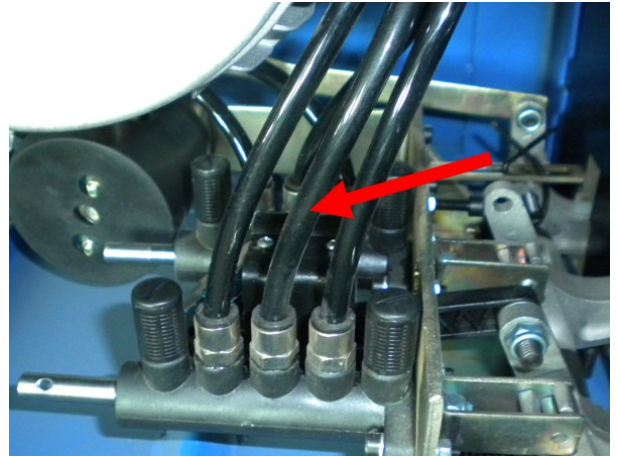

(PIC 3)

1.4 Installation drawing

