


DANGO

W A T C H E S

OPERATION MANUAL

CR-01

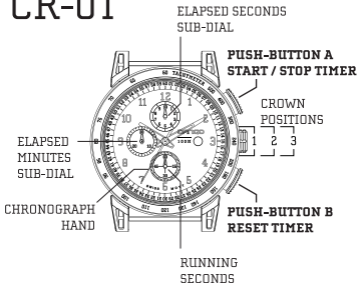

POSITION 3B: SETTING CHRONOGRAPH HANDS & SUB-DIALS

- PULL CROWN OUT TO POSITION 3
- KEEP PUSH BUTTONS A & B DEPRESSED SIMULTANEOUSLY FOR AT LEAST 2 SECONDS UNTIL CHRONOGRAPH HAND MAKES A FULL ROTATION. THIS PUTS YOU IN **SETTING MODE**.
- BY PRESSING PUSH BUTTON A, YOU CAN NOW SET YOUR CHRONOGRAPH HAND POSITION.
- BY PRESSING PUSH BUTTON B YOU CAN CHOOSE BETWEEN SUB-DIALS AND BACK TO CHRONOGRAPH HAND.
- BY PRESSING AND HOLDING DOWN PUSH-BUTTON A, YOU CAN RAPIDLY ROTATE THE SUB-DIAL HANDS.
- PUSH THE CROWN BACK INTO POSITION 1 TO CONTINUE RUNNING TIME.

CR-01

POSITION 1: WATCH IS RUNNING

PUSHED ALL THE WAY IN, WATCH IS RUNNING, DATE IS ACTIVE. ROTATING THE CROWN IN THIS POSITION YIELDS NO RESULTS.

POSITION 2: SETTING THE DATE

- PULL THE CROWN OUT TO POSITION 2.
(WATCH IS STILL RUNNING)
- ROTATE THE CROWN COUNTER CLOCKWISE UNTIL THE REQUIRED DATE APPEARS.
- PUSH THE CROWN BACK INTO POSITION 1 TO SET THE REQUIRED DATE.


POSITION 3A: SETTING THE TIME

- PULL THE CROWN OUT TO POSITION 3.
(WATCH IS STOPPED)
- ROTATE THE CROWN FORWARD & BACKWARD UNTIL THE DESIRED TIME IS DISPLAYED
- PUSH THE CROWN BACK INTO POSITION 1 TO SET THE DESIRED TIME.


STOP WATCH

- PRESS PUSH-BUTTON A ONCE TO START YOUR TIMER. PRESS PUSH-BUTTON A AGAIN TO STOP.
- PRESS PUSH-BUTTON B TO RESET THE STOP WATCH

DV-01

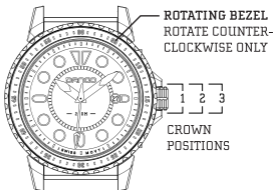

TK-01

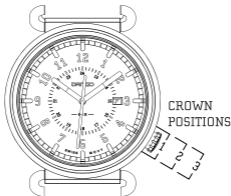

DV-01 & TK-01

POSITION 1: WATCH IS RUNNING

PUSHED ALL THE WAY IN, WATCH IS RUNNING, DATE IS ACTIVE. ROTATING THE CROWN IN THIS POSITION YIELDS NO RESULTS.

POSITION 2: SETTING THE DATE

- PULL THE CROWN OUT TO POSITION 2.
[WATCH IS STILL RUNNING]
- ROTATE THE CROWN COUNTER CLOCKWISE UNTIL THE REQUIRED DATE APPEARS.
- PUSH THE CROWN BACK INTO POSITION 1 TO SET THE REQUIRED DATE.

POSITION 3: SETTING THE TIME

- PULL THE CROWN OUT TO POSITION 3.
[WATCH IS STOPPED]
- ROTATE THE CROWN FORWARD & BACKWARD UNTIL THE DESIRED TIME IS DISPLAYED
- PUSH THE CROWN BACK INTO POSITION 1 TO SET THE DESIRED TIME.

SCREW DOWN CROWN (DV-01 ONLY)

THE CROWN WILL HAVE TO BE TURNED COUNTERCLOCKWISE UNTIL IT RELEASES FROM THE CASE TO ADJUST THE TIME/DATE.

THE CROWN MUST BE SCREWED DOWN COMPLETELY TO ACHIEVE WATER RESISTANCE.

DAPPER & R-SPEC



SPEC-OPS



DAPPER / R-SPEC / SPEC-OPS

POSITION 1: WATCH IS RUNNING

PUSHED ALL THE WAY IN, WATCH IS RUNNING, DATE IS ACTIVE. ROTATING THE CROWN IN THIS POSITION YIELDS NO RESULTS.

POSITION 2: SETTING THE DATE

- PULL THE CROWN OUT TO POSITION 2.
[WATCH IS STILL RUNNING]
- ROTATE THE CROWN COUNTER CLOCKWISE UNTIL THE REQUIRED DATE APPEARS.
- PUSH THE CROWN BACK INTO POSITION 1 TO SET THE REQUIRED DATE.


POSITION 3: SETTING THE TIME

- PULL THE CROWN OUT TO POSITION 3.
[WATCH IS STOPPED]
- ROTATE THE CROWN FORWARD & BACKWARD UNTIL THE DESIRED TIME IS DISPLAYED
- PUSH THE CROWN BACK INTO POSITION 1 TO SET THE DESIRED TIME.

INTERCHANGEABLE LUGS

WITH A FLAT-HEAD, TURN SCREW-HEAD FROM HORIZONTAL POSITION TO VERTICAL POSITION TO UNLOCK


NOTE: DO NOT OVER TURN THE SCREW-HEAD MORE THAN A QUARTER ROTATION

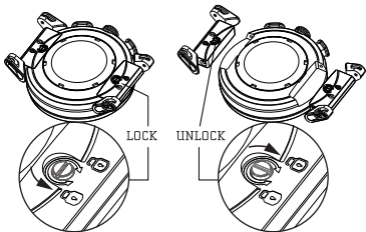

QUICK RELEASE STRAPS


WITH THE HANDLE SQUEEZED IN, PLACE THE STRAP INTO POSITION. RELEASE THE HANDLES TO SECURE

NOTE: TUG AT THE STRAPS TO MAKE SURE THE PINS ARE ENGAGED.

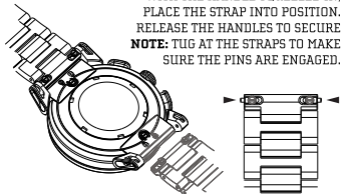

MICRO ADJUSTMENT BUCKLE


MICRO ADJUSTMENT BUTTONS

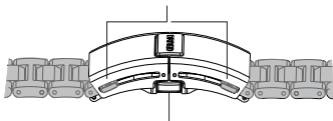


BUCKLE RELEASE BUTTON

B


SLIDE MICRO-ADJUSTMENT BUTTONS
IN TO TIGHTEN AND OUT TO LOOSEN

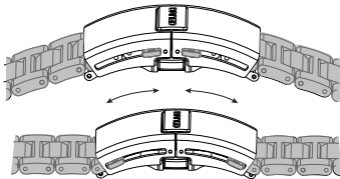

HOW TO INSTALL A LEATHER / SILICONE STRAP

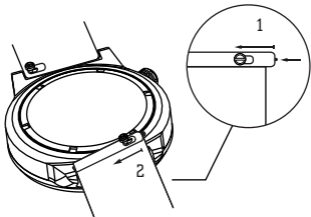


1. Pull the handle back
2. With the handle held back, place the strap into lug holes

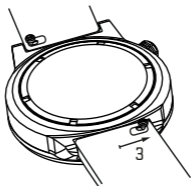


3. Release handle to secure the strap

HOW TO INSTALL A NATO STRAP


1

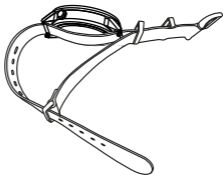



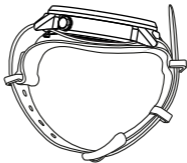

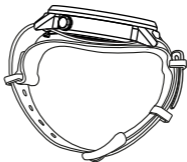

2



3



ATM	5	10	20
METERS	50	100	200
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✗	✓	✓
	✗	✓	✓
	✗	✗	✓

WARRANTY

DANGO PRODUCTS OFFERS A LIMITED WARRANTY FOR DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF 1 YEAR AFTER ORIGINAL PURCHASE FROM DANGO OR ANY AUTHORIZED DANGO DEALER. DANGO WILL EITHER REPAIR OR REPLACE THE WATCH, AT OUR DISCRETION IF THE WATCH IS DEEMED DEFECTIVE. THE WARRANTY DOESN'T COVER ABUSE, MISUSE OR NORMAL WEAR AND TEAR. DAMAGE CAUSED BY NOT SECURELY FASTENING THE STRAP AND/OR LOCKING MECHANISM IS NOT COVERED. DAMAGE CAUSED BY NOT PROPERLY SEALING THE CASE BACK AND/OR CROWN IS NOT COVERED. PROOF OF PURCHASE IS REQUIRED FOR ALL WARRANTY CLAIMS AND SERVICE REQUESTS. DANGO HAS THE OPTION TO DENY A WARRANTY CLAIM OR REPAIR REQUEST IF A WATCH SHOWS EVIDENCE OF EXCESSIVE WEAR AND/OR MISUSE.

CONTACT

WEBSITE: www.dangoproducts.com

EMAIL: support@dangoproducts.com

SOCIAL MEDIA



www.facebook.com/dangoproducts



[@dango_products](https://www.instagram.com/dango_products)



[@dango_products](https://www.twitter.com/dango_products)



DANGO
P R O D U C T S

www.dangoproducts.com

