

GAST LUBRICATED 0211 LABORATORY SERIES ROTARY VANE VACUUM PUMPS & COMPRESSORS OPERATION & MAINTENANCE MANUAL

Thank you for purchasing this Gast product. It is manufactured to the highest standards using quality materials. Please follow all recommended maintenance, operational and safety instructions and you will receive years of trouble free service.



WARNING



PLEASE READ THIS MANUAL COMPLETELY BEFORE INSTALLING AND USING THIS PRODUCT. SAVE THIS MANUAL FOR FUTURE REFERENCE AND KEEP IN THE VICINITY OF THE PRODUCT.

Product Use Criteria:

- Operate at 32°F - 100°F (0°C - 40°C).
- Protect unit from dirt & moisture.
- Protect all surrounding items from hot exhaust air. This exhaust air can become very hot.
- Product is not a consumer product and is for commercial applications only.
- **Do not pump flammable or explosive gases or use in an atmosphere that contains such gases.**
- Corrosive gases and particulate material will damage unit. Water vapor, oil-based contaminants or other liquids must be filtered out.
- Consult your Gast Distributor/Representative before using at high altitudes.
- Use Gast #AD220 or a detergent SAE#10 automotive engine oil for lubricating.



ISO 9001 & 14001 CERTIFIED

www.gastmfg.com

Your safety and the safety of others is extremely important.

We have provided many important safety messages in this manual and on your product. Always read and obey all safety messages.



This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you and others. The safety alert symbol and the words "DANGER" and "WARNING" will precede all safety messages. These words mean:

DANGER

You will be killed or seriously injured if you don't follow instructions.

WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the safety instructions are not followed.

INSTALLATION

WARNING



Electrical Shock Hazard

Disconnect electrical power at the circuit breaker or fuse box before installing this product.

Install this product where it will not come into contact with water or other liquids.

Install this product where it will be weather protected.

Electrically ground this product.

Failure to follow these instructions can result in death, fire or electrical shock.

Correct installation is your responsibility. Make sure you have the proper installation conditions and that installation clearances do not block air flow. Proper guards should be installed to prevent contact with moveable parts of this pump. Do Not lift the unit by the fan shroud.

Blocking air flow over the product in any way can cause the product to overheat.

Mounting

Position the mounting the product to a stable, rigid operating surface and using shock mounts will reduce noise and vibration.

Moisture Trap

Liquid or moisture vapor will damage the pump. Install a moisture trap if liquids could be drawn into the pump. For the correct type and size, contact your local Distributor or the factory.

Plumbing

To prevent air flow restriction, use pipe and fittings that are the same size or larger than the threaded ports of the pump. The ports are marked "IN" and "OUT". If the distance is great, use lines with a larger diameter than the connections. Give lines a uniform slope, place drain cock at low point, and avoid extra elbows. For ease of servicing, use a union or hose with clamps near the pump (a hose helps eliminate noise and vibration). If a vacuum/pressure supply tank is used, slope the line towards tank, provide a drain at the bottom, and place a check valve between the tank and pump so the pump will not run backwards when turned off.


Motor Control

It is your responsibility to contact a qualified electrician to assure that the electrical installation is adequate and in conformance with all national and local codes and ordinances.

Determine the correct overload setting required to protect the motor (see motor starter manufacturer's recommendations). Select fuses, motor protective switches or thermal protective switches to provide protection. Fuses act as short circuit protection for the motor, not as protection against overload. Incoming line fuses help to withstand the motor's starting current. Motor starters with thermal magnetic overload or circuit breakers protect motor from overload or reduced voltage conditions.

The wiring diagram supplied with the product provides required electrical information. Check that power source is correct to properly operate the dual-voltage motors.

Electrical Connection

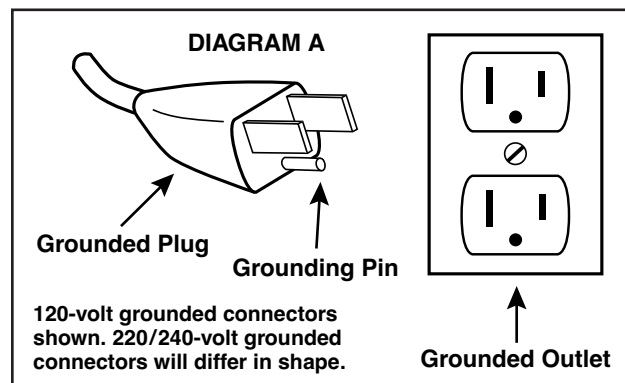

Model with a power supply cord:

This product must be grounded. For either 120-volt or 220/240-volt circuits connect power supply cord grounding plug to a matching grounded outlet. Do not use an adapter. (See DIAGRAM A)

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product may be equipped with a power supply cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you are not sure whether the product is properly grounded. Do not modify the plug provided. If it will not fit the outlet, have the proper outlet installed by a qualified electrician.

Model that is permanently wired:

This product must be connected to a grounded, metallic, permanent wiring system, or an equipment grounding terminal or lead on the product.

Power supply wiring must conform to all required safety codes and be installed by a qualified person. Check that supply voltage agrees with that listed on product nameplate.

Extension cords:

Use only a 3-wire extension cord that has a 3-blade grounding plug. Connect extension cord plug to a matching 3-slot receptacle. Do not use an adapter. Make sure your extension cord is in good condition. Check that the gage wire of the extension cord is the correct size wire to carry the current this product will draw.

| Minimum gage wire for extension cords | | | | | | | | | | |
|---------------------------------------|-------|------------------------|-----|-----|-----|-----|-----|-----|-----|------|
| Amps | Volts | Length of cord in feet | | | | | | | | |
| | 120v | 25 | 50 | 100 | 150 | 200 | 250 | 300 | 400 | 500 |
| | 240v | 50 | 100 | 200 | 300 | 400 | 500 | 600 | 800 | 1000 |
| 0-2 | | 18 | 18 | 18 | 16 | 16 | 14 | 14 | 12 | 12 |
| 2-3 | | 18 | 18 | 16 | 14 | 14 | 12 | 12 | 10 | 10 |
| 3-4 | | 18 | 18 | 16 | 14 | 12 | 12 | 10 | 10 | 8 |
| 4-5 | | 18 | 18 | 14 | 12 | 12 | 10 | 10 | 8 | 8 |
| 5-6 | | 18 | 16 | 14 | 12 | 10 | 10 | 8 | 8 | 8 |
| 6-8 | | 18 | 16 | 12 | 10 | 10 | 8 | 6 | 6 | 6 |
| 8-10 | | 18 | 14 | 12 | 10 | 8 | 8 | 6 | 6 | 4 |
| 10-12 | | 16 | 14 | 10 | 8 | 8 | 6 | 6 | 4 | 4 |
| 12-14 | | 16 | 12 | 10 | 8 | 6 | 6 | 6 | 4 | 2 |
| 14-16 | | 16 | 12 | 10 | 8 | 6 | 6 | 4 | 4 | 2 |
| 16-18 | | 14 | 12 | 8 | 8 | 6 | 4 | 4 | 2 | 2 |
| 18-20 | | 14 | 12 | 8 | 6 | 6 | 4 | 4 | 2 | 2 |

OPERATION

Injury Hazard

Pump only clean dry air.

Do not pump flammable or explosive gases or use in an atmosphere that contains such gases.

Do not spray flammable or combustible liquid.

Air stream from product may contain solid or liquid material that can result in eye or skin damage.

Install proper safety guards as needed. Pumps with glass jars need safety guards to protect against breaking glass.

Use only recommended air handling parts acceptable for pressure not less than 70 psi.

Keep fingers and objects away from openings and rotating parts.

When provided, motor terminal covers must be in place for safe operation.

Check that coupling guard and shroud are in place before operating.

Product surfaces may become hot during operating, allow product surfaces to cool before handling.

Do not direct air stream at body. Air stream from product may contain solid or liquid material that can result in eye or skin damage, wear proper eye protection.

Wear hearing protection. Sound level from product may exceed 85 db(A).

Failure to follow these instructions can result in eye injury or other serious injury.

It is your responsibility to operate this product at recommended pressures or vacuum duties and room ambient temperatures. Do Not start against a vacuum or pressure load.

Start Up

If pump is extremely cold, let it warm up to room temperature before starting. If motor fails to start or slows down significantly under load, shut off and disconnect from power supply. Check that the voltage is correct for motor and that motor is turning in the proper direction. Turning in the wrong direction will drastically reduce vane life. Vane life will be drastically reduced if motor is not operating properly. Vanes can break or be damaged if motor/pump runs in the wrong direction.

MAINTENANCE

Electrical Shock Hazard

Disconnect electrical power supply cord before performing maintenance on this product.

If product is hard wired into system, disconnect electrical power at the circuit breaker or fuse box before performing maintenance on this product.

Failure to follow these instructions can result in death, fire or electrical shock.

 **WARNING**

Injury Hazard

Wear eye protection when flushing this product.

Air stream from product may contain solid or liquid material that can result in eye or skin damage.

Flush this product in a well ventilated area.

Do Not use kerosene or other combustible solvents to flush this product.

Failure to follow these instructions can result in eye injury or other serious injury.

It is your responsibility to:

- **Regularly inspect and make necessary repairs to product in order to maintain proper operation.**
- **Make sure that pressure and vacuum is released from product before starting maintenance.**

Check intake and exhaust filters after first 500 hours of operation. Clean filters and determine how frequently filters should be checked during future operation. **This one procedure will help to assure the product's performance and service life.**

Clean filters when necessary by removing and washing in a solvent or soap and water. After cleaning, dry with compressed air to make sure all moisture is removed before replacing filters.

Flushing

Flushing this product to remove excessive dirt, foreign particles, moisture or oil that occurs in the operating environment will help to maintain proper vane performance. If your pump is not getting the vacuum or pressure level expected, flushing is required. Vanes will stick when dirty and may cause pump to be noisy or inefficient.

Use only Gast Flushing Solvent or other non-petroleum based flushing solvent. Do Not use kerosene or ANY other combustible solvent to flush product.

1. Disconnect electrical power supply.
2. Release all pressure and vacuum from pump.
3. Remove all accessories at the inlet and exhaust ports.
4. Remove filter.
5. Start product. Place towel over exhaust port to clean up solvent. If using liquid solvent, pour several tablespoons directly into inlet port. If using Gast Flushing Solvent, spray solvent for 5-10 seconds into inlet port.
6. Block the inlet port and draw a deep vacuum for 15-20 seconds. Release the vacuum.
7. Listen for changes in the sound of the motor. If motor sounds smooth, go to next step. If motor does not sound like it is running smoothly, repeat steps 5 and 6 until you can hear a difference in the operating sound of the pump.
8. Start the pump and let it run for 1 minute, then turn pump off.
9. Replace all accessories at the inlet and exhaust ports.
10. Replace filter before resuming operation.

Check that all external accessories such as relief valves and gauges are attached to cover and are not damaged before re-operating product.

SHUTDOWN PROCEDURES


It is your responsibility to follow proper shutdown procedures to prevent product damage.

Failure to do so may result in premature pump failure. The Gast Manufacturing lubricated Vacuum Pumps and Compressors are constructed of ferrous metals or aluminum which are subject to rust and corrosion when pumping condensable vapors such as water. Follow the steps below to assure correct storage and shutdown between operating periods

1. Disconnect plumbing.
2. Operate product for at least 5 minutes without plumbing.
3. Cover inlet port (vacuum side) and run pump for 1-3 minutes. Shut the pump down under vacuum.
4. This unit requires lubrication. Refill oil reservoir to proper level before storage.
5. Be sure to plug open ports so dirt and other contaminants do not enter the unit. It is now ready for shutdown.

SERVICE KIT INSTALLATION

WARNING

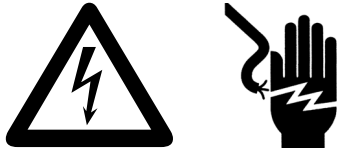

Electrical Shock Hazard

Disconnect electrical power supply cord before installing Service Kit.

If product is hard wired into system, disconnect electrical power at the circuit breaker or fuse box before installing Service Kit.

Disconnect air supply and vent all air lines to release pressure or vacuum.

Failure to follow these instructions can result in death, fire or electrical shock.

Gast will NOT guarantee field-rebuilt product performance. For performance guarantee, the product must be returned to a Gast Authorized Service Facility.

Service Kit contents vary. Most contain vanes, gaskets oiler wick and filter elements.

Do Not attempt to remove the rotor. It is held in place by Loctite and can only be serviced by a Gast Authorized Service Facility.

PUMP DISASSEMBLY

1. Remove the End Plate bolts.
DO NOT at any time remove the rotor or loosen any of the electric motor thru-bolts.
2. Remove End Plate and check for scoring on End Plate, Rotor, and Body. Surfaces should be smooth. If severe scoring is visible contact an Authorized Service Facility.
3. Remove vanes.
4. Clean all surfaces with Gast recommended Flushing solvent and dry well.

PUMP RE-ASSEMBLY

5. Apply a light coat of Gast recommended Oil part# AD220,(an equivalent 10 wt. high detergent oil can also be used) to the vanes.
6. Re-install vanes, noting the proper direction of the beveled edge (Refer to exploded view).
7. Install End Plate and tighten End Plate Bolts.
8. Install new cover gasket on Filter/Muffler Assembly and Lubricator.
9. Before putting the pump into service, ensure that any external accessories have not been damaged.


If the pump fails to produce proper vacuum or pressure, or is excessively noisy, turn off and return unit to an Authorized Service Facility.



Disposal (Please note current regulations)

Parts of the rotary vane pumps and compressors, shafts, iron or aluminum castings, plastic or glass parts or bearings, may be recycled as scrap materials.

EXPLODED PRODUCT VIEW, PARTS & ORDERING INFORMATION

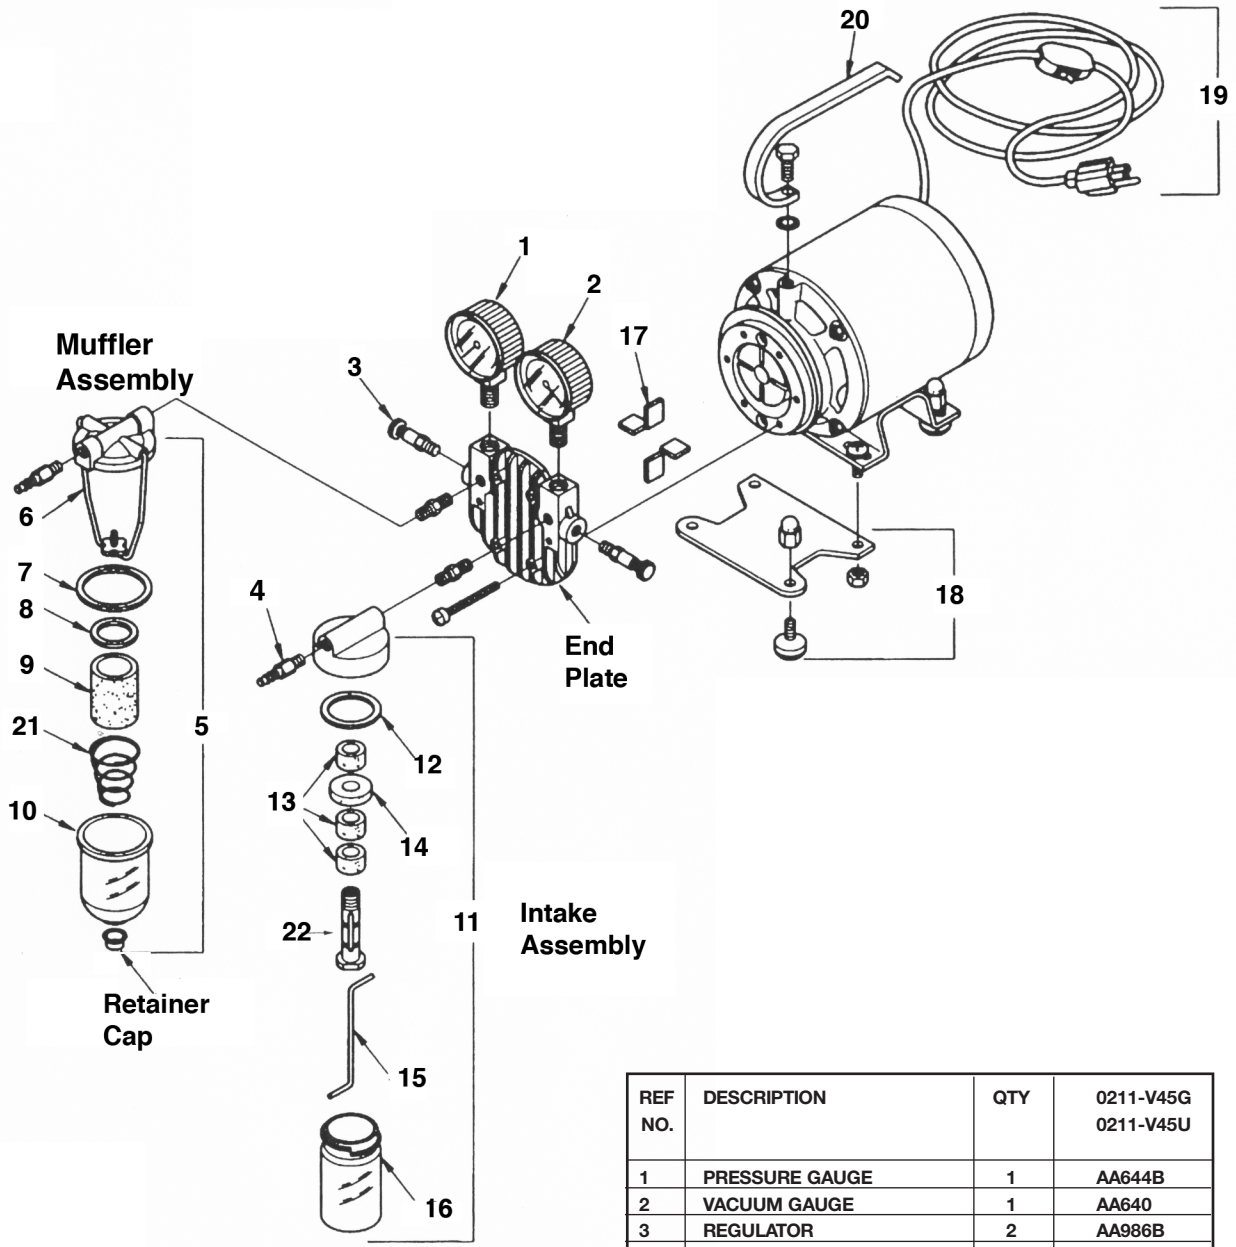

| REF NO. | DESCRIPTION | QTY | 0211-V45G 0211-V45U |
|---------|--------------------------|-----|------------------------|
| 1 | PRESSURE GAUGE | 1 | AA644B |
| 2 | VACUUM GAUGE | 1 | AA640 |
| 3 | REGULATOR | 2 | AA986B |
| 4 | HOSE NIPPLE | 2 | AA254C |
| 5 | RETAINER CAP | 1 | AB587 |
| 5A | OUTLET FILTER & OIL TRAP | 1 | AB580B |
| 6 | COVER & BAIL ASSEMBLY | 1 | AB589B |
| 7 | JAR GASKET | 1 | AB582 |
| 8 | ELEMENT GASKET | 1 | AB585 |
| 9 | ELEMENT | 1 | AB584 |
| 10 | GLASS BOWL | 1 | AB583 |
| 11 | OIL FILTER ASSEMBLY | 1 | AA680J |
| 12 | COVER GASKET | 1 | AA691 |
| 13 | FILTER FELT | 3 | AA683B |
| 14 | SEPARATOR FELT | 1 | AA698 |
| 15 | OILER WICK | 1 | AA699 |
| 16 | GLASS JAR | 1 | AA690-43 |
| 17 | VANE | 4 | AA345B |
| 18 | FOOT SUPPORT ASSM | 1 | AC136 |
| 19 | CORD, SWITCH & PLUG ASSM | 1 | AA896 |
| 20 | HANDLE | 1 | AC174 |
| 21 | SPRING | 1 | AB586 |
| 22 | SUPPORT STEM | 1 | AA809 |
| | SERVICE KIT | 1 | K217 |

WARRANTY

Gast finished products, when properly installed and operated under normal conditions of use, are warranted by Gast to be free from defects in material and workmanship for a period of twelve (12) months from the date of purchase from Gast or an authorized Gast Representative or Distributor. In order to obtain performance under this warranty, the buyer must promptly (in no event later than thirty (30) days after discovery of the defect) give written notice of the defect to Gast Manufacturing Incorporated, PO Box 97, Benton Harbor Michigan USA 49023-0097 or an authorized Service Center (unless specifically agreed upon in writing signed by both parties or specified in writing as part of a Gast OEM Quotation). Buyer is responsible for freight charges both to and from Gast in all cases.

This warranty does not apply to electric motors, electrical controls, and gasoline engines not supplied by Gast. Gast's warranties also do not extend to any goods or parts which have been subjected to misuse, lack of maintenance, neglect, damage by accident or transit damage.

THIS EXPRESS WARRANTY EXCLUDES ALL OTHER WARRANTIES OR REPRESENTATIONS EXPRESSED OR IMPLIED BY ANY LITERATURE, DATA, OR PERSON. GAST'S MAXIMUM LIABILITY UNDER THIS EXCLUSIVE REMEDY SHALL NEVER EXCEED THE COST OF THE SUBJECT PRODUCT AND GAST RESERVES THE RIGHT, AT ITS SOLE DISCRETION, TO REFUND THE PURCHASE PRICE IN LIEU OF REPAIR OR REPLACEMENT.

GAST WILL NOT BE RESPONSIBLE OR LIABLE FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND, however arising, including but not limited to those for use of any products, loss of time, inconvenience, lost profit, labor charges, or other incidental or consequential damages with respect to persons, business, or property, whether as a result of breach of warranty, negligence or otherwise. Notwithstanding any other provision of this warranty, BUYER'S REMEDY AGAINST GAST FOR GOODS SUPPLIED OR FOR NON-DELIVERED GOODS OR FAILURE TO FURNISH GOODS, WHETHER OR NOT BASED ON NEGLIGENCE, STRICT LIABILITY OR BREACH OF EXPRESS OR IMPLIED WARRANTY IS LIMITED SOLELY, AT GAST'S OPTION, TO REPLACEMENT OF OR CURE OF SUCH NONCONFORMING OR NON-DELIVERED GOODS OR RETURN OF THE PURCHASE PRICE FOR SUCH GOODS AND IN NO EVENT SHALL EXCEED THE PRICE OR CHARGE FOR SUCH GOODS. GAST EXPRESSLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE WITH RESPECT TO THE GOODS SOLD. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTIONS SET FORTH IN THIS WARRANTY, notwithstanding any knowledge of Gast regarding the use or uses intended to be made of goods, proposed changes or additions to goods, or any assistance or suggestions that may have been made by Gast personnel.

Unauthorized extensions of warranties by the customer shall remain the customer's responsibility.

CUSTOMER IS RESPONSIBLE FOR DETERMINING THE SUITABILITY OF GAST PRODUCTS FOR CUSTOMER'S USE OR RESALE, OR FOR INCORPORATING THEM INTO OBJECTS OR APPLICATIONS WHICH CUSTOMER DESIGNS, ASSEMBLES, CONSTRUCTS OR MANUFACTURES.

This warranty can be modified only by authorized Gast personnel by signing a specific, written description of any modifications.

MAINTENANCE RECORD

| DATE | PROCEDURE PERFORMED |
|------|---------------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

TROUBLESHOOTING CHART

| Low | | High | | Pump Overheat | Motor Overload | Reason and remedy for problem. |
|--------|----------|---------|----------|------------------|-------------------|---|
| Vacuum | Pressure | Vacuum | Pressure | | | |
| • | • | At pump | | • | • | Filter dirty. Clean or replace. |
| | • | | At pump | • | • | Muffler dirty. Clean or replace. |
| • | | At pump | | • | • | Vacuum line collapsed. Repair or replace. |
| • | | | • | • | • | Relief valve set too high. Inspect and adjust. |
| • | • | | | | | Relief valve set too low. Inspect and adjust. |
| • | • | At pump | At pump | • | • | Plugged vacuum/pressure line. Inspect and repair. |
| • | • | | | | | Vanes sticking. Clean or replace. |
| • | • | | | | | Vanes worn. Replace. |
| • | • | | | | | Shaft seal worn. Replace. |
| • | • | | | • | • | Dust or offset powder in pump. Inspect and clean. |
| • | • | | | • | | Motor not wired correctly. Check wiring diagram and line voltage. |
| | | • | • | • | • | Running at too high an RPM. Check wiring diagram and line voltage. |



ISO 9001 & 14001 CERTIFIED

www.gastmfg.com - 269-926-6171

We have Gast Certified Service Centers throughout the world. For the most up-to-date listing, contact one of our sales offices below:

Gast Manufacturing, Inc.

P.O. Box 97
2300 Highway M139
Benton Harbor, MI 49022
Ph: 269/926-6171
FAX: 269/925-8288
www.gastmfg.com

European Sales & Service Headquarters

Gast Group Limited
A Unit of IDEX Corporation
Unit 11, The I O Centre
Nach Road
Redditch B98 7AS
United Kingdom
Tel: +44 (0) 1527 504040
Fax: +44 (0) 1527 525262
www.gastmfg.com
www.jun-air.com

Gast Hong Kong

Unit 12, 21/F, Block B
New Trade Plaza
6, On Ping Street, Shatin
N. T. Hong Kong
Ph: (852) 2690 1066
Fax: (852) 2690 1012
www.gasthk.com