



| Ref. | Part Description | 65PJ-TNT | 65PJADJ-TNT |
|------|------------------|----------|-------------|
|------|------------------|----------|-------------|

| | | | |
|-----------------------|------------------------|---------------|--|
| UPPER ASSEMBLY | | | |
| 1 | Fulcrum Pin | (100348) | |
| 2 | Arm Spring Assembly PJ | 177508 | |
| 3 | Arm Spring | (100369) | |

| | | | |
|----------------------------------------------------|---------------------|-----------------|--|
| NOZZLES (Specify nozzle size when ordering) | | | |
| 4 | ADJ Nozzle Assembly | 10038516 | |
| 5 | Pin | (100203) | |
| 6 | Spring | (100136) | |

| | | | |
|-----------------------|-------------------|---------------|--|
| TRIP MECHANISM | | | |
| 9 | Upper Trip Arm | 100370 | |
| 11 | Lower Trip Arm | 100373 | |
| 8 | Trip Hardware Kit | 179991 | |
| 10 | Trip Spring | (231079) | |
| 12 | Spacer Washer (2) | (231077) | |
| 13 | E-Ring | (231078) | |
| 14 | Trip Shaft | (100365) | |

| | | | |
|-------------------------|----------------------------|-------------------|--|
| BEARING ASSEMBLY | | | |
| 15 | Bearing Washer Kit | 177475 | |
| 16 | Bearing Spring | (231064) | |
| 17 | Metal Top Seal Washer | (231063) | |
| 18 | Top Seal Washer (White) | (100313) | |
| 21 | Bearing Washer (2) (Black) | (104038) | |
| 22 | Wear Washer (Orange) | (104037) | |
| 19 | Friction (Trip) Collar | (B) 105774 | |
| 20 | Bearing Sleeve (FNPT) | 177500 | |
| 20 | Bearing Sleeve (BSP) | (177499) | |
| 23 | Bearing Nipple | 177518 | |

(B) Friction Trip Collars available individually or with sleeve.
Kit 105774 includes Quantity of 1

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.