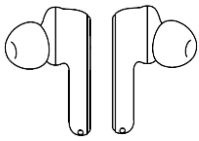 

 



BWS T2


*TRUE WIRELESS
BLUETOOTH EARPHONE*

User Manual

INSIDE THE BOX

ITEM		QUANTITY
Bluetooth Earphone		2 PCS
Charging Case		1 PCS
Charging Cable		1 PCS
Silicone Ear Tips		6 PCS

 PRODUCT DESCRIPTION

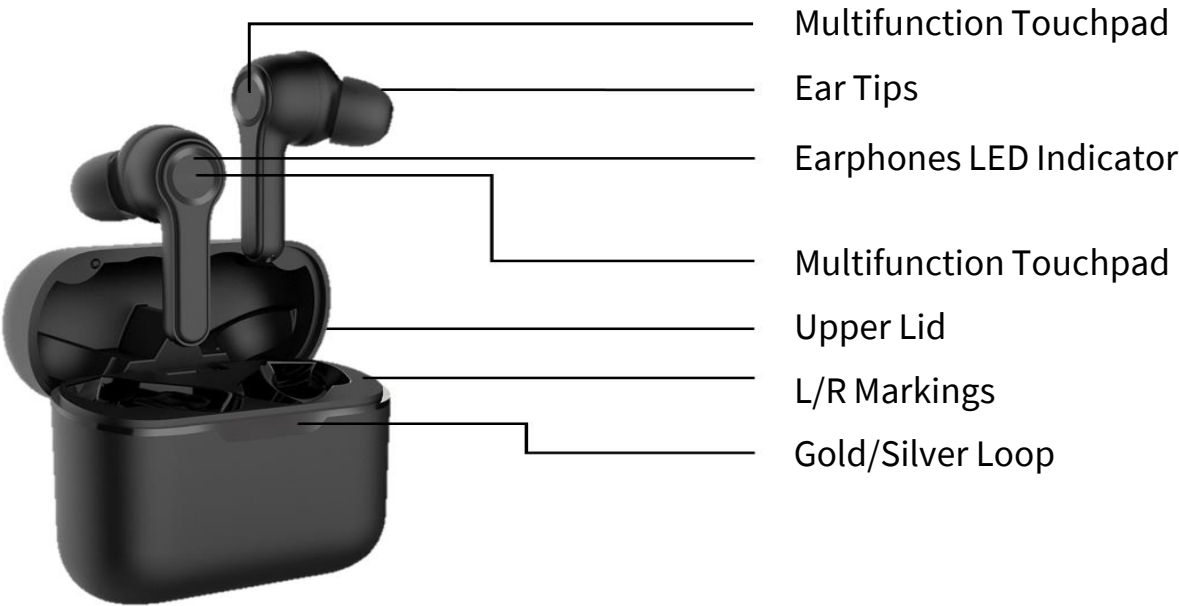

PRODUCT DESCRIPTION (continue)






BLUETOOTH PAIRING AND GETTING STARTED

1. Fully charge the case and earbuds (charge for 4 hours, until all charging case LED indicators have been lit up).
2. Take the earbuds out of the case. They will turn on automatically and connect within 5 seconds.
3. Turn on the Bluetooth pairing function on your device.
4. Find and select "BWS T2".
5. Choose your best fitting ear tips.
6. Put on and adjust earphones for best fit to enjoy the best sound quality.

CONTROLS AND FUNCTIONS


FUNCTION	OPERATION	STATUS
 Turn on	Open upper lid	Earphones inside of the case
	Tap and hold touchpad for 2 sec	Earphones outside of the case switched off
 Play media	Tap touchpad once	Earphones turned on
 Pause media playback	Tap touchpad once	Media playing
 Restart / previous track	Double-tap (L) touchpad	Media playing or paused
 Skip to next track	Double-tap (R) touchpad	Media playing or paused
 Increase volume	Tap and hold (R) touchpad	Phone call / media playing
 Decrease volume	Tap and hold (L) touchpad	Phone call / media playing
 Activate voice assist	Triple-tap (L) touchpad	Earphones turned on
 Activate / disactivate low latency mode	Triple-tap (R) touchpad	Earphones turned on
 Switch off	Tap and hold touchpad for 5 sec	Earphones turned on
	Return earphones into the case and close the lid	Anytime

CONTROLS AND FUNCTIONS (continue)

FUNCTION	OPERATION	STATUS
 Answer call	Double-tap touchpad	Incoming call
 End call	Double-tap touchpad	Call in progress
 Reject call	Tap and hold touchpad	Incoming call
Place current call on hold and answer new incoming call	Tap touchpad once	Call in progress, new incoming call
Switch between active call and on hold call	Double-tap touchpad	One call active, one call on hold
Reject new incoming call and continue current call	Tap and hold touchpad for 1 sec	Call in progress, new incoming call

CHARGING EARPHONES AND CASE

 - Return earphones to the case and close the lid, the earphones will start charging automatically.
- Plugin the charging cable into the USB-C charging port, the case will start charging automatically.

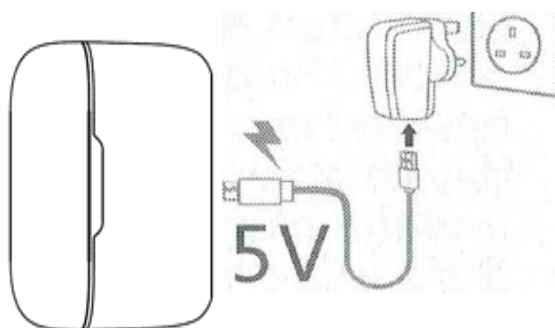

SAFETY AND CARE

- When not in use, power the headset off and store in the included protective carrying case.
- Battery performance will decrease when stored in extreme temperatures: below -10°C/14°F or above 45°C/113°F including direct sunlight.
- There is no replaceable/reparable parts in the headset. Disassembling it will void your warranty.
- These earphones are built to last as long as possible, but they are not waterproof. Exposers to excess moisture might void the warranty.
- Do not use around flammable gasses as fire or explosion may occur.
- Keep the device and packaging out of reach of children.

CLEANING INSTRUCTIONS

1. Remove ear tips from earphones
2. Take a cotton swab damp with a small amount of rubbing alcohol or soapy water. Swab the body of the earphones and ear tips. Note: Ear tips can also be submerged fully in rubbing alcohol or hydrogen peroxide
3. Allow the earphones and ear tips to dry completely
4. Install ear tips on the earphones, make sure they are attached securely

WARNING

Using headphones at high to moderate volumes for extended periods will result in permanent hearing damage. It is advised to keep the volume levels at medium to low at all times. Do not use when driving a car, cycling, operating machinery, or performing other activities that require hearing your surrounding sound.

It is advised to turn the volume on your device all the way down before connecting your headphones. Then increase the volume gradually until you reach a comfortable listening level.

TECHNICAL SPECIFICATIONS

- Technology: Bluetooth 5.0, A2DP, HFP, HSP, AVRCP
- Drivers: a 6mm graphene dynamic driver in each earbud
- Sensitivity: 104+/-3dB
- Frequency Range: 20Hz - 20kHz
- Impedance: 16ohm
- Microphone: MEMS mic (silicon microphone)
- Microphone Sensitivity: 42+/-3dB
- Microphone Frequency Range: 100Hz - 10kHz
- Charge Time: 1.5hours (earbuds) + 2hours (charging case)
- Case Charing Input: 5VDC
- Play Time: 8hours + extra 24hours with charging case
- Battery Type: Li-polymer (60mAh for earbuds, 500mAh for charging case)
- Wireless Communication Range: >10m (No obstacles in the surrounding)

MORE INFORMATION

- Colour Options: silver, gold
- Product Size: 59x49x27cm
- Weight: 4.7g for each earbud, 41.8g for charging case

FAQ

Q: Why the earphones have no sound when I first try them on / only one side has sound?

A: The earphones may shut down if the battery level is too low due to over-discharge protection. It can be reactivated by charging it for 4 hours. If there's still no response, touch and hold the touchpads for 2~3 seconds to activate the earphones manually. If there's still no response, use a piece of disinfecting wipe to clean the charging pins on the earphones and charging case, let it dry, and then charge it for another 1 hour. The earphones should now function normally. If there's still no response from the earphones, please contact us at support@goodaudio.biz for further investigation.



support@goodaudio.biz
<https://goodaudio.biz/>