

KONO 84

Mechanical Keyboard

Quick Start Guide



Connection

Fun + ___	Action
Z	Connect to Bluetooth device 1
X	Connect to Bluetooth device 2
C	Connect to Bluetooth device 3
Space	Switch to Wired Mode
Hold Fun + Z, X, or C to begin pairing for that slot.	

RGB Backlighting

Fun + ___	Action
\	Cycles between lighting modes
Backspace	Toggle Backlight On/Off
]	Increase backlight brightness
[Decrease backlight brightness
;	Increase Animation Speed
'	Decrease Animation Speed

2

Media

Fun + ___	Action
F8	Play/Pause
F10	Mute Volume
F11	Lower Volume
F12	Raise Volume

Device

Fun + ___	Action
F3	Puts your device to sleep
WIN	Toggles Windows/OS key lock
F1	Decrease screen brightness
F2	Increase screen brightness
Esc	Hold for 5s for factory reset

3

Other

Fun + ___	Action
F7	Back (in browser)
F9	Forward (in browser)
F6	Home
F4	Windows Explorer

Warranty

Limited one-year warranty. Please contact your place of purchase for warranty support.

support@kono.store

4