




the**bradley**collection

EXPRESS

Installation Instructions

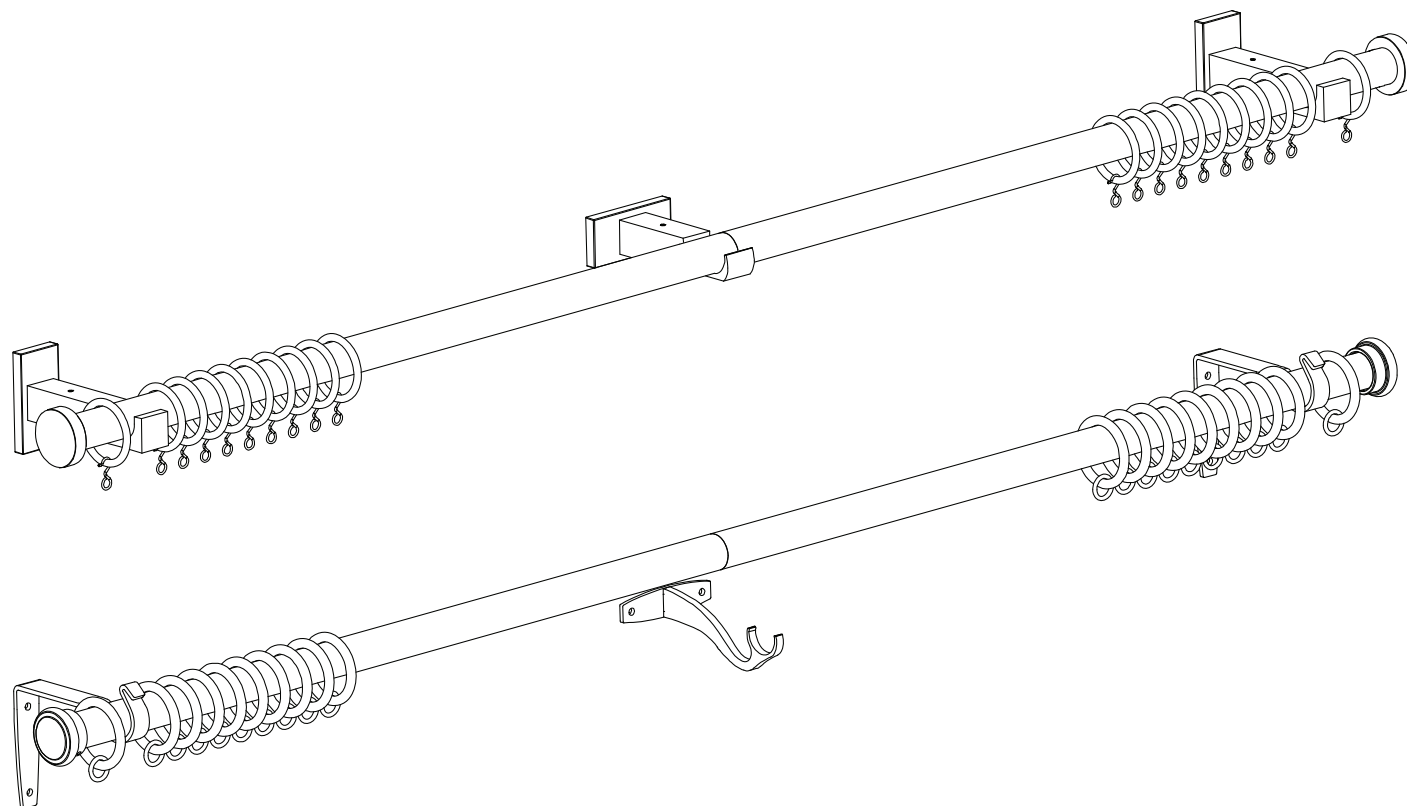

CONTACT

Web www.bradleycollection.com

Email info@bradleycollection.com

Follow     

WORLD

The Bradley Collection Ltd
Lion Barn • Maitland Road
Needham Market • Suffolk
IP6 8NS • UK

Telephone +44 (0)1449 722 724

Fax +44 (0)1449 722 728

USA & Canada

The Bradley Collection Inc.
3625 Hayden Avenue, Suite E
Culver City • CA • 90232 • USA

Telephone +1 (310) 815 8255

Fax +1 (310) 815 9255

EXPRESS

Installation Instructions

THANK YOU FOR YOUR ORDER

Before fitting this product please ensure that you have thoroughly read these instructions.

We have taken every care to design and manufacture a quality system; incorrect installation could lead to poor performance.

If any queries arise when reviewing these instructions or during installation please feel free to contact us for assistance. We will be glad to talk you through the process.

Please retain these instructions for future reference.

CONTACT

Web www.bradleycollection.com

Email info@bradleycollection.com

World +44 (0)1449 722 724

USA & Canada +1 (310) 815 8255

Follow     


Fixings

As a courtesy we have supplied a set of fixings for the system.

These screws and wall plugs are designed to be used in wood and brick walls. We understand our systems may be used on a variety of materials; drywall, aluminium and steel stud, or lath and plaster.


To properly secure a system onto these or other types of surfaces; appropriate fixings must be independently obtained.

! Assess your own wall construction and source the appropriate screw type.
Please note that the enclosed fixings may not be suitable for all wall types.

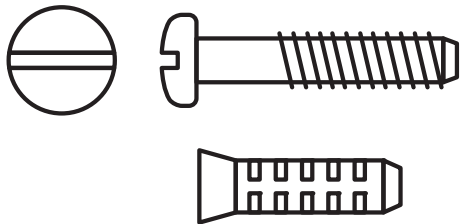

Tools

For the installation of the system the following items may be required.

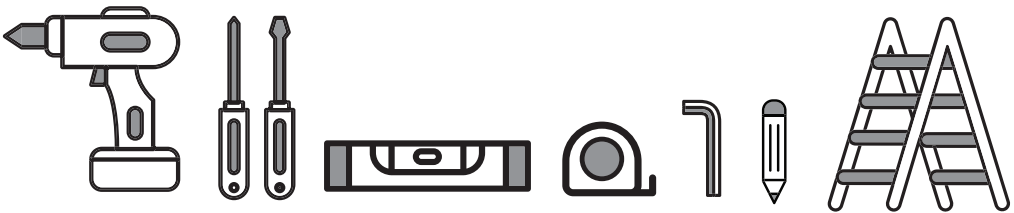

Care & Maintenance


This pole can be cleaned using a soft cloth and furniture polish.

! Please do not use any solvent or chlorine based cleaners as this will damage the finish.


Bracket positioning and fixing

Side brackets should be positioned approximately 100mm (4") in from the end of the pole. To align the brackets, the top of the passing brackets should be fitted below the top of the side brackets. (see dimension Z)


Modern Brackets

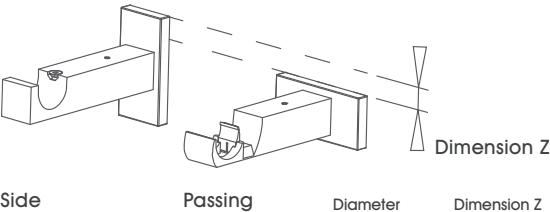

Exploded bracket assembly

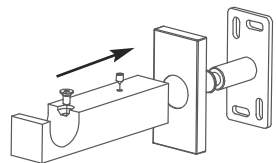

Traditional Brackets

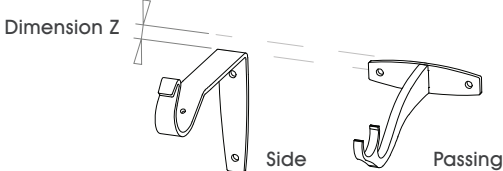

Diameter	Dimension Z
19mm (3/4")	7mm (1/16")
25mm (1")	9mm (3/8")

Diameter	Dimension Z
19mm (3/4")	15mm (9/16")
25mm (1")	5mm (9/16")


MODERN

Fitting Rings and Pole

Slide the curtain rings on to the pole, allowing approximately one ring for every 100mm (4"). On systems where passing rings are used ensure the open side of the ring is facing the wall.

Keep aside two rings, one for the outside of each end of the bracket.

Place the pole on the brackets, making sure that the overhangs at each end are equal. If the pole is made of two connected lengths, the mid/passing bracket should cover the join.

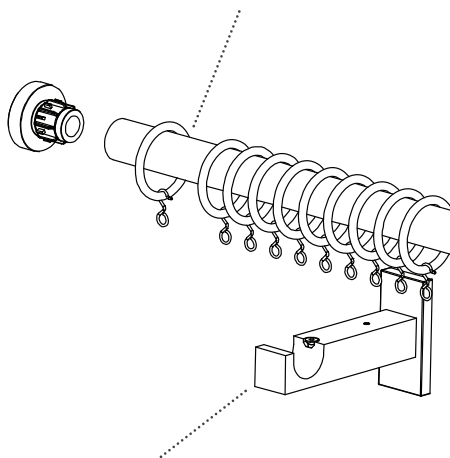

Bracket Positioning & Fixing

Side brackets should be positioned approximately 100mm (4") from the ends of the pole.

Mark the position of the brackets. for longer poles a mid/passing bracket is required. For bay window poles, passing brackets are used in conjunction with passing curtain rings.

Drill holes & insert plugs.

 
Screw each bracket into position.

Push coverplate & arm into place, lock arm with set screw.

Joining the pole


Poles are supplied pre-cut to your specified lengths, in some cases the pole may be made in two or more parts, joined by a connector.

Push the joiner into the pole ends and push the poles together.



Finials

 
Attach the finials by pushing them into position.



Passing Brackets

The pole snaps into the passing bracket. this operation should only be done once, as repeated attempts can damage the finish.

Ensure that the pole is in the correct position first. Then gently pull the pole down whilst holding the bracket up.

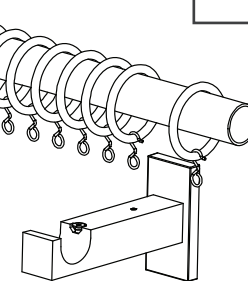


TRADITIONAL

Fitting Rings and Pole

Slide the curtain rings on to the pole, allowing approximately one ring for every 100mm (4"). On systems where passing rings are used ensure the open side of the ring is facing the wall.

Keep aside two rings, one for the outside of each end of the bracket.

Place the pole on the brackets, making sure that the overhangs at each end are equal. If the pole is made of two connected lengths, the mid/passing bracket should cover the join.

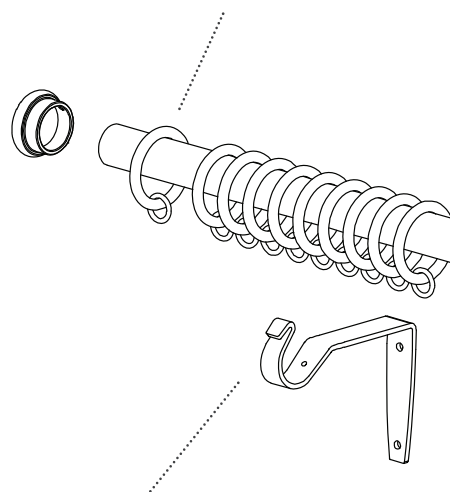

Bracket Positioning & Fixing

Side brackets should be positioned approximately 100mm (4") from the ends of the pole.

Mark the position of the brackets. For longer poles a mid/passing bracket is required. For bay window poles, passing brackets are used in conjunction with passing curtain rings.


Drill holes & insert plugs.

Screw each bracket into position.

Joining the pole


Poles are supplied pre-cut to your specified lengths, in some cases the pole may be made in two or more parts, joined by a connector.

Push the joiner into the pole ends and push the poles together.

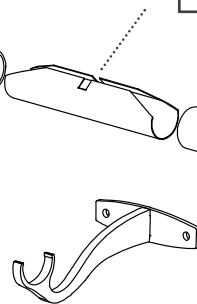

Finials

Attach the finials by pushing them into position and tightening the set screws either on the finial.

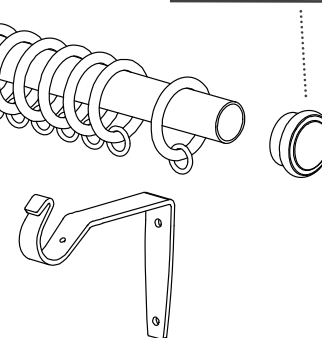

Passing Brackets

The pole snaps into the passing bracket. This operation should only be done once, as repeated attempts can damage the finish.

Ensure that the pole is in the correct position first. Then gently pull the pole down whilst holding the bracket up.