

## WIRELESS


# VIBRATION HOUR METER

### 1 Remarks

1. Be sure to use the product according to the user manual strictly.
2. Do not disassemble the product or its accessories.
3. The product is designed for waterproof. It can be used in the rain. And it can be used underwater for short time.
4. When using the product, plus or minus difference exists actually. Its difference is not same as the difference of another same products completely.
5. Fierce vibration and strong knock to the product may result in the breakdown of the product.

### 2 Installation

#### 1. How to install the product

- ① When using double-sided adhesive tape to fix the meter, stick one side of the tape onto the back of the meter and stick the other side onto the equipment.
- 

#### 2. Check if the product is installed correctly.

Start the engine, hourglass flashes on LCD screen. It means the product is installed correctly.

### 3 Product use

#### 1. The Setting of Sensitivity

At Timing interface, short press **M** to view the sensitivity. The default setting is SEN-L for LOW. Long press **S** for 2 sec, "L" flashes and it enter into the setting mode. Short press **M** or **S** to switch between "L" and "H". After the setting is done, short press **M** + **S** buttons to confirm and save the setting.



#### 2. The setting for the time of Automatic Standby Mode (11-60S or OFF).


① AT timing interface, short press **M** to view the time of Automatic Standby Mode. The default time is SC-11(11S). Long press **S** for 2 seconds, "11" flashes and it enters into the setting mode.



② Short press button to set the time of automatic standby mode. Short press **S** to increase 1. Short press **M** to decrease 1.



3 Long press button to set the time of automatic standby mode. Long press **S** to change twice, increase 5 per time. Long press **M** to change twice, decrease 5 per time.

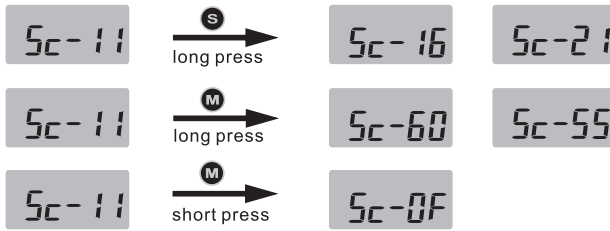

4 When the setting is done, short press **M** + **S** to save the setting.


※ When "SC-OF" is set, the function of automatic standby mode is turn off. At this time, the display will keep on all the time. It will affect the service life of the battery.

### 3. Partial hours reset to 0

 - 1 Short press **S** to switch among TOT, JOB, JOB1 interfaces and select the related partial hours.
- 2 At JOB interface, long press **S** for 2 seconds to reset partials hours to 0 and it will display 00000.
- 3 At JOB1 interface, long press **S** for 2 seconds to reset partials hours to 0 and it will display 00000.

### 4. The setting of LOCK MODE

Press **M** + **S** together 5s to enter into lock interface.



※Press **M** + **S** together to unlock and return to main interface.

## 4 Product accessories list

## 5 Product specifications

Product -----1	<b>Total hours</b>	99999H	<b>Battery specification</b>	CR2430 270mAh
	<b>Partial hours(JOB/JOB1)</b>	99999H	<b>Product dimensions</b>	67X33X14 mm
User manual-----1	<b>Time resolution</b>	0.1H	<b>Display window size (seeable)</b>	13X28 mm
	<b>Housing case material</b>	ABS	<b>Working temperature</b>	-20°C-+70°C
3M double adhesive tape-----1	<b>Waterproof level</b>	IP68	<b>Operating humidity</b>	<+90%RH
	<b>Product weight</b>	69g		

## 6 Troubleshooting

The possible problems	The possible reasons	Solutions
No display on LCD after engine is on	1.Sensitivity is too low. 2.Battery power is used out.	1.Set sensitivity to "H". 2.Replace the product.
No change on running hours or running hours is not accurate after engine is on for 6 minutes	1.Sensitivity is too low 2.The product installation is loose. 3.Weak vibration signal from installation location.	1.Set sensitivity to "H". 2.Refasten the product. 3. Change the installation location.
Indistinct display or color change displayed on LCD	1.Product installation angle is incorrect. 2.Long direct solar radiation	1.Adjust product installation angle. 2. Leave the product under shade.

**LATNEX® Canada-EMR Shielding Solutions Inc.**

**URL: [www.latnex.com](http://www.latnex.com) Email: [info@latnex.com](mailto:info@latnex.com)**

**Address: 399 Four Valley Drive Unit 13 Concord Ontario L4K 5Y8 Canada**

**Canada Tel: 416-583-2005**

**USA Tel: 310-746-3686**

