

AF-3500

All-in-One EMF Meter

1. Quick Measurement Mode Operation:

<p>Press the middle button (as shown in the figure) to turn on the meter →</p>	<p>The startup screen appears →</p>	<p>Access the measurement mode: ● Electric field</p>	<p>Press and hold the middle button for 3 seconds to turn off the meter</p>






2. Data Hold:

<p>In the measurement mode, press the left button →</p>	<p>All measurement readings and functions are locked</p>	<p>In the Data Hold mode, press the left button →</p>	<p>Return to the measurement mode</p>

3. Brightness /EF/MF/RF Functions:

	
<p>Brightness : Low>Middle>High>Low Circulation</p>	<p>Electro Magnetic Field Electric Field RF Electricfield Each Independent Key Selection Key</p>




4. Meun Settings:

<p>Step 1</p> 	<p>Step 2</p> 
<p>In the measurement mode, press the middle button to enter the main menu</p>	<ul style="list-style-type: none"> ● Press the right button “Select”  repeatedly to move the blue cursor downwards. Press the left button “Enter”  to confirm the desired option and enter Step 3 ● If you are not going to proceed, press “Menu”  to return to Step 1 measurement mode



Step 3



- Press the right button “Select”  repeatedly to move the yellow check mark  downwards. Press the left button “Enter”  to confirm the desired setting (Fig.1~6 and) and return to the measurement mode