

ASSEMBLY INSTRUCTIONS CHAIR MODEL RTA-K462

1:Back x1	5:Caster x5
2:Seat x1	6:Base x1
3:Mechanism x1	7:M6*20mm x8
4:Gas lift x1	8:Tool x1

STEP 1

Make sure that all the casters (5) have the ring, and insert them in to the base (6) using pressure. Place the gas lift (4) in the middle of the base (6). (4) and (6) will stay together by friction after the chair is used for the first time.

STEP 2 **ATTENTION: DO NOT TIGHTEN ANY SCREWS UNTIL ALL ARE IN PLACE**

Assemble the back (1) to the seat (2) using screws (7) as shown.

STEP 3 **ATTENTION: DO NOT TIGHTEN ANY SCREWS UNTIL ALL ARE IN PLACE**

Place the mechanism (3) on the bottom of the seat (2) and make sure the holes align. The handle must face to the right side of the chair. Assemble (3) using (7).

STEP 4

The chair will stay together by friction and pressure, after it is used by the first time.

HAVING PROBLEMS WITH YOUR PRODUCT? Please give us the chance to fix it before deciding to return the product to the store!

If you found damaged, defective or missing parts: Request the free replacement part online at www.rtaproducts.com.

If you have questions or difficulties with assembly: Give us a call toll free, M-F between 9:00 AM and 4:30 PM EST at 1-866-782-8262 or send us an email to support@rtaproducts.com. We will guide you or troubleshoot the problem.

If you have questions about the product's warranty: Send us an email to warranty@rtaproducts.com. Please include the model number of the product. The details on the warranty policy are also posted in our website www.rtaproducts.com.