


PADLOCK INSTRUCTIONS

A 3-digit combination is required to unlock and lock the Padlock. Padlock is preset to open at 0-0-0.

To Change the Combination:

1. Position the dials to the preset combination 0-0-0 and pull up the shackle.
2. Turn the shackle 1/4 turn (90°) towards the back of the lock.
3. Press the shackle down to compress the spring, and hold it down while changing the dials to the new combination.
4. Pull up and turn back the shackle. The new combination is now set.

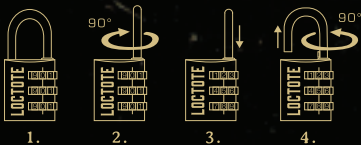

HOW TO SECURE THE BAG

Depending on the level of security you desire, undo either the strap with the carabiner, or the strap with the lock, from its lower "O" ring attachment.

Then, grab both backpack straps together near the leather grommet at the top of the bag, and pull them through the grommet cinching the bag tightly closed until the stainless steel grommet on each strap is exposed.



Wrap the loose (carabiner or lock) end of the strap around a fixed object, and secure it through the two stainless steel grommets using either the carabiner or the lock.