





In the event of an uneven drawer front, you can adjust the height of the box using the adjustable runners.

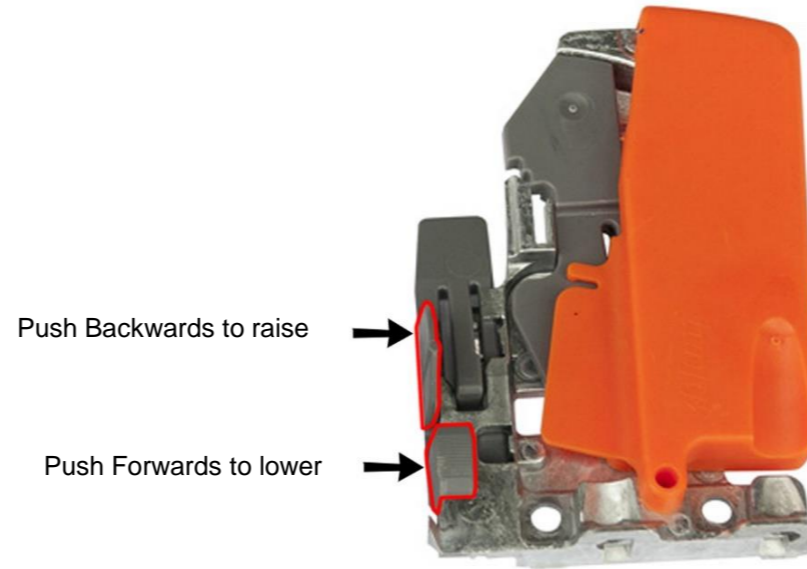

Underneath the box, there are orange clips either side. On these clips there are grey paddles that are used to raise and lower that side of the drawer front.

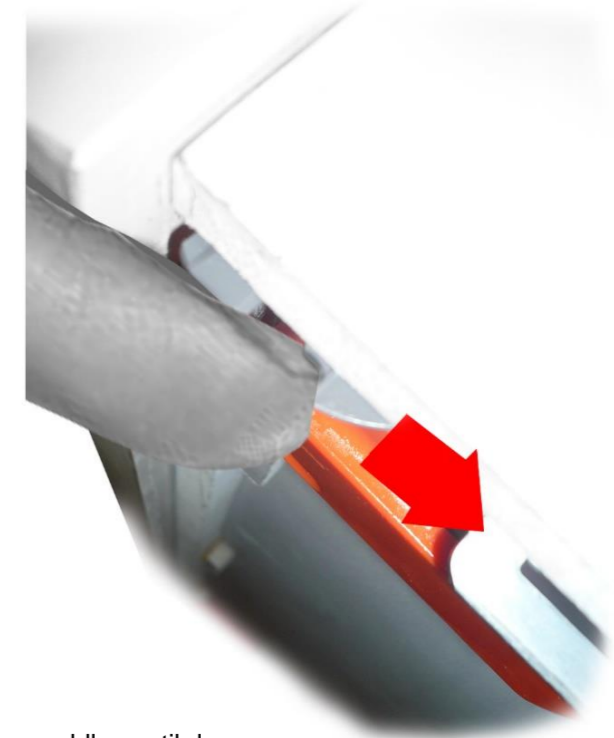

Adjust these grey paddles until drawer front is level. Gap on the drawer front should be even all the way around.

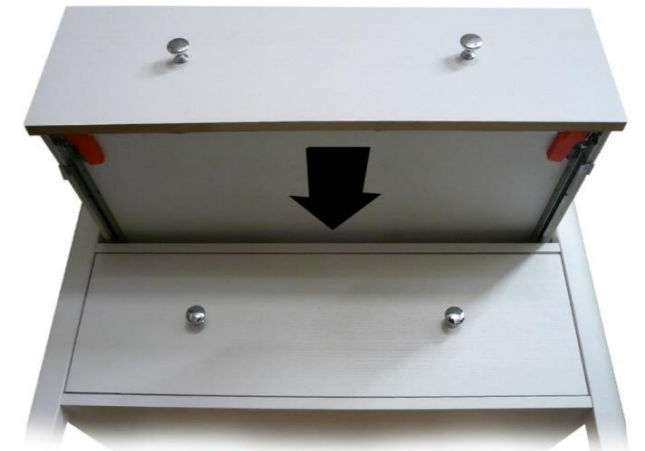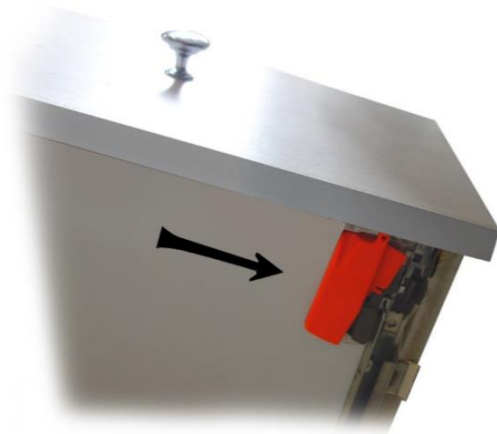

At any point you may need to remove the drawer box from the unit. To do this push the orange clips on the drawer box inwards and pull the box towards you and away from the drawer runners. The clips detach it from the runners and should slide out with ease.



To replace the drawer box, pull the runners out fully so they stick out of the unit. Then place the rear of the box onto the runners so that it is central and lined up the notches on the back of the drawer box.

Lastly drop the box onto the runners and push inwards to 'click' the runners onto the clips on the underneath of the drawer box. Closing the drawer shut should make sure the clips are fully in place and should now run smoothly.