

## ONE PIECE DRIVESHAFT MEASURING GUIDE

(574) 287-9650 | South Bend, IN www.ActionMachineInc.com


**ORDER YOUR DRIVESHAFT TODAY** 

USE THIS GUIDE TO MEASURE YOUR DRIVESHAFT LENGTH ON YOUR ONE PIECE DRIVESHAFTS WITH A YOKE SHAFT.

**Measure Instructions:** It is important to measure the driveshaft length when the vehicle's axle is in the normal riding position. The axle must be supported on safety stands - not hanging down.

## **TRANSFER CASE / TRANSMISSION**

**DIFFERENTIAL** 

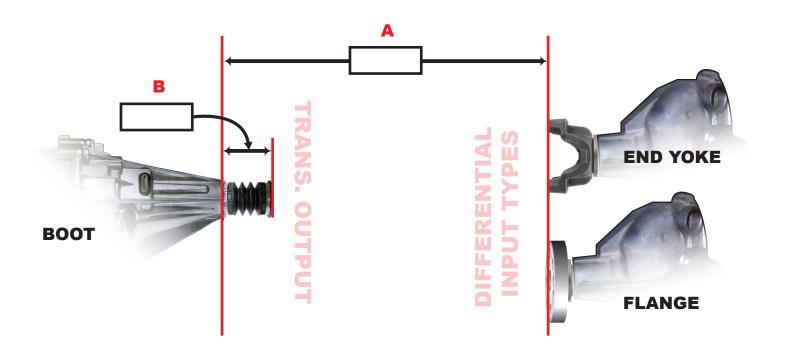

A	DRIVESHAFT LENGTH: Measure the rubber seal on the transfer case or transmission to the end yoke or flange face on the differential.	
B	<b>BOOT EXTRUSION LENGTH:</b> Measure the rubber seal on the transfer case or transmission to the end of the boot.	

**Boot:** Your transfer case or transmission should have a boot installed on it. If you are missing your boot consider adding replacement boot 40123472 (1410 Series) or 40021327 (3R Series) to your driveshaft order.