


ORDER YOUR DRIVESHAFT TODAY

USE THIS GUIDE TO MEASURE DRIVESHAFT LENGTH FOR MOST CARS, VANS, 2WD TRUCKS, AND SOME 4WD FRONT AND REAR SHAFTS.

Measure Instructions: It is important to measure the driveshaft length when the vehicle's axle is in the normal riding position. The axle must be supported on safety stands - not hanging down.

TRANSMISSION DIFFERENTIAL

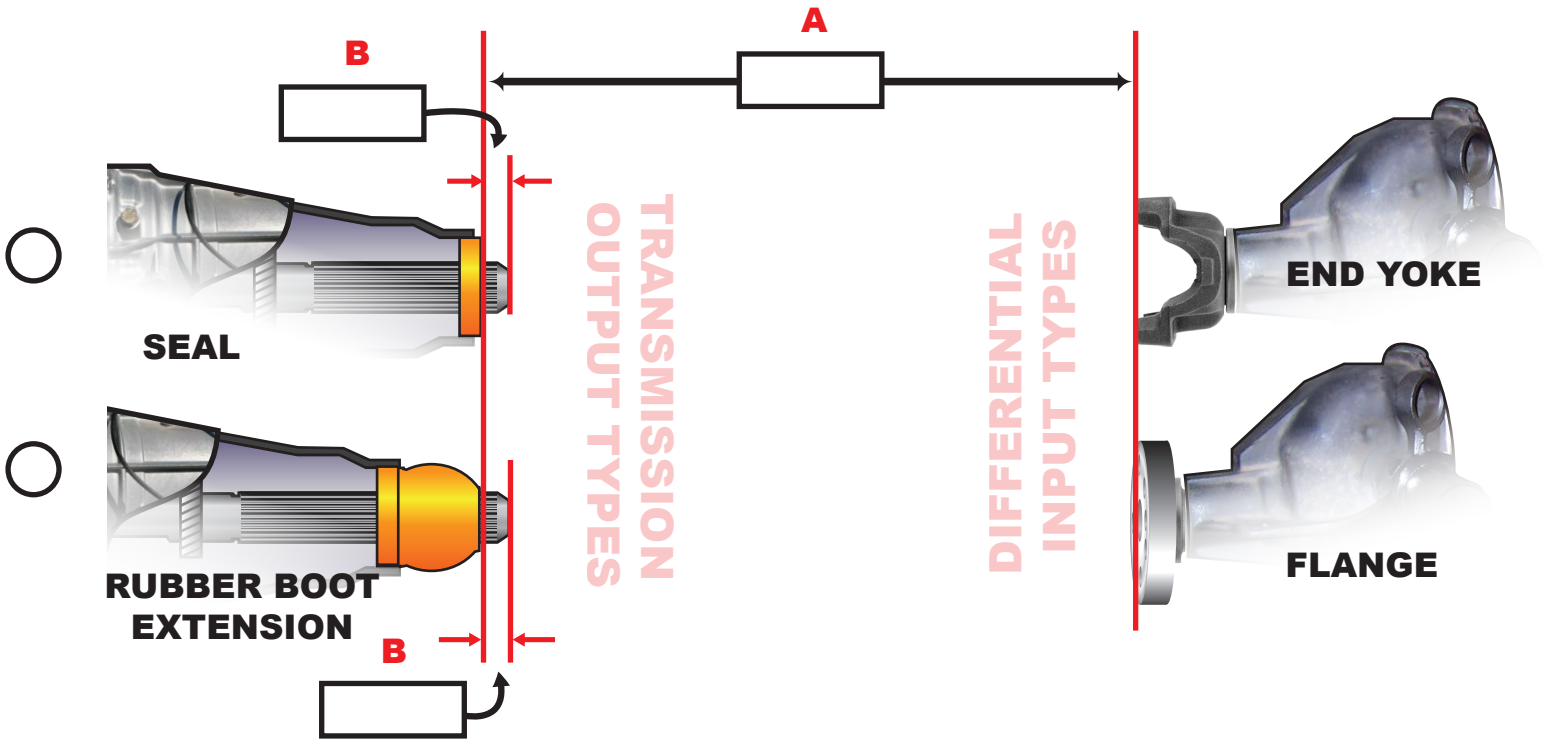

○ SEAL

A DRIVESHAFT LENGTH: Measure from end of rubber seal on the transmission to the end yoke or flange on the differential.

B SPLINE EXTRUSION LENGTH: Measure from end of rubber seal to end the of the transmission output/spline. If spline is recessed in rubber seal, enter \emptyset .

○ BOOT

A DRIVESHAFT LENGTH: Measure from end of rubber boot extension on the transmission to the end yoke or flange on the differential.

B SPLINE EXTRUSION LENGTH: Measure from end of rubber boot extension on the end of transmission output/spline. If spline is recessed in rubber boot extension, enter \emptyset .