

TROUBLESHOOTING

If the lantern does not turn on or works intermittently:

- Replace the batteries.
- Make sure the battery cap is twisted on tightly and batteries are inserted correctly according to the polarity (-,+) marked inside the battery compartment.
- Firmly press the power button on and off several times.

If light appears dim or faded:

- Replace the batteries.

If problem persists: LED Failure. Contact GearLight for replacement.

MAINTENANCE

Inspect the lantern monthly and carefully remove any damaged batteries and clean any corrosion. If the lantern is used less than once a month, remove the batteries between use.

WARRANTY AND LIMITATION OF LIABILITY

Limited One-Year Warranty

GearLight warrants this product for one year from the date of purchase against any defects in material or workmanship. This warranty does not cover normal wear and tear, nor damage resulting from misuse or neglect. We will, at our discretion, repair, replace, or refund the purchase price of this product should we determine it to be defective.

Limitation Of Liability

Liability limited to the purchase price of this product. GearLight shall not be liable for any incidental or consequential damages or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Version 1

GEARLIGHT

S1300 LED LANTERN

Operation Guide

FOR YOUR SAFETY, READ BEFORE OPERATING



Package Contents:

- 1x GearLight S1300 LED Lantern
- 1x Operation Guide
- 1x Warranty Card

WARNING: Do not shine the light directly into anyone's eyes or stare directly into the LED. Keep away from children.



GETTING STARTED

D Battery Installation


1. Remove the battery compartment cap by holding the lantern upside down and rotating the base counterclockwise.

TIP: Hold the black section of the lantern while removing the battery cap.

2. Insert three (3) D batteries following the correct polarity (+, -) marked inside the battery compartment.

3. Secure the battery compartment cap by aligning the 2 poles with the holes in the base (Fig. 1).

4. Press down firmly on the battery cap, then rotate clockwise to tighten.

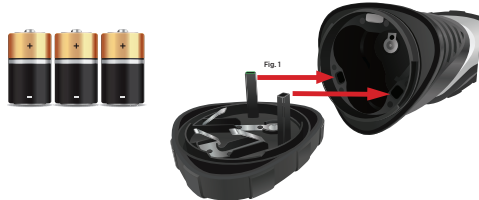

WARNING: Always follow the battery manufacturer's instructions as to the proper usage, handling, storage, and disposal of batteries. Use only batteries from a reputable manufacturer. Do not mix different brands or types of batteries in the same flashlight. Replace all batteries at the same time. Failure to follow safety instructions may result in personal injury and damage to property.


OPERATION

On/Off

- To turn the lantern on, press down firmly on the power button until you hear a click.
- To turn the lantern off, press the power button to cycle through the different modes until the lantern turns off.

Switching Modes

- There are 3 different lighting modes:
White Light Modes: Max Bright, Min Bright
Warm Light Mode: Medium
- To switch through the different lighting modes, press down on the power button to cycle through the 3 modes.

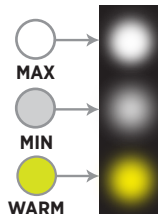

WARNING: Do not hang, hook, or attach the lantern directly above any person. It may fall and cause serious injuries.

FOLDAWAY HOOK

- Easily hang the lantern with the foldaway hook located at the base of the lantern.

