


10"
Radiance
RING LIGHT
BY GEARLIGHT

 
Do not operate unless you have read and understood the user manual.
If you have any questions, please contact us at Support@GearLight.com.

WHAT'S IN THE PACKAGE

PARTS & ACCESSORIES:

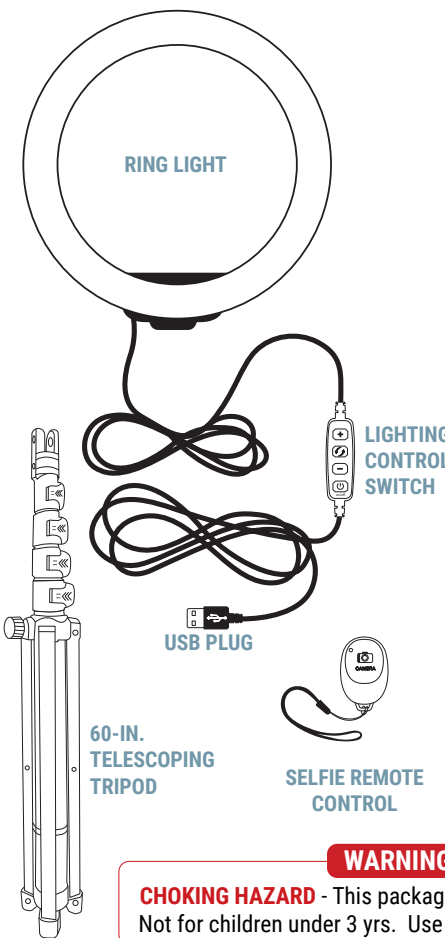


GOOSENECK PHONE HOLDER

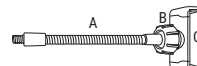


(A) Gooseneck
(B) Ring Screw
(C) Phone Holder

RING LIGHT SWIVEL MOUNT PLATFORM

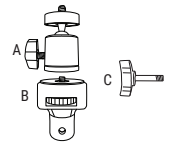

(A) Swivel Mount
(B) Tripod Platform
(C) Knob Screw

 CLIP-ON PHONE HOLDER

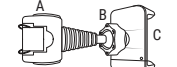

(A) Pole Mount Arm
(B) Ring Screw
(C) Phone Holder

WARNING

CHOKING HAZARD - This package contains small parts.
Not for children under 3 yrs. Use with adult supervision.

GETTING STARTED

Setting up the Tripod

- 1 Loosen the leg screw by turning counter-clockwise (Fig. 1). Do not completely detach the leg screw.
- 2 Alternate pulling each leg away from the center (Figs. 2a, 2b, 2c), while pushing the collar down to the O-ring and spacer (Fig. 3).
- 3 Once the collar is pushed down to the O-ring and spacer, tighten the leg screw by turning clockwise until the legs are secure (Fig. 4).

Adjusting the Tripod Height

- 1 Unlock the buckle (Fig. 5).
- 2 Extend to desired height (Fig. 6).
- 3 Lock the buckle to secure (Fig. 7).

TRIPOD TIPS

- Ensure the tripod legs are fully extended before use.
- Do not use the tripod on uneven or sloped ground—it will be less stable.

GETTING STARTED CONTINUED

Attaching the Ring Light to the Tripod

- 1 Screw the **swivel mount** to the bottom of the ring light (Fig. 8).
- 2 Screw the **tripod platform** to the base of the swivel mount (Fig. 9). Ensure the **thumb wheel** (Fig. 10) is fully tightened.
- 3 Align the hole in the **tripod platform** with the holes in the top of the tripod (Fig. 11) and secure with the **knob screw** (Fig. 12).

PLEASE NOTE THAT THE HEXAGON NUT MAY FALL OUT DURING INSTALLATION (FIG 13). AN EXTRA HEXAGON NUT IS INCLUDED IN THE PACKAGING. SHOULD YOU NEED MORE, CONTACT US.


Attaching the Clip-on Phone Holder

- 1 Open the pole mount arm by releasing the latch (Fig. 14).
- 2 Clamp the pole mount arm around the tripod pole (Fig. 15).
- 3 Close the latch (Fig. 16) to secure the phone holder in place.

NOTE: If you cannot latch the phone holder clamp, select a higher attachment point (Fig. 17, 18) until it can securely latch.


GETTING STARTED CONTINUED

Connecting the Gooseneck Phone Holder to the Tripod

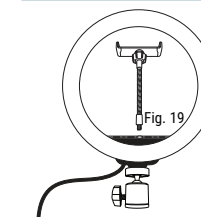

- 1 Twist the gooseneck's threaded end into the threaded hole in the ring light interior (Fig. 19) until firmly secured. Secure the gooseneck but do not over-tighten.
- 2 Bend the gooseneck to the desired viewing angle and direction.

Attaching a Mobile Phone to Phone Holder Attachments

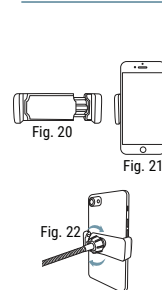

- 1 Gently pull apart the phone holder arm clamp (Fig. 20) and slide your mobile phone into the slot (Fig. 21), ensuring the arm clamp secures it in place.
- 2 Adjust the phone holder to desired position.
- 3 Secure the position by turning the ring screw clockwise (Fig. 22).

TROUBLESHOOTING

- If your mobile phone does not fit either of the phone holder attachments, contact us for a larger phone mount.
- During installation, the hexagon nut may fall out of the tripod. An extra hexagon nut is included in the packaging. If you need an additional hexagon nut, contact us.
- It is not recommended to bend the gooseneck phone holder entirely. Doing so may cause instability and imbalance.
- If the ring light is not staying securely in place, tighten the ring light connection to the swivel mount and platform.
- Contact us for any replacement parts.


GETTING STARTED CONTINUED

Setting Up the Selfie Remote

BEFORE SETUP, SLIDE OPEN THE BATTERY COMPARTMENT ON THE SELFIE REMOTE CONTROL AND REMOVE THE BATTERY FILM.

- 1 On the Selfie Remote move the ON/OFF switch to "ON" until the bluetooth LED indicator light flashes.
- 2 On your mobile device open Bluetooth settings and set to "pairing" or "discoverable" mode.
- 3 Find and pair with "AB Shutter3." This process should take 5-20 seconds.
- 4 Once paired, open the camera application on your mobile device.
- 5 Press the Camera button on the selfie remote to take a photo.

WARNING
Battery may cause serious injury or death if swallowed - keep away from children and pets.

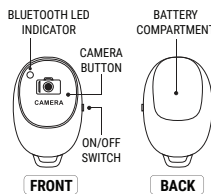

Replacing the Selfie Remote Battery

- 1 Slide open the battery compartment located on the back of the Selfie Remote.
- 2 Install one (1) CR2032 battery with the positive pole facing up.
- 3 Slide the battery compartment back into place.





TROUBLESHOOTING


- If your device does not connect to the Selfie Remote:
 - A. Toggle the Selfie Remote ON/OFF several times.
 - B. Toggle your mobile device's Bluetooth settings ON/OFF.
 - C. If no improvement, re-start your mobile device and repeat the process from the beginning.
 - D. If problem persists, replace the battery.
 - E. If the Selfie Remote still does not connect to your mobile device, contact us for a replacement Selfie Remote.
- While taking photos, the Selfie Remote may take a few seconds to reset after each photo. In this case, wait a few seconds, then press the camera button to take another photo.



OPERATIONS

Turning ON the Ring Light

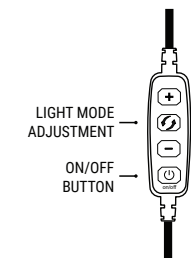

- 1 Connect the USB plug into a 5V, 2A (minimum) powered USB port, which may include a USB adapter, power bank, PC or laptop.
- 2 The ON/OFF button  will show a blue light when the USB cable is plugged into a powered USB port.
- 3 Press the ON/OFF button  on the control switch.


Switching Modes



- 1 Press the ON/OFF button .
- 2 There are 3 light modes:
 - White
 - Natural
 - Warm
- 3 Press the light mode adjustment  to switch through different modes.

Adjusting Brightness Setting

- 1 For each light mode, there are 10 levels of brightness.
- 2 Once you have chosen your desired light mode, press the  or  to adjust the brightness on the Ring Light.

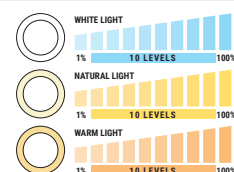


TROUBLESHOOTING

- If your ring light does not turn on:
 - A. Ensure the USB cable is plugged into a powered USB port.
- If your Ring Light flickers, is not bright, or emits an unstable light:
 - A. Connect to a USB port with at least 5V, 2 amps of power.
- If the blue controller light or the Ring Light does not turn on, possible LED failure. Contact GearLight for a replacement.

GETTING THE MOST OUT OF YOUR RING LIGHT



Ring Light Positioning Tips

- When setting up the tripod, point one tripod leg directly towards the subject. This increases stability when the Ring Light is tilted down, towards the subject.
- Why tilt the Ring Light down? When the light source is slightly tilted down, it mimics daylight and gives a more natural look. It also adds depth to the image and can hide some lines. On the other hand, a vertical Ring Light gives off a flat light, which tends to show more lines and can be less flattering.
- Direct light from the Ring Light often looks great already, but for an even softer feel try bouncing the light off a wall to create an extra soft light (a brighter ring light setting may be preferred).

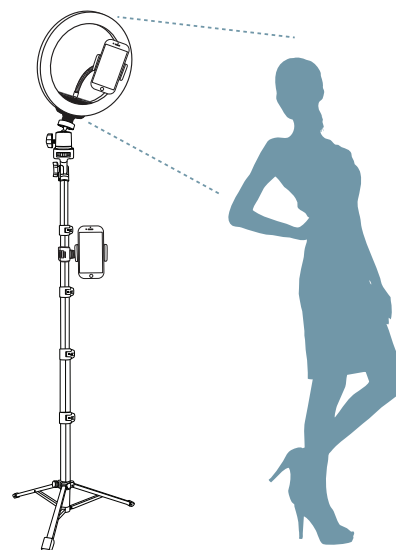

GETTING THE MOST OUT OF YOUR RING LIGHT CONTINUED

Color Temperature Guide

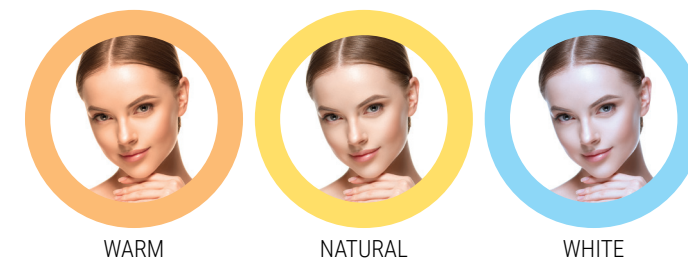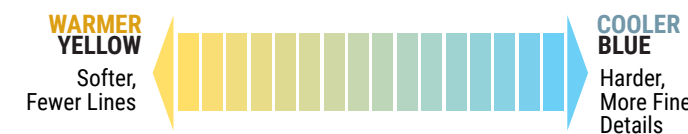

Other Uses for the Radiance Ring Light

- Makeup Application
- Live Stream Social Media
- Green Screens (*move green screen close to subject for best results*)

MAINTENANCE & STORAGE

- When not in use, unplug the ring light and remove any mobile device(s) from the phone holder(s).
- Do not store the ring light in high humidity locations like bathrooms.
- Do not store the ring light in direct sunlight.
- To clean the ring light, wipe with a soft damp cloth.
- Do not use any harsh chemicals.
- Do not expose the ring light to water.

WARNING

Do not repair, disassemble, or modify the Ring Light.
Do not use if the Ring Light or USB cable is wet or damaged.
Do not expose the ring light to water.
Failure to follow safety instructions may result in personal injury and damage to property.

WARRANTY AND LIMITATION OF LIABILITY

Limited One-Year Warranty

GearLight warrants this product for one year from the date of purchase against any defects in material or workmanship. This warranty does not cover normal wear and tear, nor damage resulting from misuse or neglect. We will, at our discretion, repair, replace, or refund the purchase price of this product should we determine it to be defective.

Limitation Of Liability

Liability limited to the purchase price of this product. GearLight shall not be liable for any incidental or consequential damages or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



Irvine, California | USA | www.GearLight.com