

TROUBLESHOOTING

If the flashlight flickers, works intermittently, changes modes automatically, appears dim or faded, or does not turn on, check and verify that:

- The battery is fully inserted into the flashlight with the positive (+) end first.
- The flashlight's inner spring is firmly attached and not bent.
- The tail cap is twisted on tightly.

Firmly press the power button on and off several times:

- If the flashlight still does not turn on, replace the batteries.
- If the problem persists, contact GearLight for a replacement.

MAINTENANCE

Inspect the flashlight monthly and carefully remove any damaged batteries and clean any corrosion. If the flashlight is used less than once a month, remove the batteries between uses. Lubricate all threads and rubber O-rings with petroleum jelly twice yearly.

WARRANTY AND LIMITATION OF LIABILITY

Limited One-Year Warranty

GearLight warrants this product for one year from the date of purchase against any defects in material or workmanship. This warranty does not cover normal wear and tear, nor damage resulting from misuse or neglect. We will, at our discretion, repair, replace, or refund the purchase price of this product should we determine it to be defective.

Limitation Of Liability

Liability limited to the purchase price of this product. GearLight shall not be liable for any incidental or consequential damages or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

GEARLIGHT

M3 LED TACTICAL FLASHLIGHT

User Manual

FOR YOUR SAFETY, READ BEFORE OPERATING



IMPORTANT SAFETY NOTICE: Lithium-ion batteries are potentially hazardous and can present a fire, explosion, and burn hazard. By using lithium-ion batteries, the user assumes all risks associated with lithium-ion batteries. If you do not agree with these conditions, please use only alkaline or NiMH rechargeable batteries.

Package Contents:

- 2x GearLight M3 LED Tactical Flashlights
- 2x AA Batteries
- 1x User Manual
- 1x Warranty Card

WARNING: To avoid eye injury, do not stare directly into the light beam or shine the beam directly into anyone's eyes. This product is not designed, intended, or recommended for children or hazardous environments.



GETTING STARTED

NOTE: Remove and dispose of the plastic tabs on the batteries before use.

AA Battery Installation

1. Unfasten the tail cap.
2. Insert 1 AA battery with the positive (+) end first. Always install batteries with the positive (+) end facing the LED end and the negative (-) end facing the tail cap end of the flashlight.
3. Refasten the tail cap.



WARNING: Battery can explode or leak and cause injury if installed backwards, disassembled, charged, crushed, mixed with used or other battery types, or exposed to fire or extreme temperatures. Replace all batteries at the same time.

14500 3.7V Lithium-ion Rechargeable Battery Installation (See Warning)

1. Insert one 14500 battery inside the flashlight with the positive (+) end first.



WARNING: Lithium-ion batteries can present a fire, explosion, and burn hazard. Use only 14500 battery cells with a protection circuit produced by Panasonic, Sanyo, Sony, Samsung, or LG. Remove the battery when the flashlight is not in use. The use of other cell manufacturers or the failure to follow the battery manufacturer's safety instructions may result in fire, explosion, personal injury, and damage to property.


CAUTION: The flashlight may become warm or hot after extended periods of use at the highest setting. Select a lower setting when the flashlight is hot. This is typical for high-powered flashlights and does not cause damage to the flashlight.

OPERATIONS

WARNING: Remove the batteries if the flashlight is not working properly. Failure to do so may result in personal injury and damage to property.

On/Off

- To turn the flashlight on, press down firmly on the red power button located on the tail of the flashlight until you hear a click.
- To turn the flashlight off, press down firmly again until you hear a click.

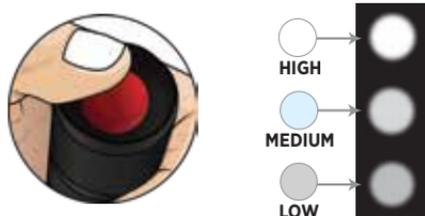

Switching Modes

- There are 3 different lighting modes. (High, Medium, Low)
- To switch through the different lighting modes, gently press down on the red power button to alternate through the 3 modes.
- The flashlight will switch to the next mode when turned off and on in quick succession. It will reset back to the highest mode after being off for more than 10 seconds.

Zoom

1. Hold both ends of the flashlight; gently twist and pull each end away from the other.
2. Pull the two ends away from each other to zoom in and push the two ends together to zoom out.

